




NON-SLIP

Face Mask Template 3 Sizes in 1

A fast way to cut out shaped, double layered **non-medical** face masks. This template makes a small, medium or large sized mask. Three size options are printed on the tool, and an optional pleat is included too!

#CGRFACE
Made in USA

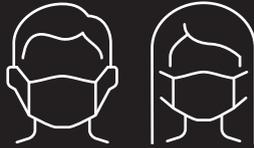

Creative Grids® USA, Inc.
400 W. Dussel Dr. Ste B,
Maumee, OH 43537
www.creativegridsUSA.com

Creative Grids® UK, Ltd.
Unit 23A Pate Road
Leicester Road Industrial Estate
Melton Mowbray
Leicestershire, LE13 0RG England
www.creativegrids.com



NON-SLIP

Face Mask Template 3 Sizes in 1

The Face Mask Template is a fast way to cut out shaped double layered face masks. Simply stack 2 coordinating fabric pieces – two times (with right sides together) and cut around the template with a rotary cutter. There will be a total of 4 pieces – an "outer set" and an "inner set".

This template also features pleat marks to give the mask a more custom fit after construction.

Suggested elastic sizes

Small 5" - 6"

Medium 6" - 7"

Large 7- $\frac{1}{2}$ " - 8- $\frac{1}{2}$ "


Suggested square fabric sizes

Small 5- $\frac{3}{4}$ "

Medium 6"


Large 6- $\frac{1}{2}$ "

1. Press your fabric so it is free from wrinkles.
2. Stack 4 pieces of quilting cotton (right sides together).
NOTE: Choose 2 coordinating fabrics - one for the inside of the mask (Fabric A) and one for the outside (Fabric B).

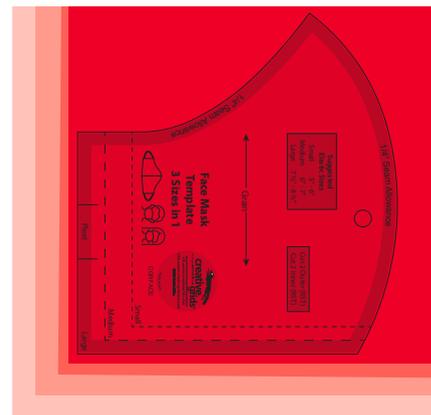


NON-SLIP Face Mask Template 3 Sizes in 1 cont.


- Rotary cut around the edges of the template. **Do not mark the pleat at this time.**
- Put Fabric A right sides together, matching up the edges and sew the center front curve with a $\frac{1}{4}$ " seam allowance.
- Repeat with Fabric B fabric.
- Clip the curve to the seam allowance, but not through it.** Open the newly joined units and press seams to one side. A Tailors Ham is very helpful.

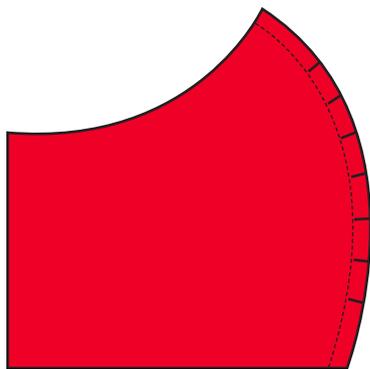


- Place newly joined Fabric A and Fabric B units right sides together, matching center seam and exterior edges. Using a $\frac{1}{4}$ " seam allowance, sew the right end side seam. Now sew the left side seam.
- Place one piece of elastic along the inside of the side seam flush with the top on either side of the mask.

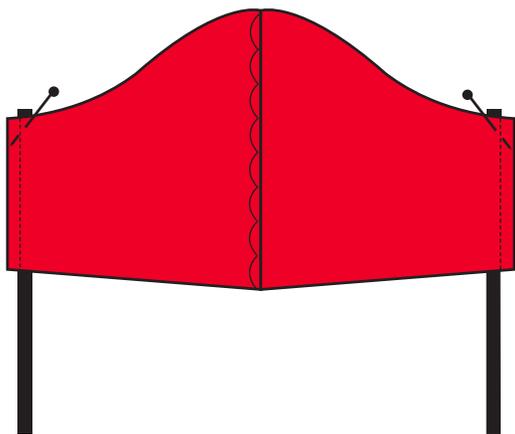

- Sew across the top with a $\frac{1}{4}$ " seam allowance securing the elastic in the seam. **Clip the curves to the seam allowance, but not through it.**
- Push the excess elastic up inside the mask at the bottom and repeat step 9, leaving an opening for turning.

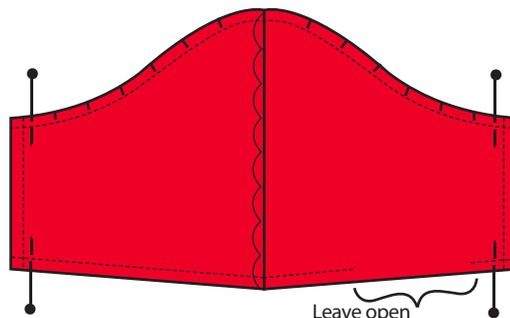

- Turn the mask right side out. Press.
- Should you decide to add a pleat, now is the time! Line up the side seam of the mask with the $\frac{1}{4}$ " sewing line of the template and mark the pleat.
- Bring the marked lines together and push the excess down on the outside of your mask. Tack to secure the pleat.

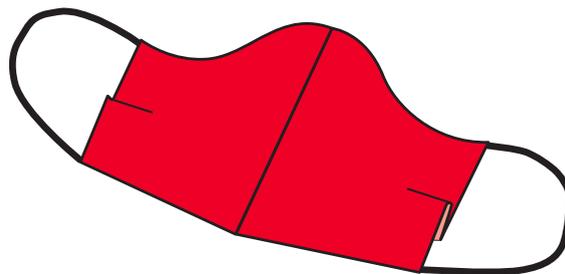

- Top-Stitch around the entire mask using a scant $\frac{1}{4}$ " seam.

CAUTION: Cloth face coverings should not be placed on young children under age 2, anyone who has trouble breathing, or is unconscious, incapacitated or otherwise unable to remove the mask without assistance.