


Slimline-Low Profile Keyboard Mechanism

Mounting Instructions

- 1) Mount track to underside of work surface.
 - A. Make sure track is mounted square to front edge of work surface.
 - B. Front edge of track should be approximately 1/2" back from front of work surface.
 - C. Drill (2) pilot holes for the center holes of track using .125" diameter x 5/8" deep in underside of work surface for #10 x 5/8" screws provided.
 - D. Drill (8) pilot holes for the side holes of track using .125" diameter x 5/8" deep in underside of work surface for #10 x 5/8" screws provided.
 - E. Install (8) #10 x 5/8" lg. screws provided along both sides of track and (1) #10 x 5/8" lg. back center screw with bumper.
- 2) Mount keyboard tray to articulating arm mechanism.
 - A. If using a supplied keyboard tray, fasten with supplied M5 x 0.8mm acorn nuts from the underside of the tray.
 - B. If using another keyboard tray:
 1. Lay tray face down.
 2. Tighten handle to snug tray bracket.
 3. Use tray bracket holes as a template for marking hole locations. Make sure tray is centered left to right. Back edge of tray bracket must be flush with back edge of tray.
 4. Drill .125" dia. Pilot holes (6) 1/2" deep using #10 x 5/8" screws (not included).
 5. Install screws.
- 3) Slide mechanism into grooves on track approximately 6".
- 4) Loosen knob and lower arm mechanism to down position. Retighten knob.
- 5) Slide mechanism into grooves on track until it hits back bumper stop.
- 6) Track guard must be installed to ensure product integrity.
- 7) Place track guard over end of track and mark (2) hole locations on work surface. Drill .125" dia. pilot holes 5/8" deep for #10 x 5/8" screws provided. Install track guard. **DO NOT OVERTIGHTEN.**

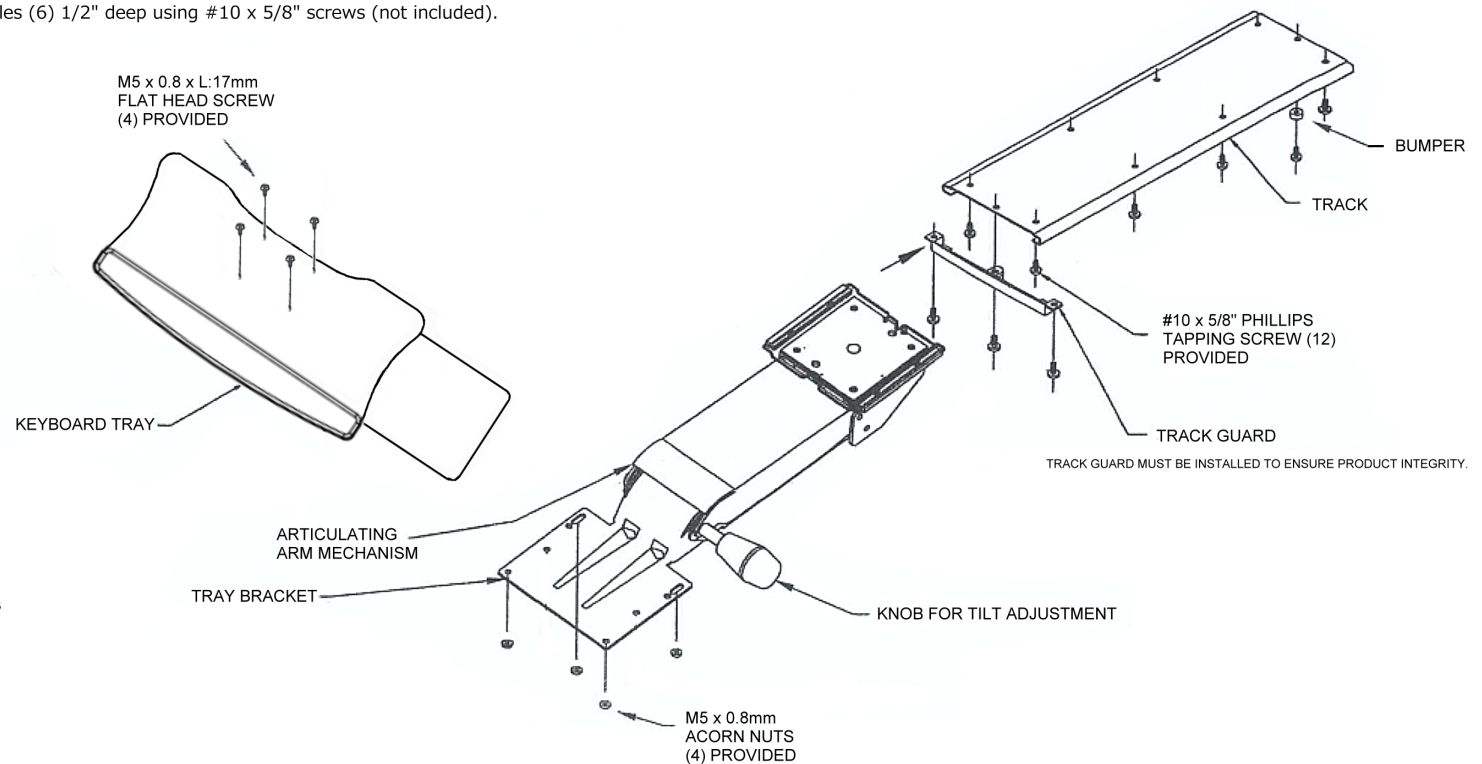

Parts List

- 1 - Articulating Arm Mechanism
- 1 - Track
- 1 - Keyboard Tray Set
- 1 - Instruction Sheet
- 1 - Accessory Pack. Including:
 - 12 - #10 x 5/8" Philips Tapping Screws
 - 1 - Bumper
 - 1 - Track Guard
- 1 - Accessory Pack. Including:
 - 4 - M5 x 0.8mm Acorn Nuts
 - 2 - Wire Clip