

## ***S3 Product line Computer Preventive Maintenance***

This procedure will provide instructions on performing preventive maintenance cleaning of the computer.

***It is recommended that this procedure is performed on a quarterly schedule to help maintain the highest level of computer performance.***

### **Tools required**

- Metric Allen set
- Phillips screwdriver #2
- Vacuum cleaner

1. Power off the bike and remove the power cord.
2. Remove the three button head screws down the center rib.



3. Remove the total of six (6) (three on each side) Phillip head screws from the side of the computer cover.




4. Remove the two Phillip screws on the back of the right cover.



5. With the hardware removed slide the shrouds off and place to the side. Wipe down the insides of the shrouds and then place all hardware in the shrouds.
6. Remove all dust from computer chassis and fan area by using a vacuum. To get the best air flow put the vacuum in reverse and blow out all dust from the interior of the computer.



7. Here is an example of a clean computer.

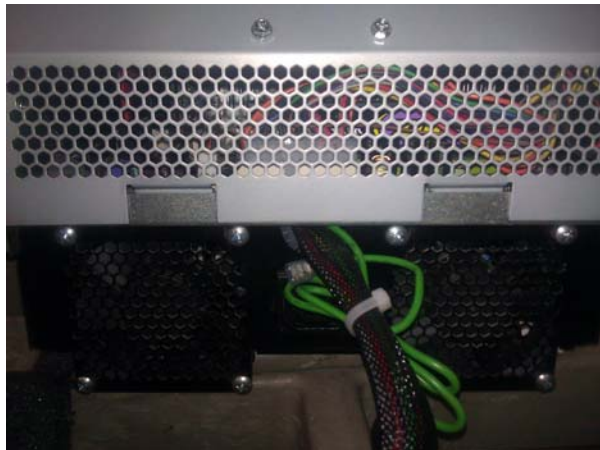

***If you have any questions contact IFH technical support at 888-528-8589 ext 2.***