

U11I Rugged Tablet Rotating Hand Strap

User's Manual



Package Contents

If any of following items is damaged, please contact your retailer.

Rotating hand strap



Bracket (4)



Screw (8)



NOTE

The pictures are for reference only, actual items may slightly differ.


Installation

This section will guide you on how to install the rotating hand strap of your tablet.


Installing the Rotating Hand Strap

To install the rotation hand strap, follow the steps below:


1. Remove the 2 thread bushings (A) at the bottom of the device.
2. Remove the screws of the bumpers; there are 10 screws in total.

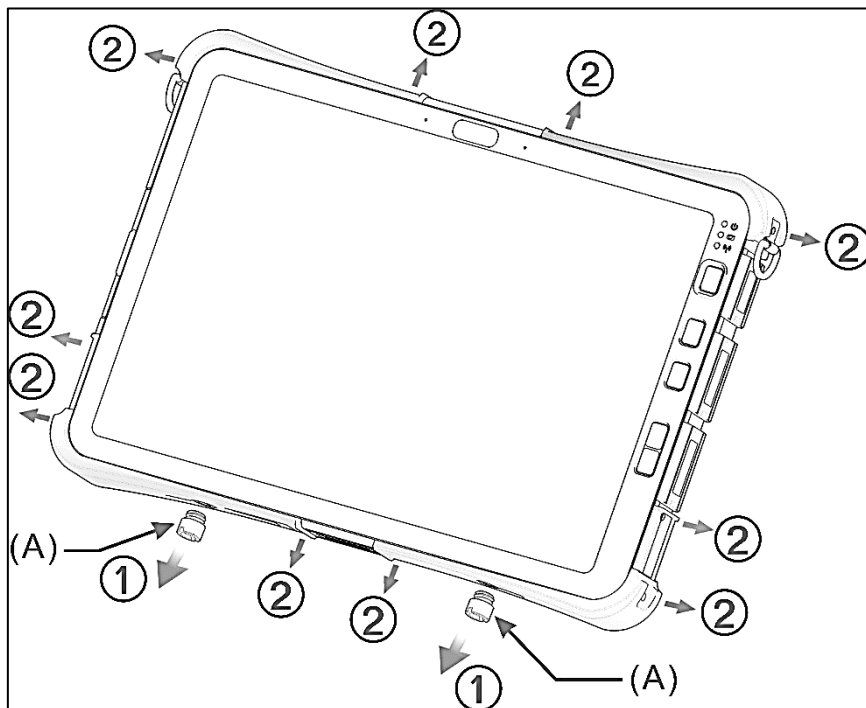


3. Remove the 4 bumpers by moving them to the side.

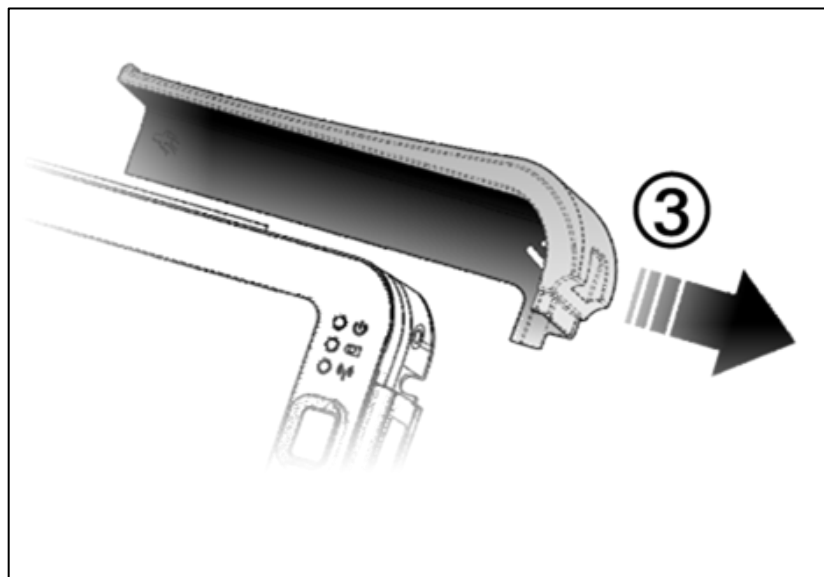



4. Install the brackets (B) as shown in the images.
5. Mount on the bracket with screws (comes with the package of rotating hand strap). Please repeat this procedure for the other bumpers.

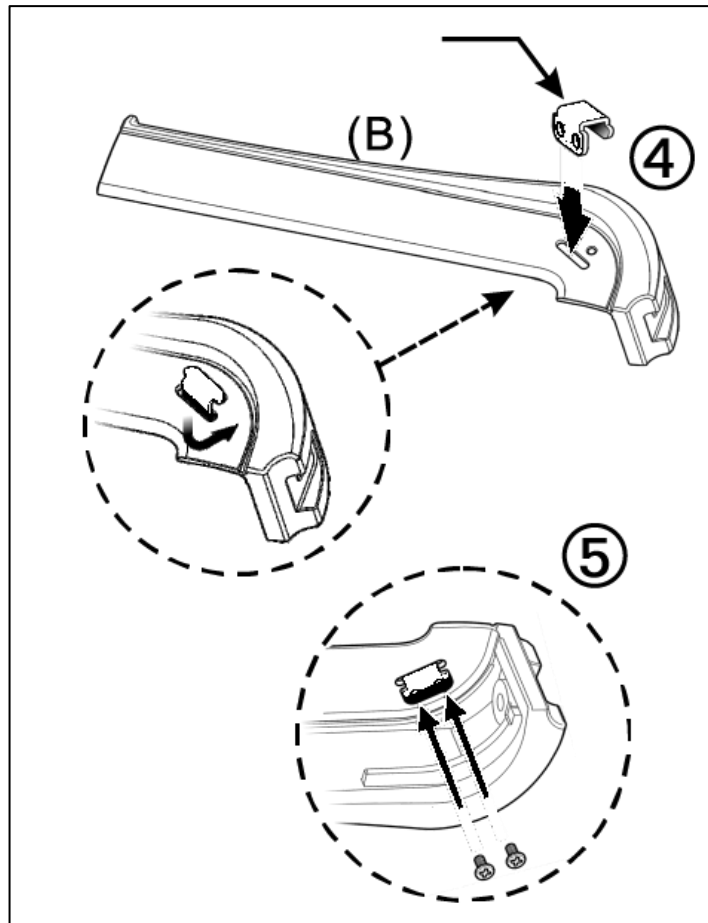

6. Install back the 4 bumpers.
7. Fix the bumper with screws. Please repeat this procedure for the other bumpers.

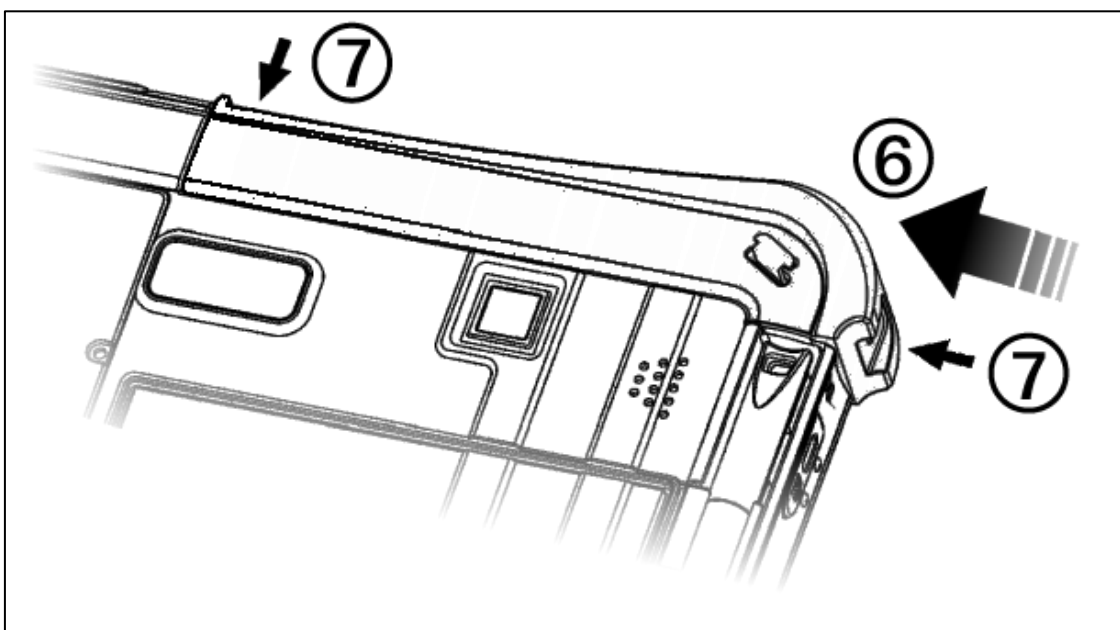

8. Buckle the steel loop (C) of rotating hand strap to the corner bracket, there are 4 places to buckle.
9. Adjust and tighten the strap.

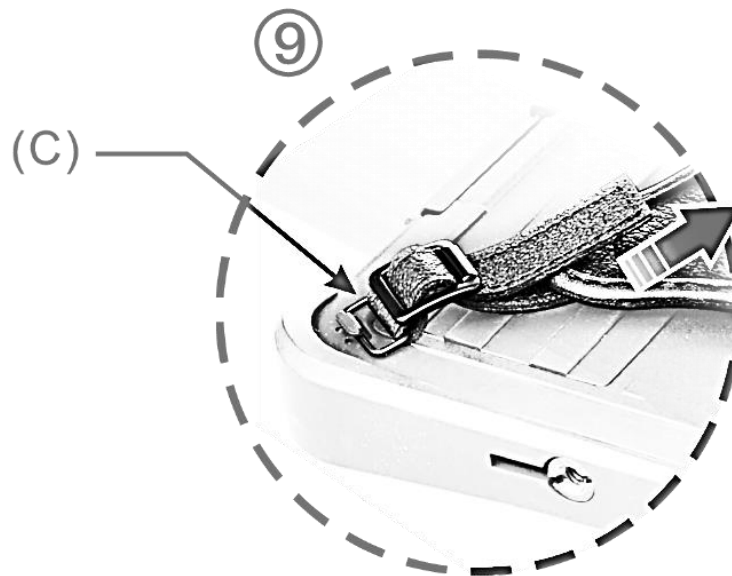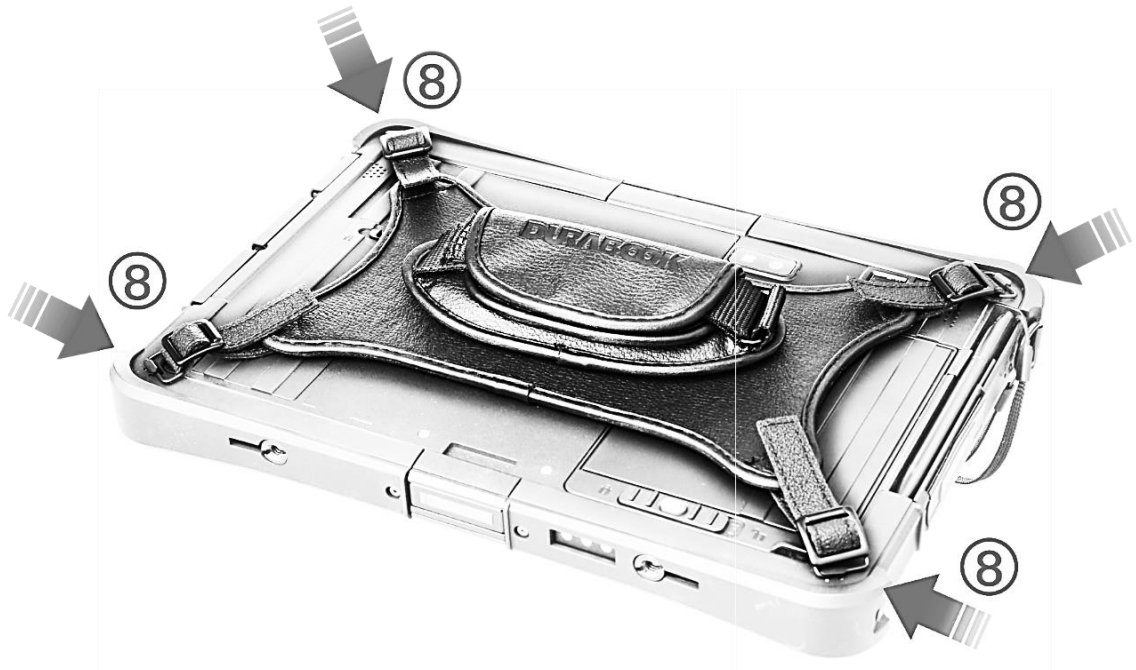

10. Insert your hand to (D) part of the rotating hand strap.
11. Fix the rotating hand strap firmly so that the tablet does not come off, and then turn it over.

