


Salice

→ Release Device

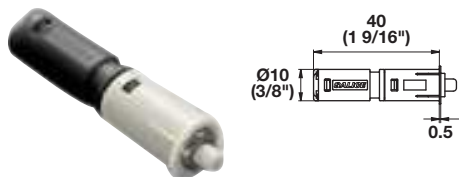


- > Material: Plastic

Color	Model	Item No.
beige	DPMSNB	356.06.462

Note
Order catch below.

→ Retaining Catch with Pin



- > Nail-on
- > Installation:
 - 1) Apply the retaining catch to the magnetic release device
 - 2) Close the door
 - 3) The point of the retaining catch will show where to insert it
 - 4) Reopen the door and press the retaining catch
- > Material: Steel

Finish	Model	Item No.
nickel-plated	DP28SN9	356.06.464

→ Adjustable Magnetic Catch



- > Inserts into the door
- > Increases holding power
- > Ideal for large heavy doors
- > Features depth adjustment
- > Ø x D: 15 x 11 mm (9/16" x 7/16")
- > Material: Housing: Plastic; Plate: Steel

Finish	Model	Item No.
gray	DP39XXG	356.06.466


→ Magnetic Device



- > For heavy doors
- > Magnetic device to be used to increase the magnetic holding strength
- > It must always be used together with the DPM (356.06.462)
- > The suggested position of the DPM is the point of pressure on the door
- > The DPA can be positioned at any point along the opening edge of the door
- > Material: Plastic

Color	Model	Item No.
beige	DPASNB	356.06.472

→ Magnetic PUSH Device Adapter

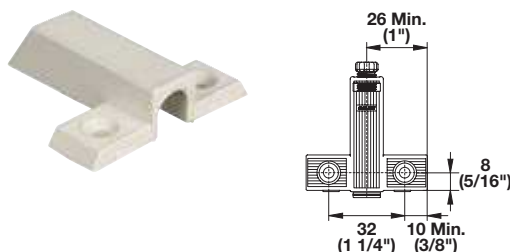

- > Surface mount with wood screws
- > Adjustable
- > Without lip
- > Material: Plastic

Color	Model	Item No.
white	DP84SNBR	356.06.420

→ Retaining Catch with Adhesive Strip



- > Adhesive backed
- > Material: Steel

Finish	Model	Item No.
nickel-plated	DP38XX91	356.06.465