

# RY36 KWIKSET TOOL

**Rytan**  
INCORPORATED

RY36 Kwikset Cylinder  
Removal Tool for "400" Series Knob Locks


The RY36 is used to quickly and effortlessly remove the locking cylinders from Kwikset's popular 400 series key-in-knob lock sets.

## INSTRUCTIONS

First remove the lock set from the door.

Observe the spindle extending out from the back of the key-in-knob assembly. To pull out the round spindle from the knob lock line up the tab on the round spindle with the slot and depress the retainer. Pull out the round spindle from the knob lock.

Insert the tip of the RY36 into the opening at the base of the knob lock where the lock's spindle has been removed. Slide the tool into the opening all the way.

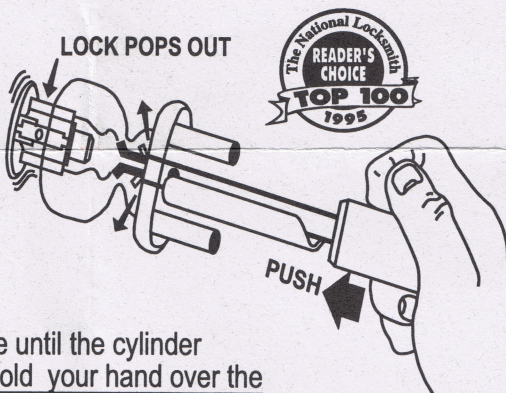

Push in on the tool's red handle until the cylinder pops out of the knob. Do not hold your hand over the face of the lock when trying to remove it from the knob.

Service the cylinder as required.

**Order RY36RB** for replacement blades.  
Replacement blades are available in packages of five.

**Rytan**  
INCORPORATED

455 Maple Avenue  
Torrance, CA 90503 U.S.A.  
(800) 447-9826 TEL  
(310) 212-6002 FAX

© Copyright Rytan, Inc. 1997

**MADE IN U.S.A.**