

Ligature Resistant Locks



Ligature Resistant Rx Series

TownSteel is pleased to introduce the most complete line of Ligature Resistant locks available today in the commercial contract hardware industry: ADA 5-Point Ligature Resistant Arched Mortise Lock (MRX-A), ADA Ligature Resistant Levered Mortise Lock (MRX-L), ADA 5-Point Ligature Resistant Arched Cylindrical Lock (CRX-A), Levered Cylindrical Lock (TRX-L), Standard configuration Ligature Resistant Conical Knob Mortise Lock (MRX-K), and Conical Knob Cylindrical Lock (CRX-K).





Contact us for more info.

Phone: 1-877-858-0888 Web: www.townsteel.com Email: sales@townsteel.com

Ligature Resistant Series Family

Grade 1 Mortise Lock -Lever











Grade 1 Mortise Lock -Knob







Grade 1 Cylindrical Lock -Lever









Grade 1 Cylindrical Lock -Knob



Grade 1 Deadbolt



Grade 1 Electrified Mortise Lock





MRX-A ANSI Grade 1 Morfise Lock with Ligature Resistant Trim-Arch



Specification


- For facilities housing patients in risk
- For 1-3/4" door thickness, other upon request
- 2-3/4" backset
- Handed
- US32D finish
- Stainless steel under plate,7-1/2" x 2-3/4" x 1/2"
- 5-point ligature resistant stainless steel arch lever
- Stainless steel turn piece, ligature resistant, ADA
- Stainless steel faceplate, 1-1/4" x 8"
- Stainless steel strike, ASA,1-1/4" x 4-7/8"
- Through-bolt mounting, tamper resistant mounting screws, for wood and metal door
- Brass cylinder with stainless steel cover, 6 pin, Schalge "C" keyway standard, 2 keys per cylinder
- Small Format IC available with or without core, 6 or 7 pin core
- Schlage Large Format IC available in less core
- Corbin Large Format IC available in less core, for 6 pin core
- High Security Cylinder available, TownSteel "L" keyway, 6pin
- High Security Small Format IC Core available, TownSteel " L" keyway, 7 pin
- 10 years limited warranty

Code Compliance

OMH Accepted by New York State Office of Mental Health Patient Safety Standard

ANSI/BHMA A156.13-2012 Grade 1 Certified

UL/ULC UL 10C listed 3-hour rating

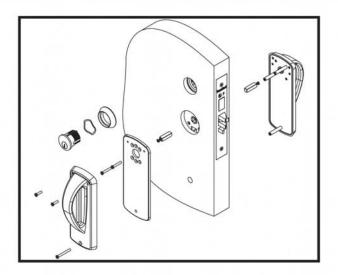

BAA Meets requirements of the Buy American Act ADA Meets requirements of the Americans with Disabilities Act











Trim	MRX-A Ligature Resistant Mortise Arch Trim			
Function	Please Refer to Function Sheet			
IC	IC Less Core (Optional, Specify when ordering)			
LH	Left Hand Door			
	ple Ligature Resistant Arch Trim	MRX-A-04-IC-LH		
2. 04: ANS	I F-04 function ——			
3 IC: Sma	Il format IC less core (Optional)		
J. IO. Office				


Important Note:

It is TownSteel's position that if any of our keyed locks are to be used less cylinder, whether I.C. or standard, and another manufacturer's cylinder is to be used in place of the TownSteel original manufacturer's cylinder, that a sample of that product be provided to TownSteel in advance for testing.

MRX-L ANSI Grade 1 Morfise Lock with Ligature Resistant Trim-Lever





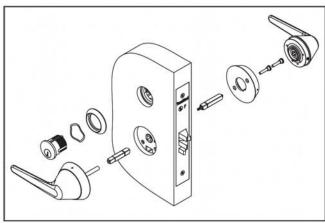

Specification

- For facilities housing patient at risk
- For 1-3/4" door thickness, other upon request
- 2-3/4" backset
- Handed, field reversible
- US32D finish
- Stainless steel rose (MRX-S-L), 2-3/4" in diameter
- Stainless steel escutcheon (MRX-E-L), 8" x 3-1/4"x1/8"
- Stainless steel lever, ligature resistant
- Stainless steel turn piece, ligature resistant, ADA
- Stainless steel faceplate, 1-1/4" x 8"
- Stainless steel strike, ASA, 1-1/4" x 4-7/8"
- Through-bolt mounting, tamper resistant mounting screws, for wood and metal door
- Brass cylinder with stainless steel cover, 6pin, Schalge "C" keyway standard, 2 keys per cylinder
- Small Format IC available with or without core, 6 or 7pin core
- Schlage Large Format IC available in less core
- Corbin Large Format IC available in less core, for 6pin core
- High Security Cylinder available, TownSteel "L" keyway, 6pin
- High Security Small Format IC Core available, TownSteel "L" keyway, 7pin
- 10 years limited warranty

Code Compliance

OMH Accepted by New York State Office of

Mental Health Patient Safety Standard

ANSI/BHMA A156.13-2012 Grade 1 Certified UL/ULC UL 10C listed 3-hour rating

BAA Meets requirements of the Buy American Act
ADA Meets requirements of the Americans with
Disabilities Act










How To	o Order			
Trim	MRX-E-L Ligature Resistant Lever Mortise-Escutcheon Tri MRX-S-L Ligature Resistant Lever Mortise-Sectional Trim			
Function Please Refer to F		Function Sheet		
IC	IC Less Core (Optional, Specify when ordering)			
Exam	ple	MRX-E-L-04-IC		
1. Ligature Lever M Escutch				
2. Function	on			
3. IC (opt	ional) —			

Important Note:

It is TownSteel's position that if any of our keyed locks are to be used less cylinder, whether I.C. or standard, and another manufacturer's cylinder is to be used in place of the TownSteel original manufacturer's cylinder, that a sample of that product be provided to TownSteel in advance for testing.

MRX-K ANSI Grade 1 Mortise Lock with Ligature Resistant Trim-Knob



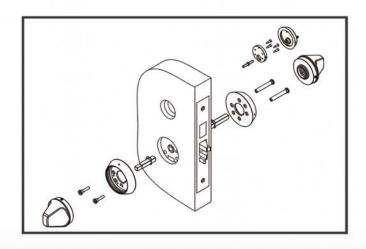

Specification

- For facilities housing patients at risk
- For 1-3/4" door thickness, other upon request
- 2-3/4" backset
- Handed, field reversible
- US32D finish
- Stainless steel rose (MRX-S-K), 2" in diameter
- Stainless steel escutcheon (MRX-E-K), 8" x 3-1/4" x 1/8"
- Stainless steel knob, ligature resistant
- Stainless steel turn piece
- Stainless steel faceplate, 1-1/4" x 8"
- Stainless steel strike, ASA, 1-1/4" x 4-7/8"
- Through-bolt mounting, tamper resistant mounting screws, for wood and metal door
- Brass cylinder with stainless steel cover, 6 pin, Schalge
 "C" keyway standard, 2 keys per cylinder
- Small Format IC available with or without core, 6 or 7 pin core
- Schlage Large Format IC available in less core
- Corbin Large Format IC available in less core, for 6 pin core
- High Security Cylinder available, TownSteel "L" keyway, 6 pin
- High Security Small Format IC Core available, TownSteel "L" keyway, 7 pin
- 10 years limited warranty

Code Compliance

ANSI/BHMA A156.13-2012 Grade 1 Certified UL/ULC UL 10C listed 3-hour rating

BAA Meets requirements of the Buy American Act





Trim	MRX-E-K Ligature Resistant Mortise-Escutcheon Trin MRX-S-L Ligature Resistant Mortise-Sectional Trim		
Function	Please Refer to	Function Sheet	
IC	IC Less Core (Optional, Specify when ordering)		
Exam	ple	MRX-E-K-04-IC	
1. Ligature Knob M Escutch			
2. Function	on		
3. IC (opt			

Important Note:

It is TownSteel's position that if any of our keyed locks are to be used less cylinder, whether I.C. or standard, and another manufacturer's cylinder is to be used in place of the TownSteel original manufacturer's cylinder, that a sample of that product be provided to TownSteel in advance for testing.

Ligature Resistant Mortise Series

Funct	tions			*Levers rotate up and down freely in the locked or unlocked positions
Outside Inside	Series/ Function	Туре	ANSI No.	Function Description
	MRXL-01 MRXK-01 MRXA-01	Passage or Closet	F01	Latch bolt operated by lever from either side at all times.
A	MRXL-02 MRXK-02 MRXA-02	Privacy or Bathroom	F02	Latch bolt operated by lever from either side. Dead bolt operated by turn from inside and emergency release from outside.
	MRXL-04 MRXK-04 MRXA-04	Entry/ Office	F04	Latch bolt operated by lever from either side, except when outside lever is made inoperative by a push button rocker. When outside lever is locked, latch bolt is retracted by key from outside or by operating inside lever. ***Auxiliary dead latch.
	MRXL-05 MRXK-05 MRXA-05	Classroom	F05	Latch bolt operated by lever from either side, except when outside lever is locked from outside by key. When outside lever is locked, latch bolt may be retracted by key, or by operating key and outside lever or by operating inside lever. ***Auxiliary dead latch.
	MRXL-07 MRXK-07 MRXA-07	Storeroom or Closet	F07	Latch bolt operated by key from outside or by rotating inside lever. Outside lever is always inoperative. ***Auxiliary dead latch.
A CONTRACTOR OF THE CONTRACTOR	MRXL-08 MRXK-08 MRXA-08	Front Door or Corridor Lock	F08	Latch bolt operated by lever from either side, except when outside lever is made inoperative by a push button rocker. Dead bolt is operated by turn inside. Key outside operates both bolts.
	MRXL-12 MRXK-12 MRXA-12	Dormitory or Exit	F12	Latch bolt operated by lever from either side, except when outside lever is made inoperative by a push button rocker. Dead bolt projected by key from outside and by turn from inside. Deadbolt retracted by key from outside and by turn from inside. Operating inside lever retracts both bolts and outside remains locked.
	MRXL-13 MRXK-13 MRXA-13	Dormitory or Exit	F13	Latch bolt operated by lever from either side. Dead bolt projected by key from outside and thumb turn from inside. Operating inside lever retracts both bolts and unlocks outside.

Ligature Resistant Mortise Series

*Levers rotate up and down freely in the locked or unlocked positions Functions. ANSI Series/ Outside Inside Type **Function Description** Function No. MRXL-14 Store Door F14 Latch bolt operated by lever from either side. Dead bolt operated by key from either side. MRXA-14 Lock Latch bolt operated by key from outside or by rotating inside lever. Outside lever MRXL-15 Hotel or is always inoperative. Dead bolt operated by thumb turn from inside and all keys F15 MRXK-15 except emergency and display key are shut out. Operating inside lever retracts both bolts. ***Auxiliary dead latch. Motel MRXA-15 MRXL-19 Latch bolt operated by lever from either side. Dead bolt operated by turn from Privacy or F19 inside and emergency release from outside. Operating inside lever retracts MRXK-19 Bathroom MRXA-19 both bolts. Latch bolt operated by lever from either side, except when outside lever is made inoperative by push button rocker. Dead bolt projected by key from outside and MRXL-20 Apartment/ by thumb turn from inside. Key outside operates both bolts. Operating inside lever MRXK-20 F20 retracts both bolts and outside remains locked. Latch bolt is deadlocked when Corridor MRXA-20 outside lever is made inoperative or when the dead bolt is projected. When dead bolt is retracted, lever is unlocked by stop or mechanical means other than key. MRXL-22 Latch bolt operated by lever from either side, except when outside lever is locked by MRXK-22 F22 Privacy inside turn. Operating inside lever, closing door or operating outside emergency MRXA-22 release unlocks outside lever. Latch bolt operated by lever from either side except when outside lever is locked by Institutional MRXL-26 turn inside. Latch bolt operated by key outside with override of turn inside when F26 MRXK-26 Privacy manually held in locked position. Operating inside lever or closing door unlocks outside lever. ***Auxiliary dead latch. MRXL-29 Classroom Key from outside operates dead bolt. Turn from inside retracts but does not project MRXK-29 F29 dead bolt. **Dead Lock** MRXA-29 Latch bolt operated by key either side. Both levers always inoperative. MRXK-30 Institutional F30 ***Auxiliary dead latch. MRXA-30


Ligature Resistant Mortise Series

Funct	ions.			*Levers rotate up and down freely in the locked or unlocked positions
Outside Inside	Series/ Function	Туре	ANSI No.	Function Description
	MRXL-32 MRXK-32 MRXA-32	Intruder Latch bolt	F32	Latch bolt operated by lever either side, except when outside lever is locked from inside or outside by key. When outside lever is locked, latch bolt is retracted by key from inside or outside or by operating inside lever. ***Auxiliary dead latch
	MRXL-33 MRXK-33 MRXA-33	Intruder Dead bolt	F33	Latch bolt operated by lever either side, except when outside lever is locked from inside or outside by key. Dead bolt operated by key either side. Inside lever retracts both bolts and unlocks outside lever.
	MRXL-34 MRXK-34 MRXA-34	Intruder Dead bolt	F34	Latch bolt operated by lever either side, except when outside lever is locked from inside or outside by key. Dead bolt operated by key either side. Operating inside lever retracts both bolts and unlocks outside. *** Auxiliary dead latch or latch bolt dead locked when dead bolt is thrown.
	MRXL-35 MRXK-35 MRXA-35	Storeroom with Dead bolt	F35	Latch bolt operated by lever from either side, except when outside lever is made inoperative by a push button rocker. Dead bolt operated by key from either side.
	MRXL-46 MRXK-46	Institutional Privacy with key locked feature		Latch bolt operated by lever from either side except when outside lever is locked by turn inside or key outside. Latch bolt operated by key outside with override of turn inside when manually held in locked position. Operating inside lever or closing door unlocks outside lever. ***Auxiliary dead latch.
	MRXL-RF MRXK-RF	Female Privacy RF		Latch bolt operated by lever from either side except when outside lever is locked from outside by key or inside turn. When outside lever is locked latch bolt may be retracted by inside lever or outside lever when unlocked by key. Inside lever retracts the latch bolt but does not unlock the outside lever.
	MRXL-LTF MRXK-LTF	Female Privacy LTF		Latch bolt operated by lever from either side except when outside lever is locked from outside by key or inside turn. When outside lever is locked latch bolt may be retracted by inside lever or outside lever when unlocked by key. Operating the inside lever or closing the door unlocks the outside lever.

CRX-A ANSI Grade 1 Cylindrical Lock with Ligature Resistant Trim-Arch





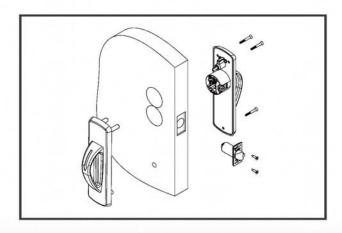

Specification

- ANSI Grade 1 heavy duty cylindrical with 5-point ligature resistant arch trim
- Backset 2-3/4"standard, 5" optional
- Door thickness: 1-3/4"-2",other upon request
- Stainless steel arch trim, 2-5/8" projection
- Stainless steel plate, 9-5/8" x 2-13/16"
- Stainless steel deadlocking latch bolt, 1/2"throw
- Stainless steel ASA strike standard
- Tamper resistant mounting screws
- Handed
- Schlage "C" keyway, brass 6 pin cylinder standard
- Best® Small Format I.C. available, 6 or 7 Pin, with or without core
- Schlage® Large Format I.C. less core available
- Corbin® Large Format I.C. less core available
- High security cylinder available, TownSteel "L" keyway,6 pin
- KD standard, KA, MK, GMK, GGMK and constructionkeying available
- Available functions: F-75, 76, 84, 86, Single Dummy (F-41), Pair Dummy(F-72)
- Door Prep: 161 plus 2-1/8" cylinder hole and ½" bottom post hole
- 10-year Manufacturer's Limited Warranty

Code Compliance

OMH Accepted by New York State Office of Mental Health Patient Safety Standard

ANSI/BHMA Complies with ANSI/BHMA A156.2-2011 Grade 1 UL/ULC UL 10C Listed 3-Hour Fire Rating

ADA Meets guidelines of The Americans with Disabilities Act

BAA Meets requirements of The Buy American Act












Series	CRX-A: Heavy Duty Ligature Resistant Cylindrical				
Function	ANSI F-75, 76, 84, 86, 41, 72				
Handing	LH, RH, LHR, RHR				
Cylinder/ Keying	Specify when ordering				
Exam		CRX-A-75-LH			
	A: Heavy Duty Ligat tant Cylindrical	ure			
2. 75: F-	75 Passage ———				
	eft Handed-				

Important Note:

It is TownSteel's position that if any of our keyed locks are to be used less cylinder, whether I.C. or standard, and another manufacturer's cylinder is to be used in place of the TowsnSteel original manufacturer's cylinder, that a sample of that product be provided to TownSteel in advance for testing.

TRX-L ANSI Grade 1 Cylindrical Lock with Ligature Resistant Trim-Lever



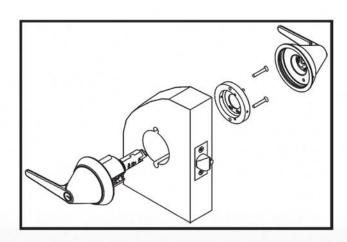

Specification

- For facilities housing patients at risk
- For door thickness 1-3/4"-2"
- 2-3/4" backset standard, 5" optional
- Non-handed
- Refer to function sheet for available functions
- US32D finish
- Stainless steel rose, 3-5/8" in diameter
- Stainless steel lever, ligature resistant
- Stainless steel faceplate, 1-1/8"x 2-1/4"
- Stainless steel strike, ASA, 1-1/4"X4-7/8"
- Through-bolt mounting, tamper resistant mounting screws, for wood and metal door
- Brass cylinder with stainless steel cover, 6 pin, Schalge "C" keyway standard, 2 keys per cylinder
- Small Format IC available with or without core, 6 or 7 pin core
- High Security Cylinder available, TownSteel "L" keyway, 6 pin
- High Security Small Format IC Core available, TownSteel " L" keyway, 7 pin
- 10 years limited warranty

Code Compliance

OMH Accepted by New York State Office of

Mental Health Patient Safty Standard

ANSI/BHMA A156.2-2011 Grade 1 Certified UL/ULC UL 10C listed 3-hour rating

BAA Meets requirements of the Buy American Act ADA Meets requirements of the Americans with Disabilities Act










Trim	TRX-L Ligature Resistant Lever Grade 1 Cylindrical Lo			
Function	Please Refer to Fu	unction Sheet		
IC	IC			
Exam	ple	TRX-L-81-IC		
	e Resistant Cylindrical			
3. IC (opt	ional)			

Important Note:

It is TownSteel's position that if any of our keyed locks are to be used less cylinder, whether I.C. or standard, and another manufacturer's cylinder is to be used in place of the TownSteel original manufacturer's cylinder, that a sample of that product be provided to TownSteel in advance for testing.

CRX-K ANSI Grade 1 Cylindrical Lock with Ligature Resistant Trim-Knob



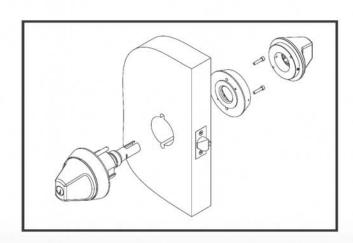

Specification

- For facilities housing patients at risk
- For door thickness 1-3/4"-2"
- 2-3/4" backset standard, 5" optional
- Non-handed
- Refer to Function Section for available functions
- US32D finish
- Stainless steel rose,4" in diameter
- Stainless steel knob, ligature resistant
- Stainless steel faceplate1-1/8"x 2-1/4"
- Stainless steel strike, ASA,1-1/4"X4-7/8"
- Through-bolt mounting, tamper resistant mounting screws, for wood and metal door
- Brass cylinder with stainless steel cover, 6 pin, Schalge "C" keyway standard, 2 keys per cylinder
- Small Format IC not available
- High Security Cylinder available, TownSteel "L" keyway, 6 pin
- 10 years limited warranty

Code Compliance

ANSI/BHMA Complies with ANSI/BHMA A156.2-2011


Grade 1

UL/ULC UL 10C listed 3-hour rating

BAA Meets requirements of the Buy American Act





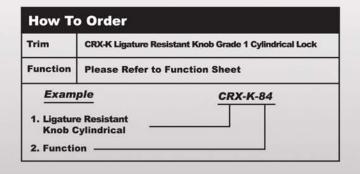

Important Note:


It is TownSteel's position that if any of our keyed locks are to be used less cylinder, whether I.C. or standard, and another manufacturer's cylinder is to be used in place of the TownSteel original manufacturer's cylinder, that a sample of that product be provided to TownSteel in advance for testing.

Ligature Resistant Cylindrical Series

Functions [.]				*Levers rotate up and down freely in the locked or unlocked positions
Outside Inside	Series/ Function	Туре	ANSI No.	Function Description
	CRXA-41	Single Dummy		Dummy trim on one side, blank plate on the other side.
	CRXA-72 CRXK-72 TRXL-72	Double Dummy	F72	Dummy trim on both sides.
	CRXA-75 CRXK-75 TRXL-75	Passage / Closet	F75	Latch bolt operated by lever or knob from either side at all times.
	CRXA-76 CRXK-76 TRXL-76	Privacy	F76	Latch bolt operated by lever or knob from either side. Outside lever or knob is locked by push button inside and unlocked by emergency release outside, operating inside lever or knob or closing door.
	CRXK-81	Entry / Office	F81	Turn/Push button locking. Pushing and turning button locks outside lever or knob requiring use of key until button is manually unlocked. Pushing button locks outside lever or knob until unlocked from outside by key or operating inside lever or knob. Dead locking latch bolt.
	CRXA-84 CRXK-84 TRXL-84	Classroom	F84	Deadlocking latch bolt operated by lever or knob from either side except when outside lever or knob is locked from outside by key. When outside lever or knob is locked, latch bolt is operated by key in outside lever or knob or operating inside lever or knob.
	CRXA-86 CRXK-86 TRXL-86	Storeroom	F86	Deadlocking latch bolt operated by key in outside lever or knob or operating inside lever or knob. Outside lever or knob is always non-active.
	CRXK-87 TRXL-87	Asylum	F87	Deadlocking latch bolt operated by key in lever or knob from either side. Both levers or knobs always non-active.
	TRXL-109	Entry/Office	F109	Dead locking latch bolt operated by lever from either side except when outside lever is locked by the push or turn button on inside. Key outside or operating inside lever releases push or turn button unlocking outside lever except when push or turn button has been rotated to keep outside lever locked. Inside push or turn button must be manually operated to unlock outside lever. Inside lever always operates latch bolt
	CRXK-110 TRXL-110	Classroom Intruder	F110	Deadlocking Latch bolt operated by knob from either side except when outside knob is locked from the inside or outside by key. When outside knob is locked latch bolt is operated by inside knob or unlocked by key in outside or inside knob.

DRX ANSI Grade 1 Morfse Deadbolf Lock with Ligature Resistant Thumb Turn



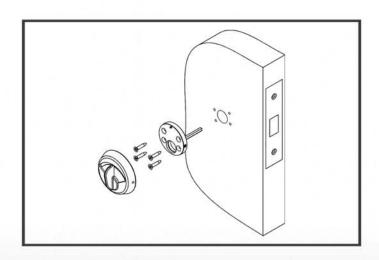

DRX Series- Heavy duty commercial quality deadbolt that provides a positive deterrent to forced entry. The health safety thumb turn design enhances opportunity to reduce accidents in health care facilities, detention centers and potential high risk areas. It is also designed to be an integral part of your Accident Prevention and Safety Program. Schlage C keyway, standard Small Format 6 or 7 pin Interchangeable Core (SFIC) available. 32D Finish. ADA Turn piece available

Trim	DRX Ligature Resistant Knob Deadbolt Lock		
Function	F09, F07, F18		
	Resistant	DRX-18	

DRX Functions


ANSI F09		Deadbolt operated by key from outside and turn from inside turn retracts but does not project deadbolt
ANSI F07		Deadbolt operated by key from outside and turn from inside
ANSI F18	A	Deadbolt operated by turn from inside only, no trim on other side

Important Note:

It is TownSteel's position that if any of our keyed locks are to be used less cylinder, whether I.C. or standard, and another manufacturer's cylinder is to be used in place of the TownSteel original manufacturer's cylinder, that a sample of that product be provided to TownSteel in advance for testing.

VRH Ligature Resistant Hook



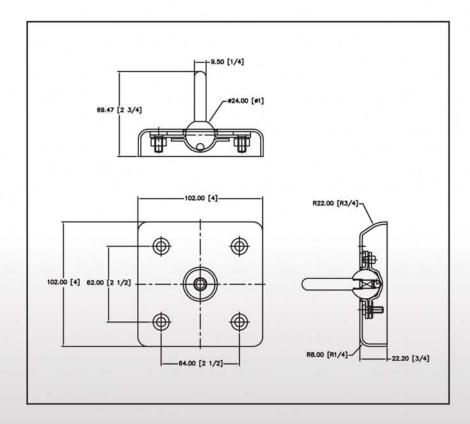

FEATURES

- Ideal for hospital, school and other institutions
- 14 gauge heavy duty 18-8, type-304 stainless steel backplate
- Stainless steel pivoting ball joint releases when over 10lbs of force applied
- Pivoting ball tension adjustable
- Surface mounted
- Furnished with tamper resistant #14 x 1 1/2" wood screws
- Available finish: Satin Stainless Steel (US32D)

TDS Ligature Resistant Door Switch

TDS Door Switch -Ligature Resistant Device for facilities housing patients at risk

Removable hinge section for easy servicing

Reduced catch points (provides coverage for vulnerable corner area).

Extruded aluminum header fastened on frame

Electrified hinge section factory-made to fit with switch, no cutting in field.

Anti-tamper screws.

Low profile stainless steel.

Switch activation at 1 lbs. nominal.


Reduced catch points.

BASIC MONIFEATURES

All wiring and alarm inp

Use of full surface continuous hinge to reduce pinch points.

Existing hinge pocket used as wire chase and retrofitted with filler plate.

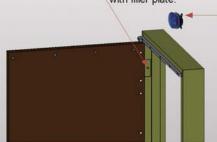

Strobe light placed above room door gives quick visual location.

Key switch with high security Medeco core deactivates and resets the alarm (remote keypad also available).

Key reset system at patient room assures patient safety.



Example of Basic Monitoring Keypad Console

BASIC MONITORING PANEL FEATURES

All wiring and alarm input/output devices are supervised to prevent tampering.

48 double door, 96 single door rooms available on single basic panel. Up to eight panels can be linked together to monitor a total of 384-788 rooms.

Keypad console audible indicator and two-line, 32 character LCD display alerts an alarm condition or system trouble at nurses' station.

Main panel provides an event log (history log) that can store up to 512 events.Logged events can be viewed on keypad console.

Keypad or laptop programmable.

Keypad "beep" walk test feature performed without triggering sirens and strobes.

Independently controlled notification devices (sirens) can be stationed in wings, floors and/or other designated areas of a facility.

Panel is UL, ULC, CSFM, FM, MEA.


NEW! Townsteel Door Switch

The TownSteel Door Switch is a patented design. (US Patent No.RE42,991)

For more information, please visit www.townsteel.com or call toll free at (877) 858-0888

XMRXA Electrified Ligature Resistant Mortise Lock



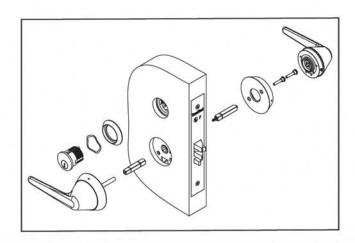

Mechanical Specification

- ANSI Grade 1 heavy duty mortise lock with 5-point ligature resistant arch trim
- Backset 2-3/4"
- Door thickness: 1-3/4" standard, other upon request
- Stainless steel arch trim
- Stainless steel latch bolt, split, anti-friction, 3/4" throw
- Stainless steel dead bolt, with anti-saw pins, 1" projection
- Stainless steel ADA thumb turn standard
- Stainless steel ANSI strike
- Tamper resistant stainless steel mounting screws
- Handed
- Schlage "C" keyway, brass 6 pin cylinder standard
- SFIC with or less core available, 6 or 7 pin core
- LFIC less core available
- Corbin® LFIC less core available
- High security cylinder available, TownSteel "L" keyway, 6 pin
- High security SFIC core available, TownSteel "L" keyway,
- KD, KA, MK, GMK, GGMK and construction keying available
- Available finish: US32D
- 10-year Manufacturer's Limited Warranty

Electrified Specification

- 24VDC or 12VDC
- Fail Safe or Fail Secure
- 3 Monitoring capabilities Request-For-Exit Door Position Latch Position

Code Compliance

ANSI/BHMA A156.13-2012 Grade 1 Certified UL/ULC UL 10C Listed 3-Hour Fire Rating **BAA** Meets requirements of The Buy American Act

ADA Meets requirement of The Americans with


Disabilities Act

Specify when ordering

LH, RH, LHR, RHR





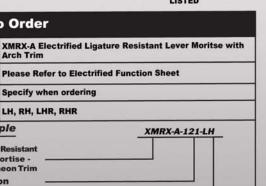

Important Note:

How To Order

Trim

Function

Keying/Cylinde

Handing


Example

1. Ligature Resistant

Lever Mortise Escutcheon Trim 2. Function

It is TownSteel's position that if any of our keyed locks are to be used less cylinder, whether I.C. or standard, and another manufacturer's cylinder is to be used in place of the TowsnSteel original manufacturer's cylinder, that a sample of that product be provided to TownSteel in advance for testing.

XMRXK Electrified Ligature Resistant Mortise Lock

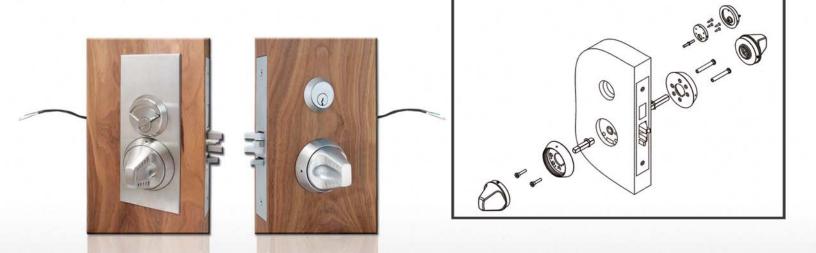

Mechanical Specification

- ANSI Grade 1 heavy duty mortise lock with ligature resistant safety knob trim
- Escutcheon (XMRX-E-K) or sectional (XMRX-S-K) trim set
- Backset 2-3/4"
- Door thickness: 1-3/4" standard, other upon request
- Stainless steel knob trim
- Stainless steel latch bolt, split, anti- friction, 3/4" throw
- Stainless steel dead bolt, with anti-saw pins, 1" projection
- Stainless steel thumb turn
- Stainless steel ANSI strike
- Tamper resistant stainless steel mounting screws
- Handing field reversible
- Schlage "C" keyway, brass 6 pin cylinder standard
- SFIC with or less core available, 6 or 7 pin core
- Schlage® LFIC less core available
- Corbin® LFIC less core available
- High security cylinder available, TownSteel " L" keyway, 6 pin
- High security SFIC core available, TownSteel " L" keyway,7 pin
- Keyed Different standard, KA, MK, GMK, GGMK and construction keying available
- Available finish: US32D
- 10-year Manufacturer's Limited Warranty

Electrified Specification

- 24VDC or 12VDC
- Fail Safe or Fail Secure
- 3 Monitoring capabilities Request- to-Exit Door Position Latch Position

Code Compliance

ANSI/BHMA A156.13-2012 Grade 1 Certified UL/ULC UL 10C Listed 3-Hour Fire Rating

BAA Meets requirements of The Buy American Act





Trim	XMRX-E-K Electrified Ligature Resistant Mortise - Escutcheon Trim with Knob XMRX-S-K Electrified Ligature Resistant Mortise - Sectional Trim with Knob				
Function	Please Refer to El	ectrified Functi	on Sheet		
Keying/Cylinder	Specify when orde	ering			
Handing	LH, RH, LHR, RHR	į.			
Exam	ple		XMRX-E-K-121-LH		
	Resistant Nortise - ———— heon Trim				
2. Functi	on ——				
3. LH					

Important Note:

It is TownSteel's position that if any of our keyed locks are to be used less cylinder, whether I.C. or standard, and another manufacturer's cylinder is to be used in place of the TownSteel's original manufacturer's cylinder, that a sample of that product be provided to TownSteel in advance for testing.

Electrified Mortise Lock Function Sheet

Funct	ions	in .		
Outside Inside	Series/ Function	Туре	ANSI No.	Function Description
4	121	12VDC Fail Safe, 3-position monitoring	N/A	12VDC voltage, fail safe, Monitors Request-to-Exit, Door Position Status and Latch Position Status. Latch bolt is operated by lever from either side when no power is supplied. Powering unit locks outside lever. When locked, latch bolt can be retracted by key. Auxiliary latch bolt.
	122	12VDC Fail Secure 3-position monitoring	N/A	12VDC voltage, fail secure, Monitors Request-to-Exit, Door Position Status and Latch Position Status. Powered unit latch bolt is operated by lever from either side. When no power is applied outside lever is locked. When locked, latch bolt can be retracted by key. Auxiliary latch bolt.
	121DB	12VDC Fail Safe Dead Bolt RQE	N/A	12VDC voltage, fail safe, with Dead Bolt, Monitors Request-to-Exit. Latch bolt is operated by lever from either side when no power is supplied. Powering unit locks outside lever. Dead bolt can be operated from outside with key and inside by thumb turn. When locked, latch bolt can be retracted by key. Rotating inside lever retracts both bolts. Auxiliary latch bolt.
	122DB	12VDC Fail Secure Dead Bolt RQE	N/A	12VDC voltage, fail secure, with Dead Bolt, Monitors Request-to-Exit. Powered unit latch bolt is operated by lever from either side. When no power is applied outside lever is locked. Dead bolt can be operated from outside with key and inside by thumb turn. When locked, latch bolt can be retracted by key. Rotating inside lever retracts both bolts. Auxiliary latch bolt.
	121DC	12VDC Fail Safe Dead Bolt RQE	N/A	12VDC voltage, fail safe, with Dead Bolt, Monitors Request-to-Exit. Latch bolt is operated by lever from either side when no power is supplied. Powering unit locks outside lever. Dead bolt can be operated from inside and outside with key. When locked, latch bolt can be retracted by key. Rotating inside lever retracts both bolts. Auxiliary latch bolt.
	122DC	12VDC Fail Secure Dead Bolt RQE	N/A	12VDC voltage, fail secure, with Dead Bolt, Monitors Request-to-Exit. Powered unit latch bolt is operated by lever from either side. When no power is applied outside lever is locked. Dead bolt can be operated from inside and outside with key. When locked, latch bolt can be retracted by key. Rotating inside lever retracts both bolts. Auxiliary latch bolt.
	121RQE	12VDC Fail Safe RQE	N/A	12VDC voltage, fail safe, Monitors Request-to-Exit. Latch bolt is operated by lever form either side when no power is supplier. Powering unit locks outside lever. When locked, latch bolt can be retracted by key from outside. Auxiliary latch bolt.
	122RQE	12VDC Fail Secure RQE	N/A	12VDC voltage, fail secure, Monitors Request-to-Exit. Powered unit latch bolt is operated by lever from either side. When no power is applied, outside lever is locked. When locked, latch bolt can be retracted by key from outside. Auxiliary latch bolt.

Electrified Mortise Lock Function Sheet

Funct	ions	•		
Outside Inside	Series/ Function	Туре	ANSI No.	Function Description
	(241)	24VDC Fail Safe 3-position monitoring	N/A	24VDC, fail safe, Monitors Request-to-Exit, Door Position Status and Latch Position Status. Latch bolt is operated by lever from either side when no power is supplied. Powering unit locks outside lever. When locked, the latch bolt can be retracted by key. Auxiliary latch bolt.
	242	24VDC Fail Secure 3-position monitoring	N/A	24VDC, fail secure, Monitors Request-to-Exit, Door Position Status and Latch Position Status. Powered unit latch bolt is operated by lever from either side. When no power is applied outside lever is locked. When locked, latch bolt can be retracted by key. Auxiliary latch bolt.
	241DB	24VDC Fail Safe Dead Bolt RQE	N/A	24VDC voltage, fail safe, with Dead Bolt, Monitors Request-to-Exit. Latch bolt is operated by lever from either side when no power is supplied. Powering unit locks outside lever. Dead bolt can be operated from outside with key and inside by thumb turn. When locked, latch bolt can be retracted by key. Rotating inside lever retracts both bolts. Auxiliary latch bolt.
	242DB	24VDC Fail Secure Dead Bolt RQE	N/A	24VDC voltage, fail secure, with Dead Bolt, Monitors Request-to-Exit. Powered unit latch bolt is operated by lever from either side. When no power is applied outside lever is locked. Dead bolt can be operated from outside with key and inside by thumb turn. When locked, latch bolt can be retracted by key. Rotating inside lever retracts both bolts. Auxiliary latch bolt.
	241DC	24VDC Fail Safe Dead Bolt RQE	N/A	24VDC voltage, fail safe, with Dead Bolt, Monitors Request-to-Exit. Latch bolt is operated by lever from either side when no power is supplied. Powering unit locks outside lever. Dead bolt can be operated from inside and outside with key. When locked, latch bolt can be retracted by key. Rotating inside lever retracts both bolts. Auxiliary latch bolt.
	242DC	24VDC Fail Secure Dead Bolt RQE	N/A	24VDC voltage, fail secure, with Dead Bolt, Monitors Request-to-Exit. Powered unit latch bolt is operated by lever from either side. When no power is applied outside lever is locked. Dead bolt can be operated from inside and outside with key. When locked, latch bolt can be retracted by key. Rotating inside lever retracts both bolts. Auxiliary latch bolt.
	241RQE	24VDC Fail Safe RQE	N/A	24VDC voltage, fail safe, Monitors Request-to-Exit. Latch bolt is operated by lever form either side when no power is supplier. Powering unit locks outside lever. When locked, latch bolt can be retracted by key from outside. Auxiliary latch bolt.
	242RQE	24VDC Fail Secure RQE	N/A	24VDC voltage, fail secure, Monitors Request-to-Exit. Powered unit latch bolt is operated by lever from either side. When no power is applied, outside lever is locked. When locked, latch bolt can be retracted by key from outside. Auxiliary latch bolt.

Ligature Resistant Project References



MRX-L

- VA Medical Center, Murfreesboro, TN
- VA Medical Center, Nashville, TN
- VA Medical Center, Marion, IL
- VA Medical Center, Salt Lake City, UT
- VA Medical Center, Dayton, OH
- VA Hospital, Tampa, FL
- Forest View Hospital, Wyoming, MI
- Kingbrook Jewish Medical Center, Brooklyn, NY
- Capistrano Care Facility, San Juan Capistrono, CA
- Eastern L.I. Hospital, Greenport, NY
- New York Presbyterian Hospital, New York, NY
- Summit Ridge Hospital, Lawrenceville, GA
- VA Hospital, Tucson, AZ
- First Judicial District, Waterloo, IA
- Navy Medical Center Mental Health Bldg., San Diego, CA
- MSJ ER Psych Eval., Ashville, NC
- North Star Hospital, Anchorage, AK Pima Hospital, Tucson, AZ
- Johns Hopkins Hospital, Baltimore, MD
- Holly Hill Hospital, Raleigh, NC
- Jacobi Medical Center, Bronx, NY
- Meadows Hospital, Centre Hall, PA



MRX-K

- VA Hospital, North Chicago, IL
- University of Maryland Medical Center, Baltimore, MD
- NYP Adolescent Separation, New York, NY
- Gustavus Adolphus Home Jamestown, NY



CRX-K

- Aurora Health Care, Wauwatosa, WI
- South Oaks Hospital, Long Island, NY
- Terre Haute Regional Hospital, Terre Haute, IN
- Oswego Hospital, Oswego, NY
- Research Psychiatric Center, Kansas City, MO
- West Central Georgia Regional Hospital, Columbus, GA
- Sentara Norfolk Hospital, Virginia Beach, VA
- KMC-Sycamore Hospital, Miamisburg, OH
- Long Island South Oaks Manor, Amityville, NY



DRX

- VA Central Alabama Medical Center, Montgomery, AL
- Charlotte Behavioral Health Care, Punta Gorda, FL



Other Ligature Resistant Products

- VA Medical Center, Marion, IL
- VA Medical Center, Murfreesboro, TN
- VA Medical Center, Jackson, MS
- Moberly Regional Hospital, Moberly, MO
- Dixie Regional Hospital, St. George, UT
- Fairfax Hospital, Falls Church, Virginia
- St. Elizabeth Medical Center, Youngstown, OH
- St. Joseph Medical Center, Towson, MD
- Carolina East Health Care, New Bertn, NC
- Northern Westchester Hospital, Mt. Kisco, NY
- Abington Hospital, Abington, PA
- Central State Hospital, Milledgeville, GA
- East Central Georgia Regional Hospital, Augusta, GA
- St. Mary's Hospital, Richmond, VA
- Larue D. Carter Memorial, Indianapolis, IN
- Hoboken Hospital, Hoboken, NJ
- Clarks Summit State Hospital, Clarks Summit, PA
- Memorial Hospital, Stillwell, OK
- Thomas B Finan Center, Cumberland, MD
- Balboa Hospital, San Diego, CA
- Capistrano Care Facility, San Juan Capistrono, CA
- Four Winds Hospital, Saratoga Springs NY
- Lutheran Social Services, Sioux Falls, SD Olean General Hospital, Olean, NY
- Kaiser Hospital, Los Angeles, CA
- Northwest GA Regional Hospital, Rome, GA
- Howard Community Hospital, Kokomo, IN Vanderbilt Hospital, Nashville, TN
- Friends Behavioural Health System, Philadelphia, PA
- Medical Center of McKinney & Wysong Campus, McKinney, TX
- Canyon Hills Center-Luth Social, Spearfish, SD
- Children's Hospital, Dallas, TX
- Sarasota Memorial Public Hospital, Sarasota, FL
- Lewis Gail Hospital, Salem, VA
- Nova House, Dayton, OH
- VA Hospital, Loma Linda, CA
- Harrisonburg-Rockingham Community Services Board, Harrisonburg, VA
- CPSA, Tucson, AZ
- Adventist Health, Rockville, MD
- North Memorial Med Center, Robbinsdale, MN
- Flushing Hospital Medical Center, Flushing, NY



17901 Railroad Street , City of Industry, CA 91748
Toll Free: 877-858-0888 | Tel: 626-965-8917 | Fax: 626-965-8919
Web: www.townsteel.com Email: sales@townsteel.com