


# How to Install and Use the Platform Extender on the Allegro Nextgen Reformer™

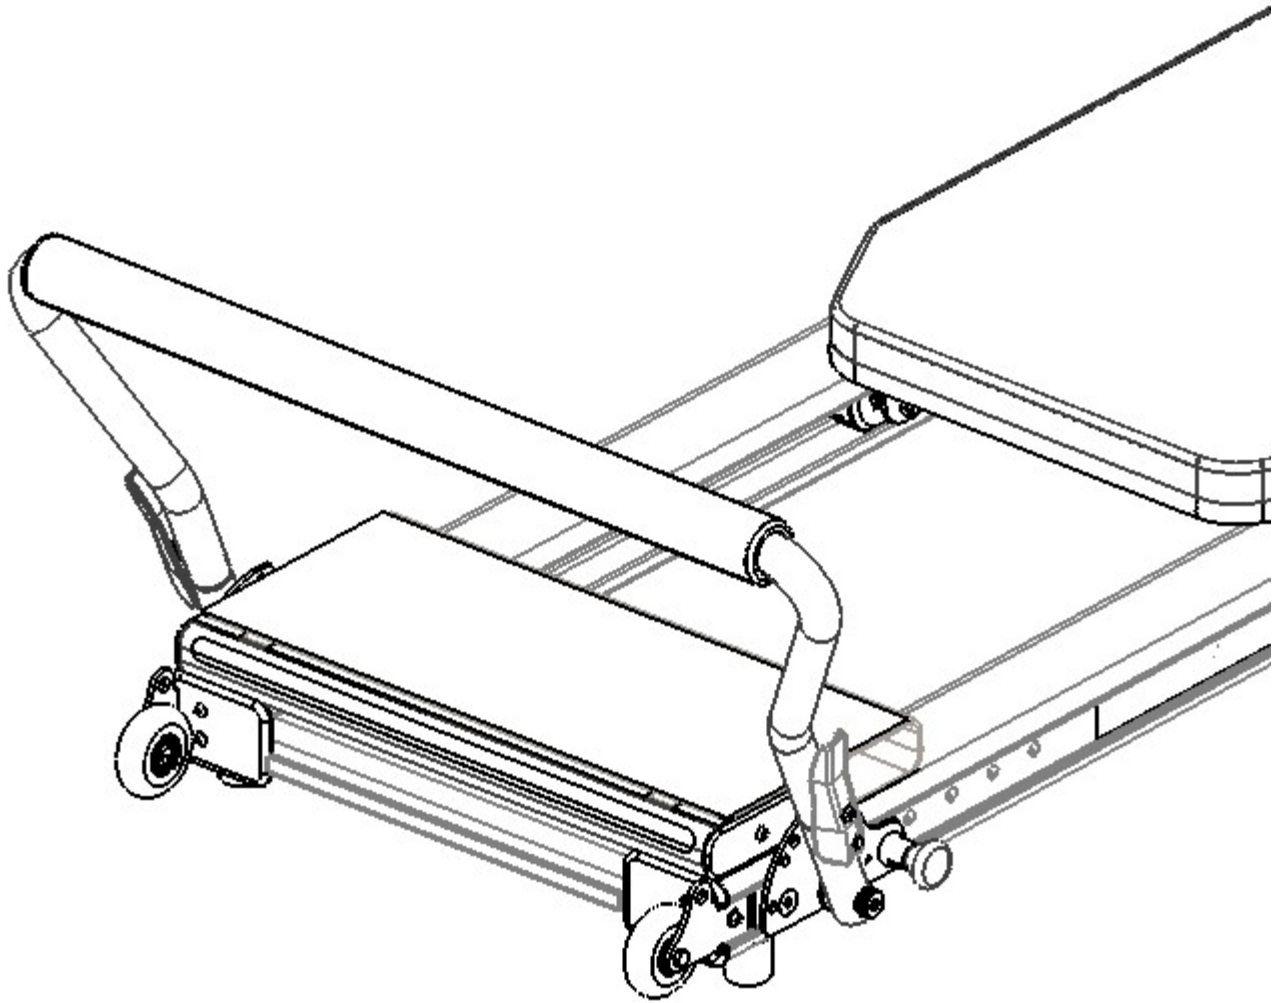

PARTS LIST

| Part number                  | Description | Qty |
|------------------------------|-------------|-----|
| Wide Integrated Platform Pad | 15969       | 1   |
| Wide Integrated Platform     | 18991       | 1   |
| Anti-wear Strip              | 16047       | 2   |
| Alcohol Wipe                 | 13521       | 2   |

A INSTALL ANTI-WEAR STRIPS

1. Use the provided alcohol wipe to clean the top surface of the side rails, near the slotted holes by the trunion plates. Hold the anti-wear strip over the slotted hole as a trunnion for the area to be cleaned. Repeat on the other side. Let dry before applying strips.
2. Peel off the backing from the anti-wear strip and align the strip slotted hole with the frame slot. Press down firmly. Repeat on the other side. See Figure A.

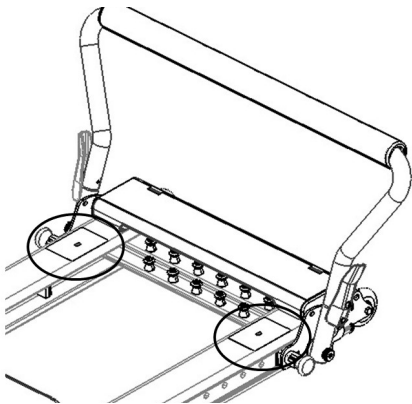


Figure A

INSTALL THE WIDE INTEGRATED PLATFORM

3. Lower the Wide Integrated Platform down onto the mounted standing platform. There are two tabs on the Platform which will drop into slots in the standing platform. The pins on the underside will be facing toward your carriage. See Figure B.

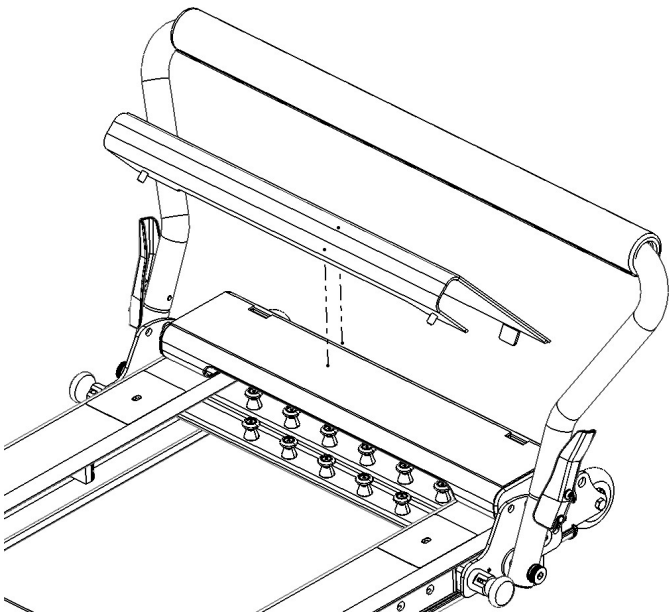


Figure B

4. Once the Platform has the tabs installed, pivot it forward and down so that the pins lower onto the rails and fall into the slots in the rails. See Figure C.

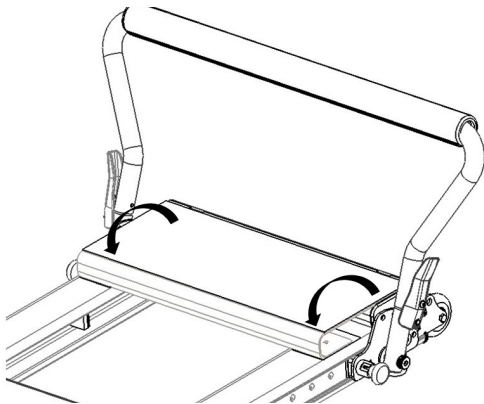


Figure C

5. You can now use your Platform. To access and change springs, tilt the Platform up and away from the carriage. When finished with the change, lower the Platform back down onto the rails.

# How to Install and Use the Platform Extender on the Allegro Nextgen Reformer™

## INTEGRATED PLATFORM PAD

Place the pad directly on top of the standing platform to use. This pad will make the integrated platform height the same as your carriage pad. See Figure A.

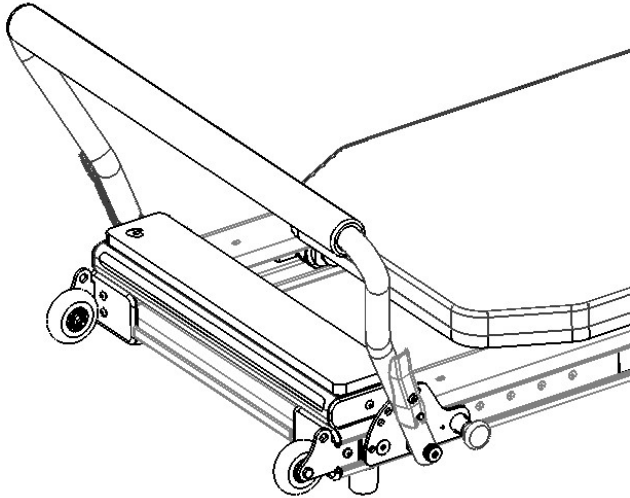


Figure A

## WIDE INTEGRATED PLATFORM PAD

Your Wide Integrated Platform kit comes with the oversized Wide Integrated Platform Pad. Place the pad directly on top of the standing platform to use. This pad will make the standing platform height the same as your carriage pad. See Figure B.

Note: You must remove the smaller pad to install the Platform ONLY use one pad at a time.

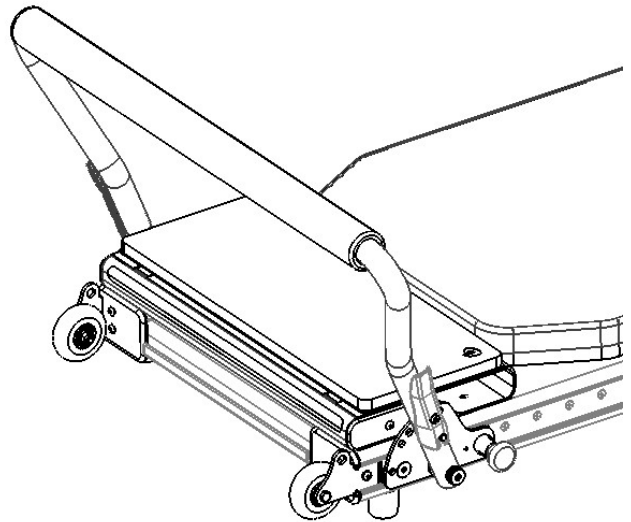


Figure B