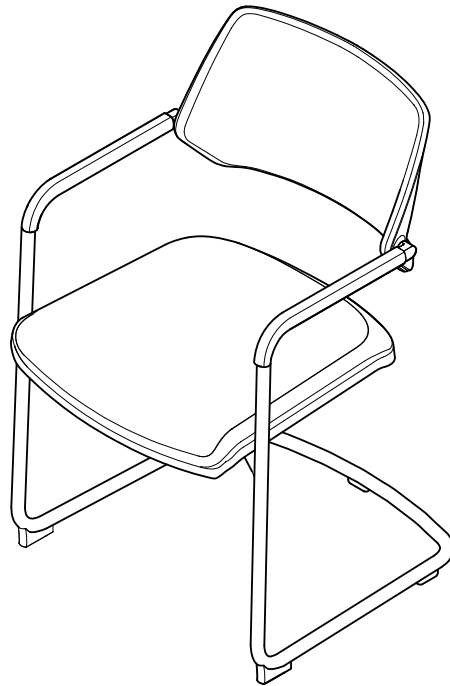




QiVi Sled
Mesh with Arms



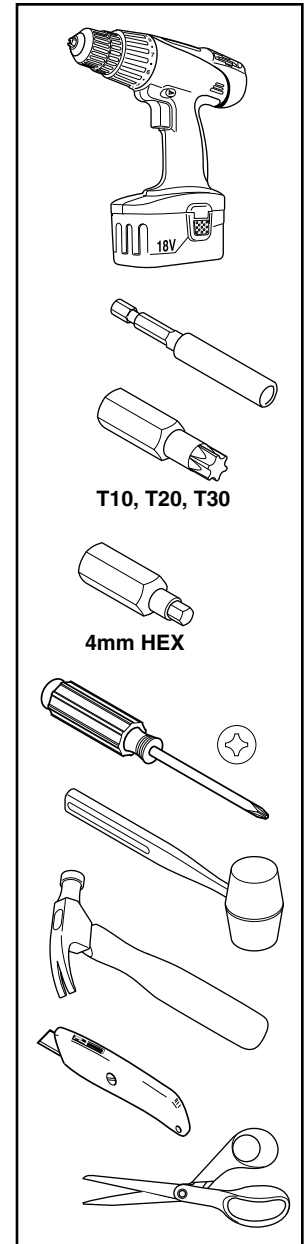
QiVi Conference
Mesh with Arms
Mesh Armless

If you have a problem, question, or request, call
your local dealer, or Steelcase Line 1 at
888.STEELCASE (888.783.3522)
for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico,
and the U.S. Virgin Islands, call: 1.616.247.2500)
Or visit our website: www.steelcase.com

© 2013 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.

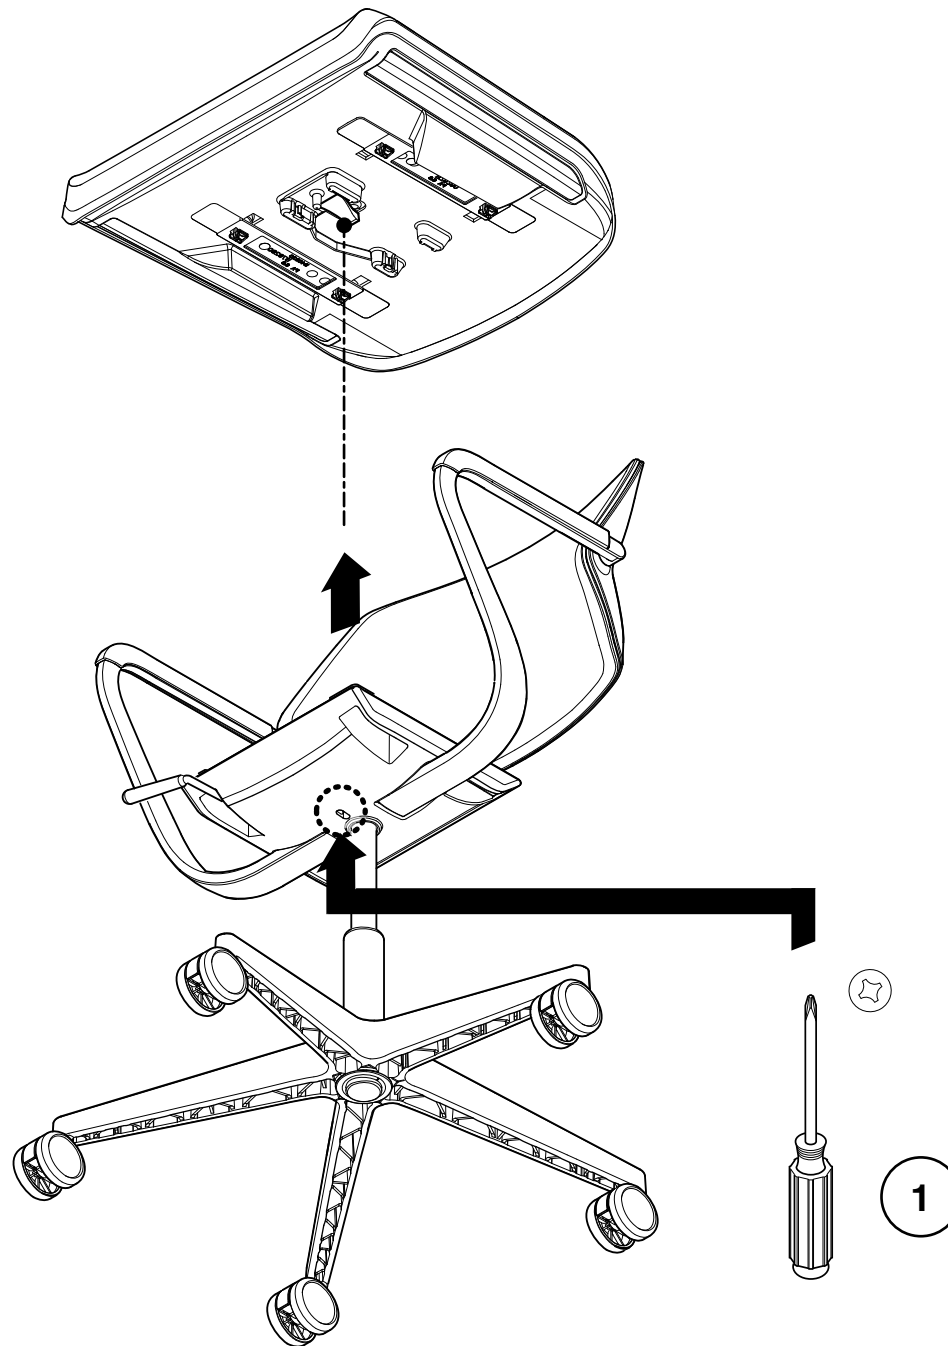


T10, T20, T30

4mm HEX

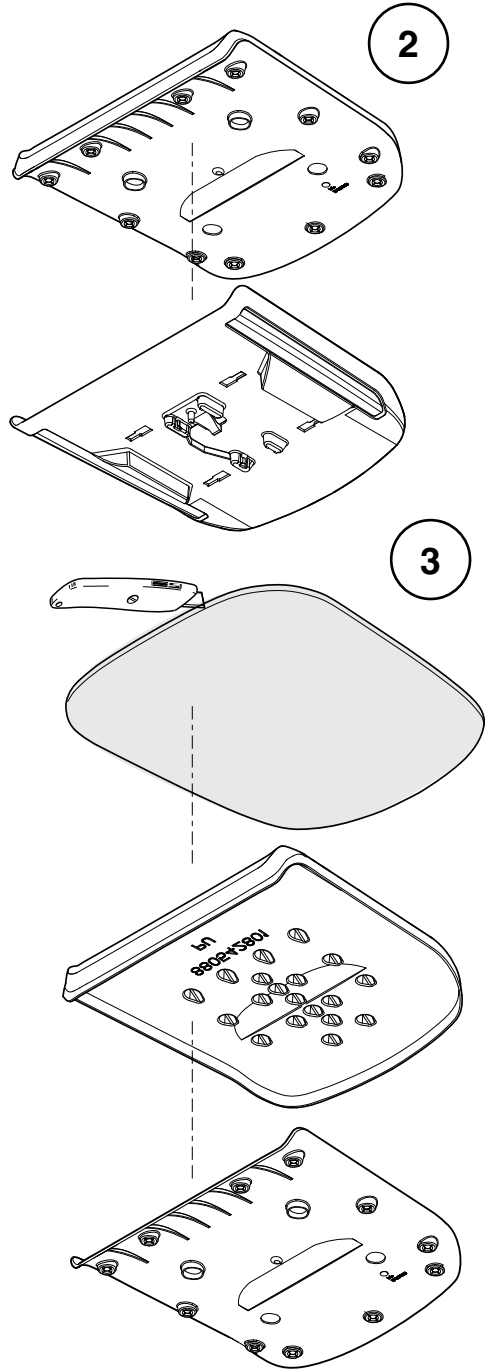
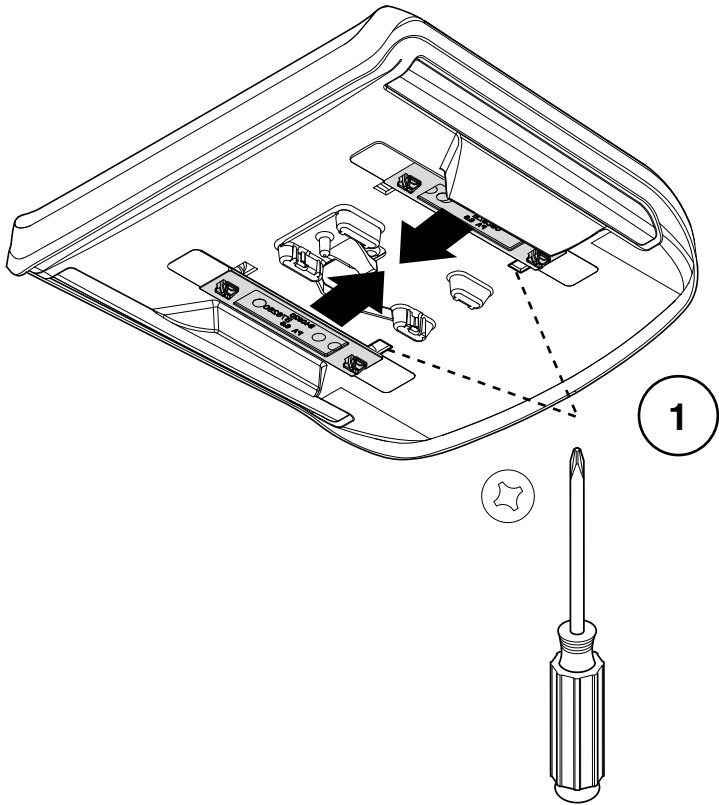
SEAT REMOVAL (ALL VERSIONS)

1. Press through the control housing or seat cover with small size Phillips screwdriver. Release seat tab and slide seat rearward to fully disengage.

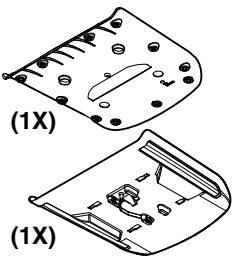
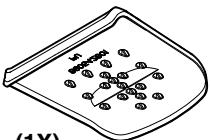
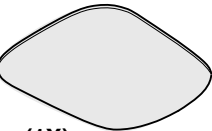
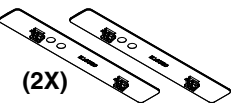


SEAT DISASSEMBLY
(ALL VERSIONS)

- 1. Depress inner seat shell to slide nylon bearings inward and remove.
- 2. Use screwdriver to pry inner and outer seat shells apart. Discard outer shell.
- 3. Cut fabric away from polyerethane foam/shell assembly and discard all parts.

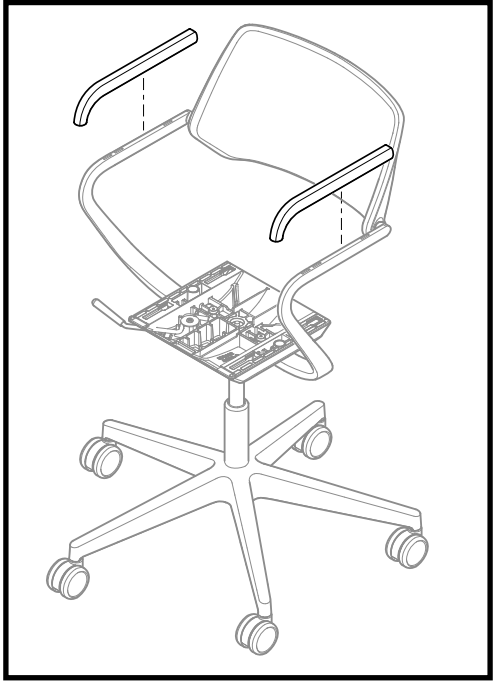
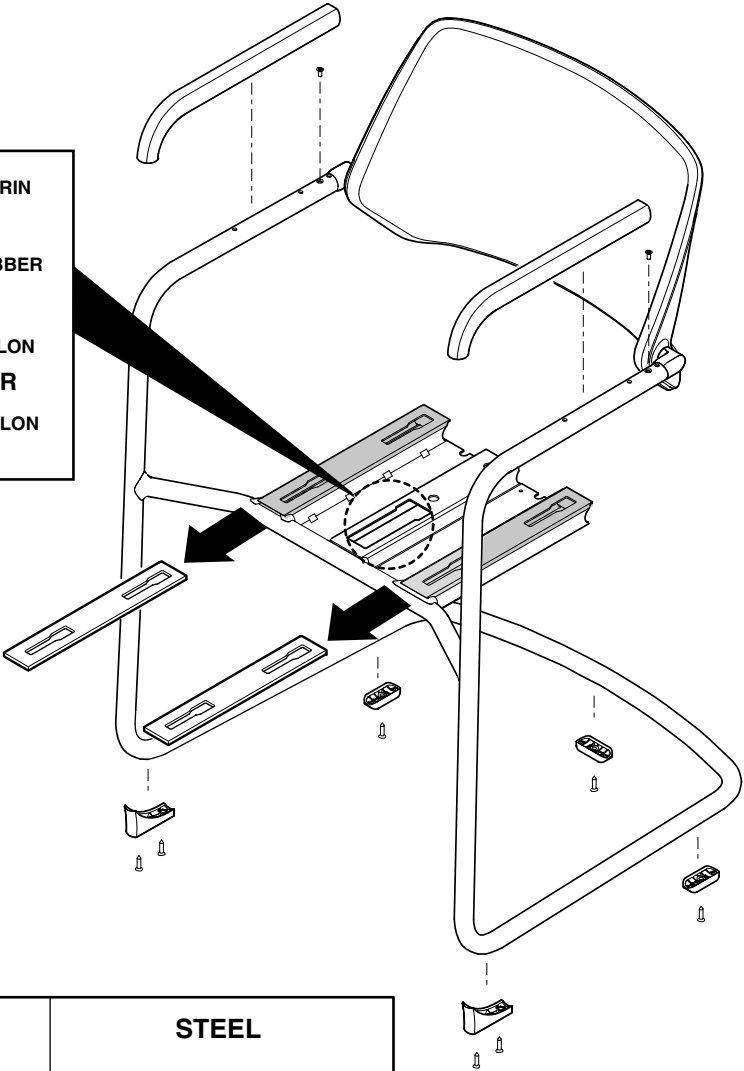
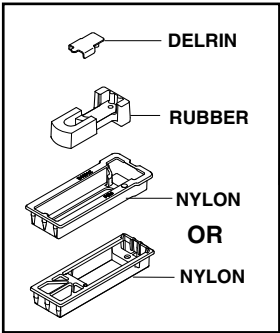


Bins for components removed

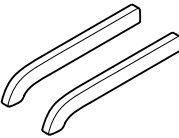
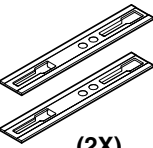
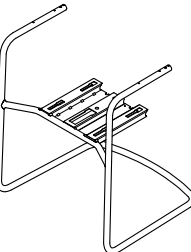
POLY- PROPYLENE	POLYURETHANE FOAM	FABRIC	NYLON
 (1X) (1X)	 (1X)	 (1X)	 (2X)

CHAIR FRAME - SLED

- 1. Pry arm caps free of arms and remove screw attached to arm as applicable.
- 2. Remove acetal bearings, power pack, and five (5) glides with seven (7) screws.

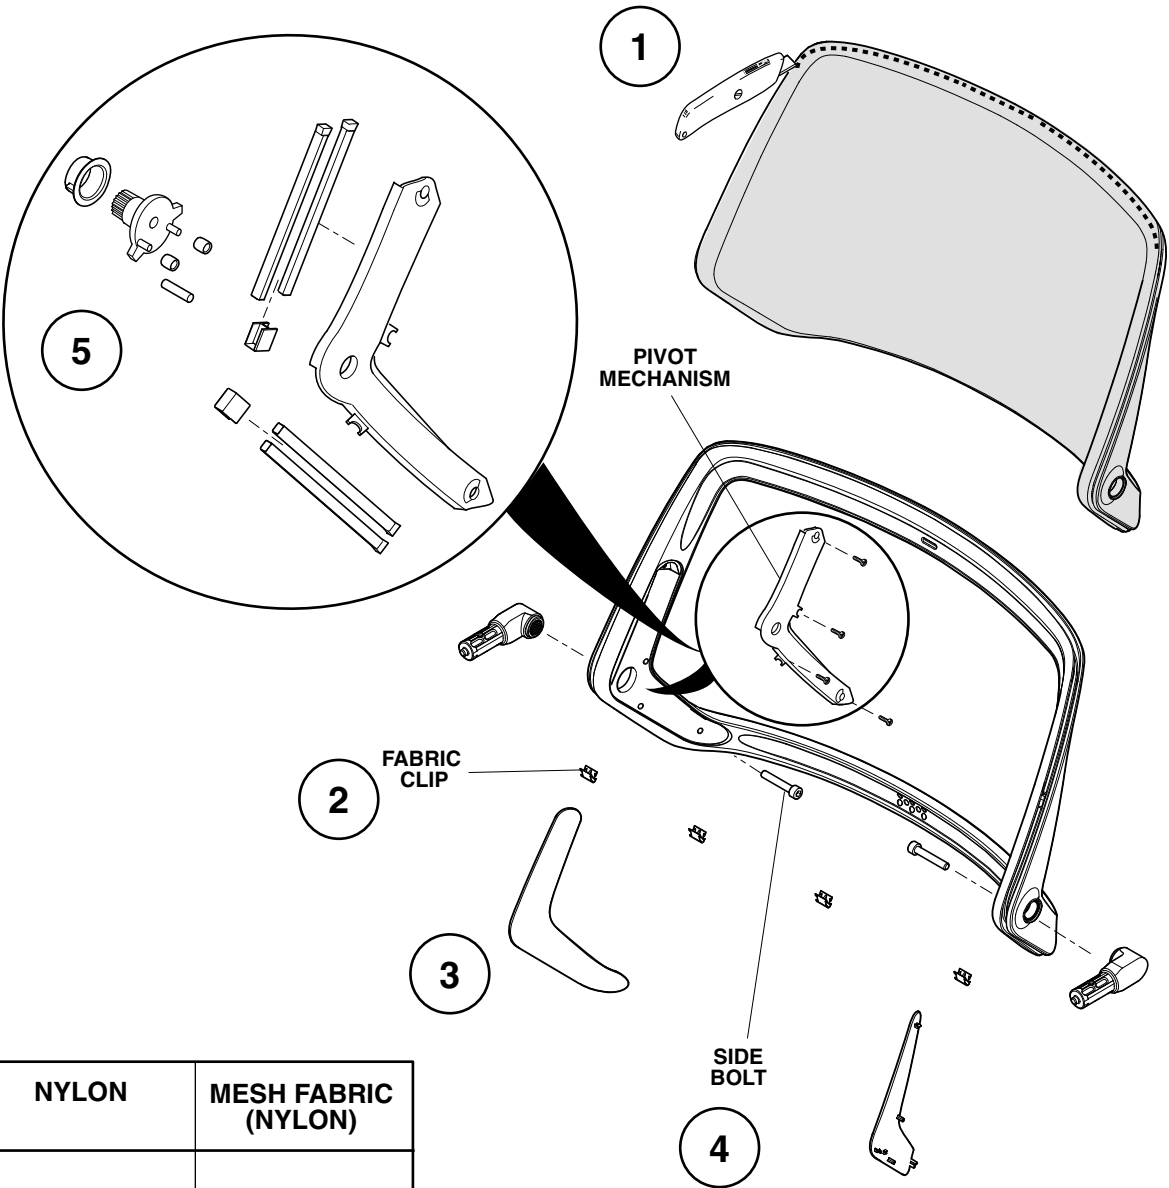


Bins for components removed

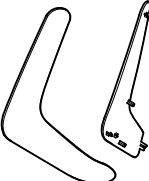
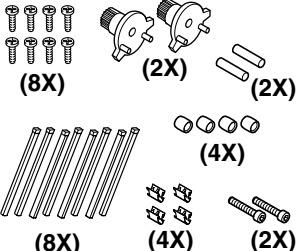
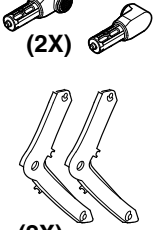
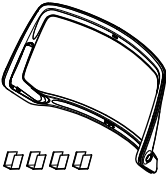
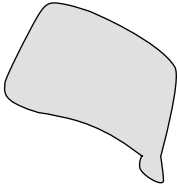
ABS	NYLON	ACETAL	STEEL
 (2X)	 (2X)  (3X)	 (2X)	 (7X)  (2X) 

BACK DISASSEMBLY

- 1. Use utility knife to cut mesh fabric free of back frame.
- 2. Remove four (4) fabric clips from frame bottom to discard.
- 3. Remove boomerang shaped pivot covers from back frame.
- 4. Loosen and remove side bolts. Remove aluminum connectors or arms.
- 5. Remove four (4) screws from each pivot mechanism and separate according to chart.

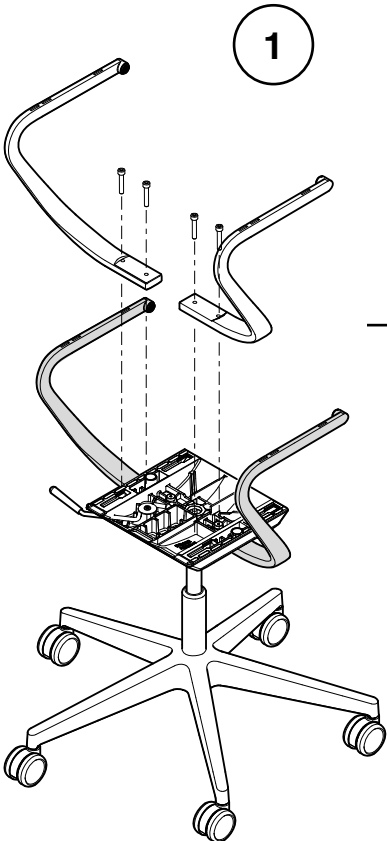


Bins for components removed

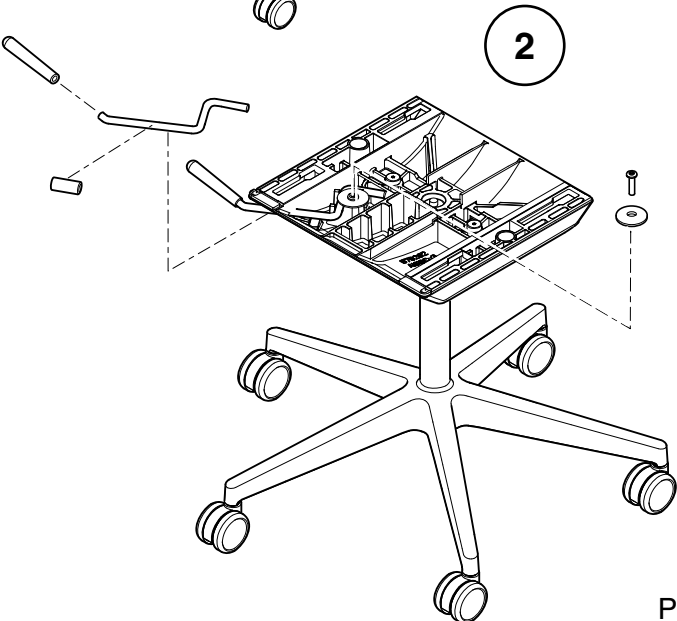
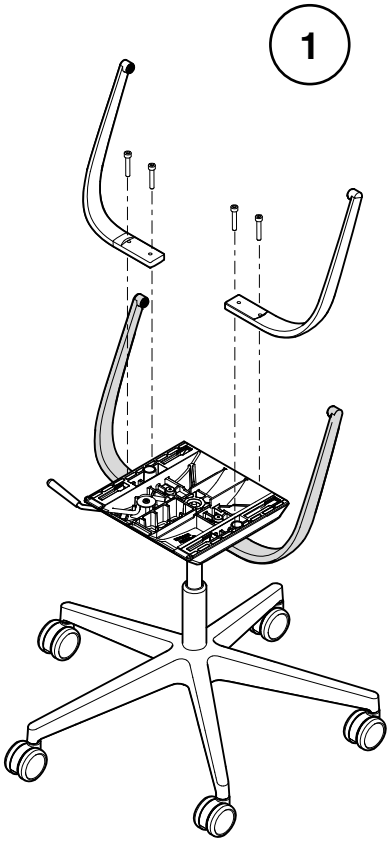
NYLON	STEEL	ALUMINUM	NYLON	MESH FABRIC (NYLON)
 (2X)	 (8X) (2X) (4X) (2X)	 (2X) (2X)	 (4X)	

CHAIR FRAME - CONFERENCE

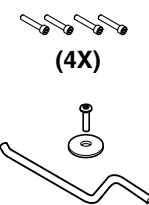
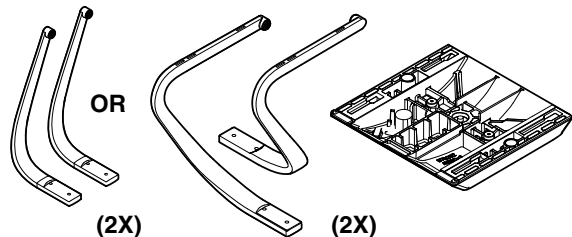
- 1. Remove bolts to release arms or back support.
- 2. Remove items as shown



— OR —

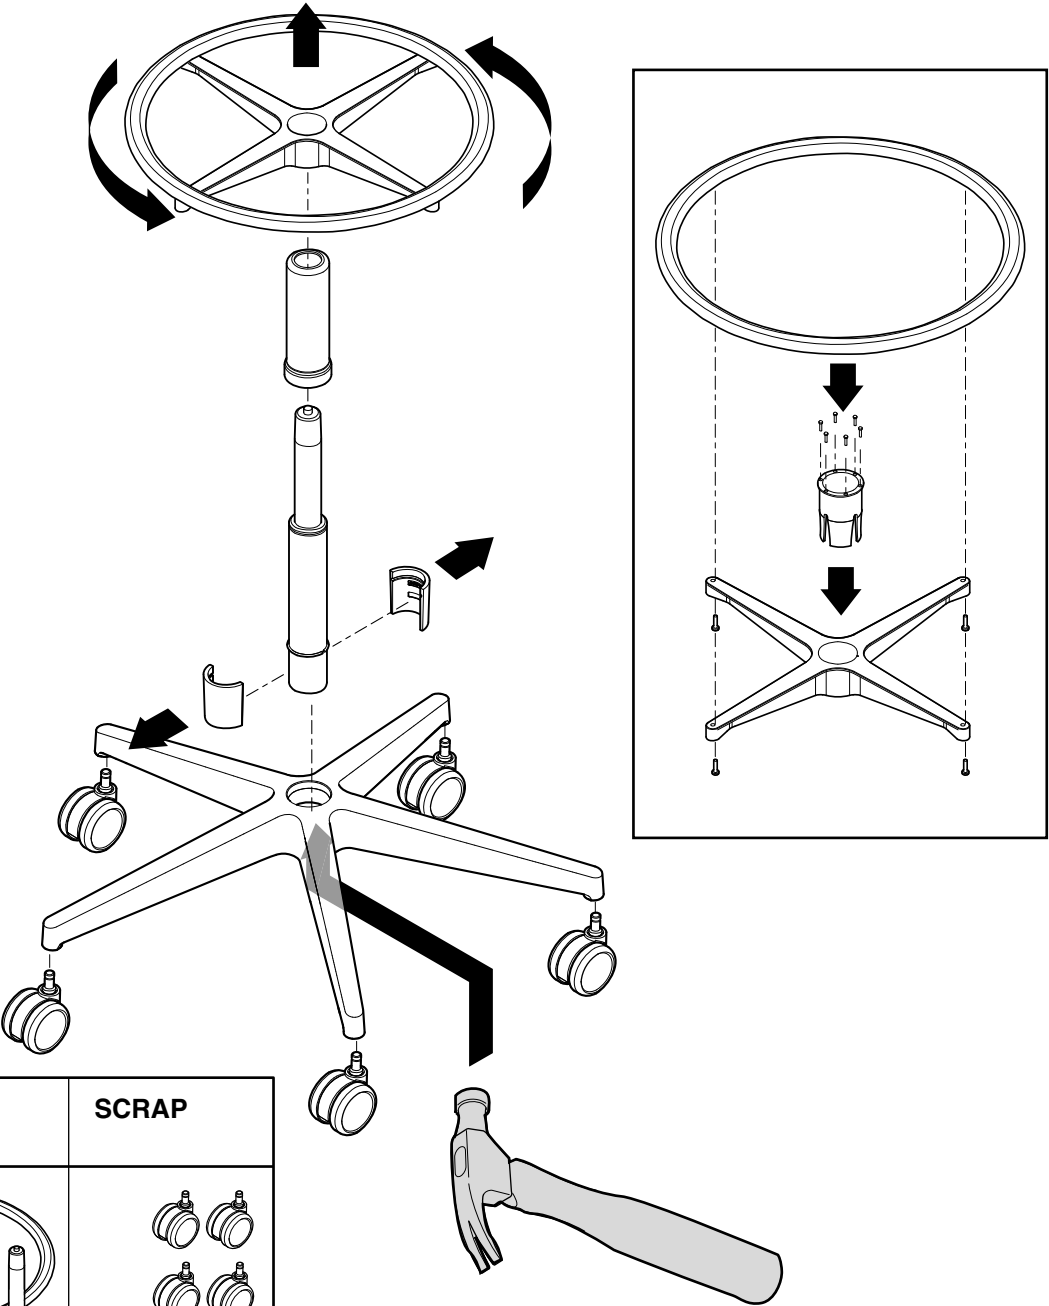


Bins for components removed

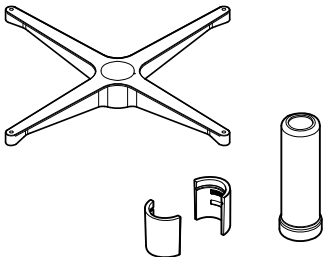
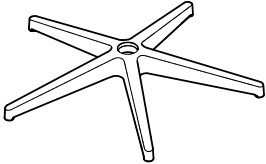
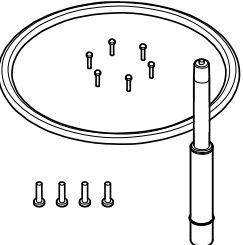
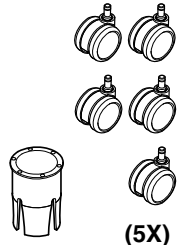
STEEL	ALUMINUM	TPE	RUBBER
 (4X)	 OR (2X) (2X)		

CYLINDER AND BASE

1. Separate items as shown.



Bins for components removed

ALUMINUM	ALUMINUM OR NYLON	STEEL	SCRAP
			 (5X)