


465 Think® Chair Fixed & Adjustable Arm Cap Replacement

Fixed Arm Cap Replacement

1. Remove five (5) screws with a #2 phillips or T-20 torx screwdriver as necessary.
2. Twist arm cap slightly off arm (2a) and pull off in direction of arrow below (2b).


Reverse to install.

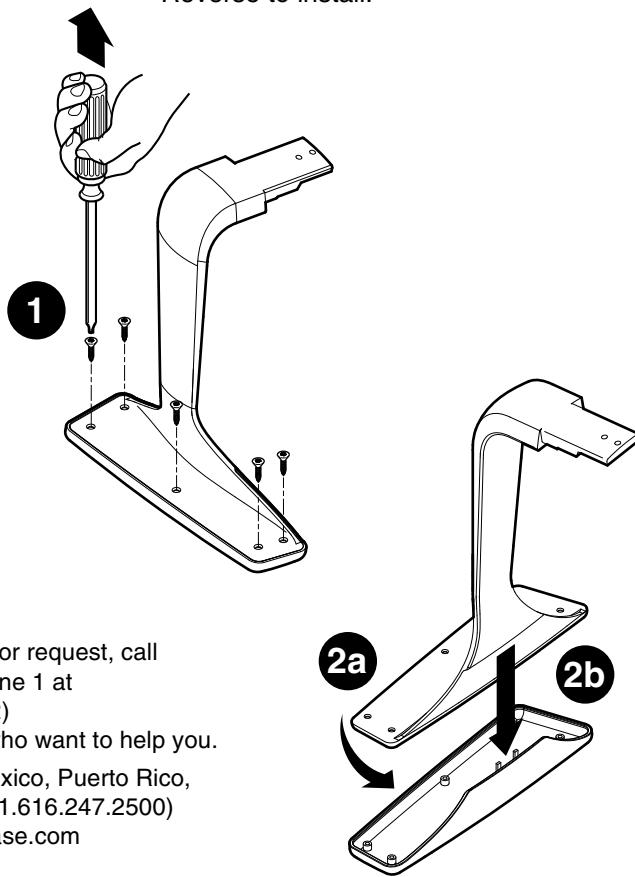


Adjustable Arm Cap Replacement

1. For height/width/pivot/depth arm: Remove four (4) screws with a T-20 torx screwdriver.
2. Pull arm cap off the arm.

Reverse to install.

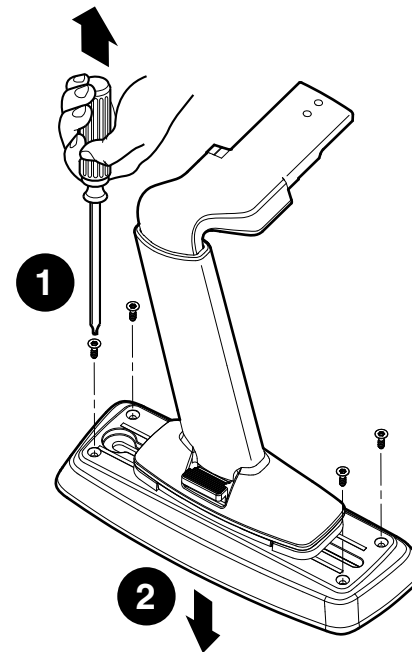


Height/Width/Pivot/Depth Arm

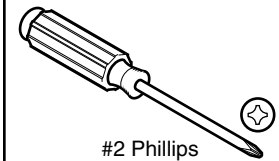

#2 Phillips

OR

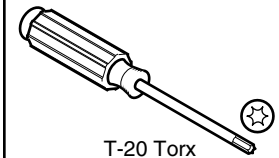

T-20 Torx

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500)

Or visit our website: www.steelcase.com

© 2004 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.