





TS312 Shortcut® 5-Arm Base Chair and Stool (with or without cushion) Disassembly Direction

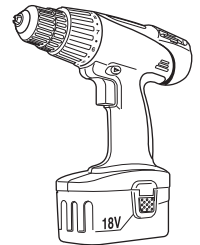


**T30 SIX POINT
STAR BIT**




BIT HOLDER

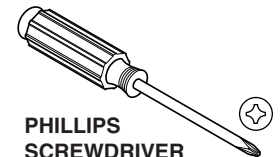

**PHILLIPS
SCREWDRIVER**

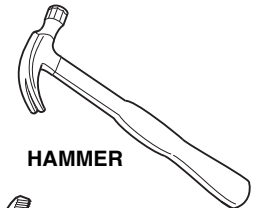


HAMMER

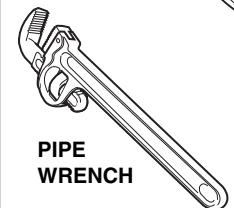


**PIPE
WRENCH**

1. Lay chair on its side.
2. Hit bottom of the cylinder with a hammer (2a) while pulling forward on the chair base (2b).
3. Remove chair base.
4. Remove casters.
Hint: If pintle is stuck in base, remove with pliers.
5. Remove pintles from casters.

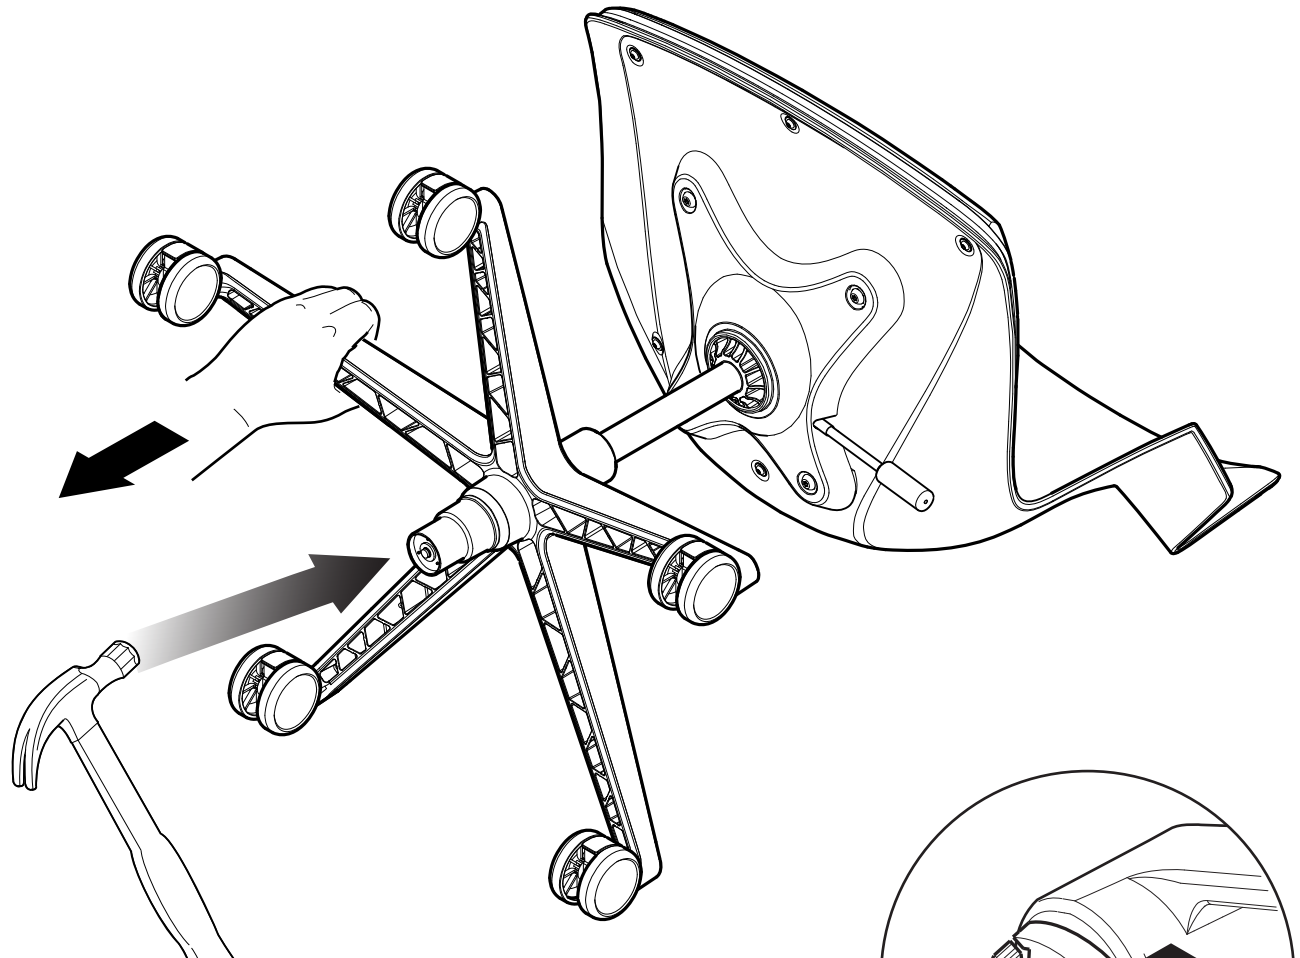


NOTE: DO NOT hit the inner cylinder rod with the hammer. Hit the outer rim of the cylinder.


Recycle bins for components removed

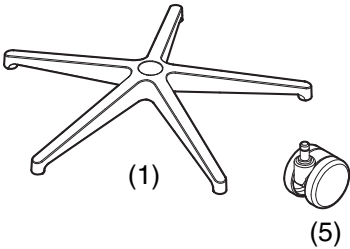NYLON	STEEL
 (1) (5)	 (5)




6. Remove cylinder, metal collar (if worksurface model) and foot ring (if stool model).

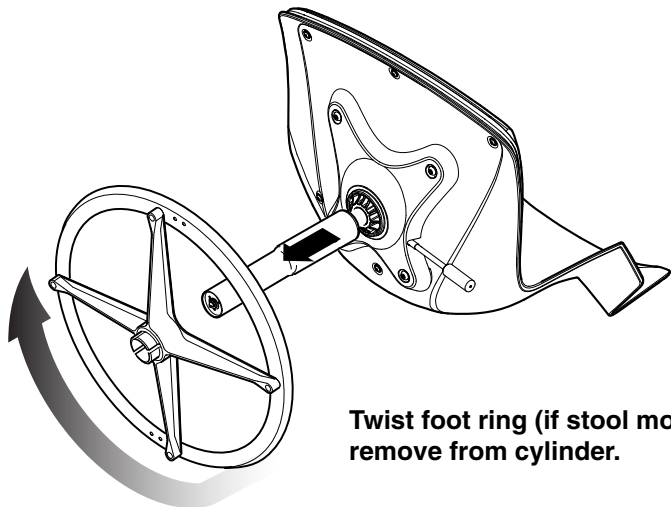


Twist foot ring (if stool model) to remove from cylinder.

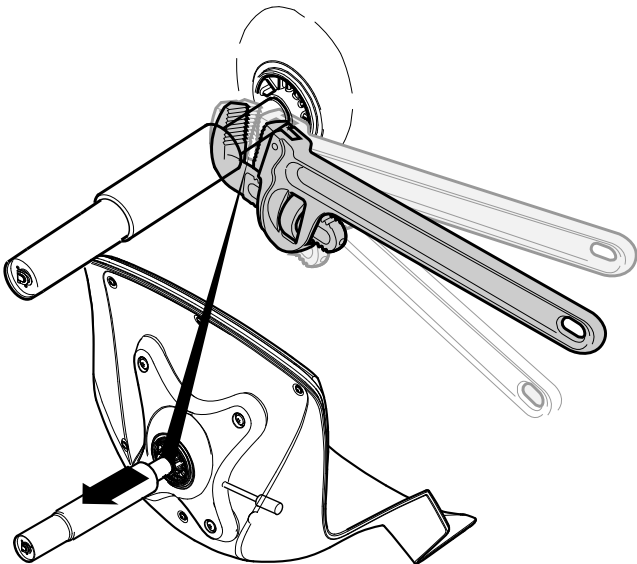


Recycle bins for components removed

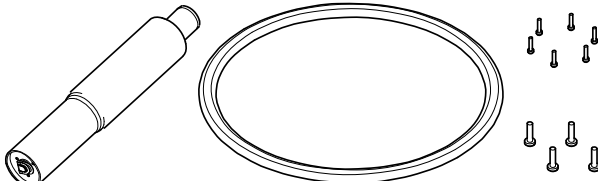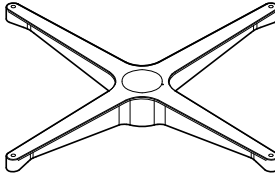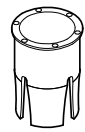STEEL	ALUMINUM	NYLON
		

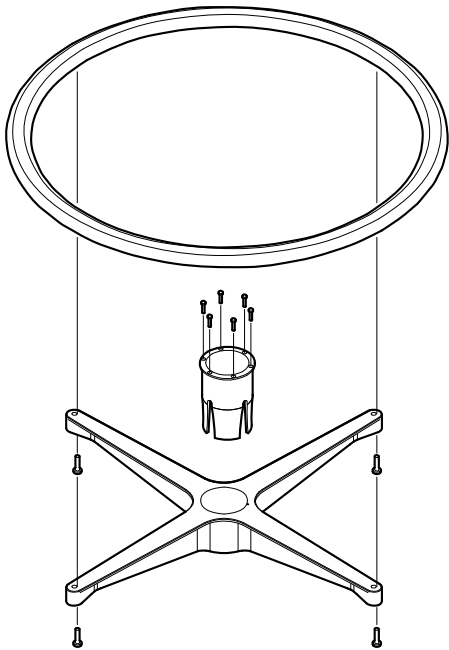

7. Remove seat bracket and height mechanism.

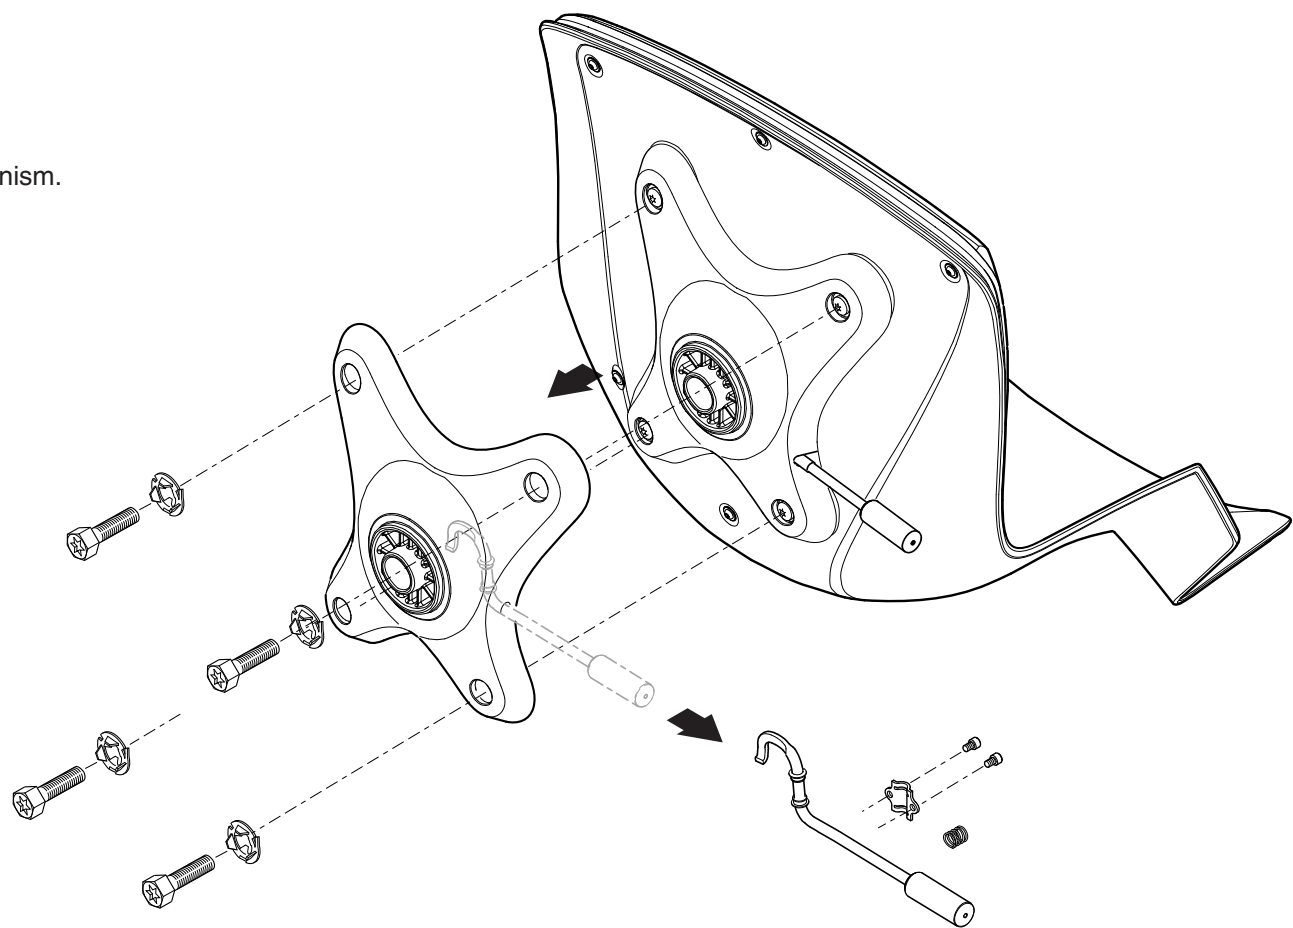


Recycle bins for components removed

STEEL	ALUMINUM	POLYPROPYLENE
(4X) (2X)		


8. Remove and separate cushion components.

Remove (6) T-30 screws.

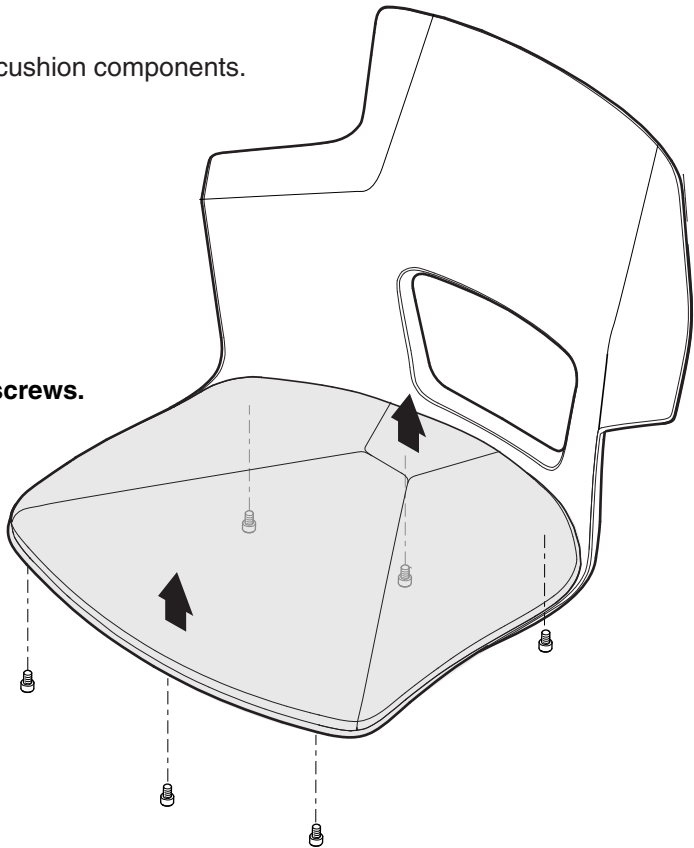


Remove Staples.




Remove Pull (Steel Rod)

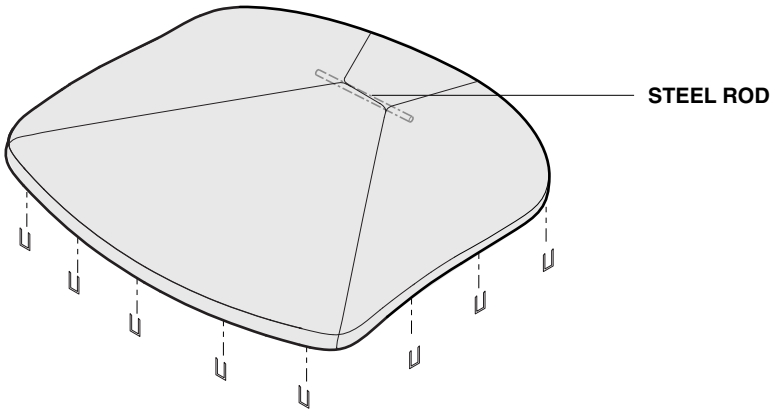

Separate Components.

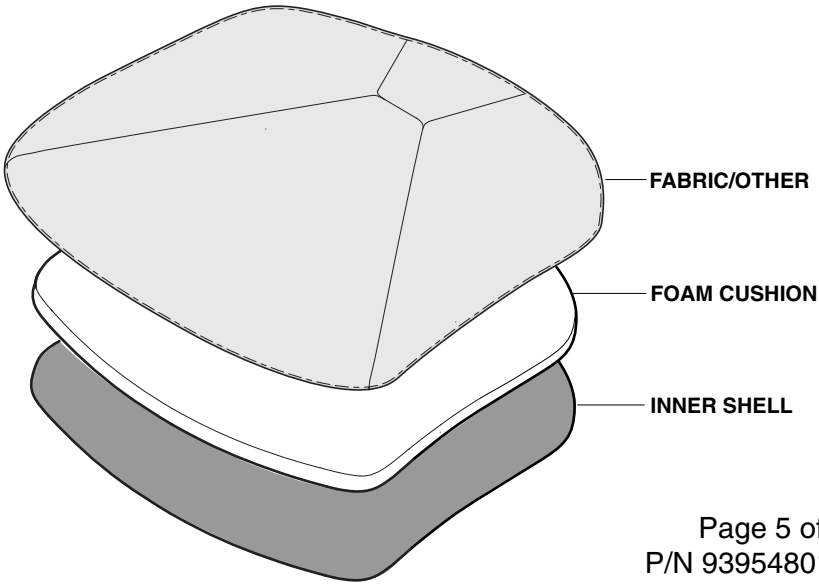

Recycle bins for components removed

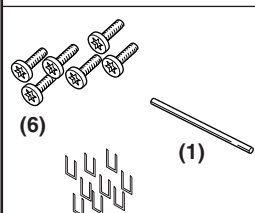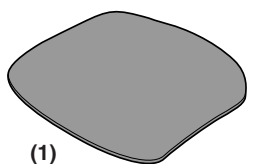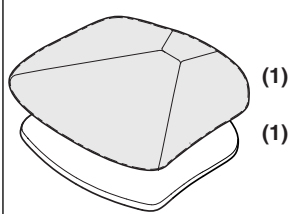STEEL	POLYPROPYLENE	SCRAP
 (6) (1) (STAPLES)	 (1)	 (1) (1)