

apuro

Ice Crusher

Instruction manual



**Model:
CH919-A**

Safety Instructions

The machine is intended for commercial and indoor use by trained and skilled personnel familiar with these instructions.

Never bypass the safety interlocks on the appliance.

Blades are sharp - handle with care !

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT immerse the appliance in water.
- This appliance is only used for crushing ice. Do not use the appliance for anything other than its intended use.
- Switch off and disconnect from power supply when not in use, before assembling or disassembling, and before cleaning.
- Avoid contacting moving parts. Never place fingers or other utensils into feeding or discharge areas.
- Ensure to check ice chute for the presence of foreign objects before use. Use original attachments only to prevent any damage.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.

- This appliance must not be used by children under any circumstances.
- ALWAYS keep hands, hair and clothing away from the moving parts.
- NEVER leave the appliance unattended when in use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an Apuro agent or a recommended qualified technician in order to avoid a hazard.
- Apuro recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your Apuro product.

Pack Contents

The following is included:

- Apuro Ice Crusher
- Instruction manual

Apuro prides itself on quality and service, ensuring that at the time of unpacking the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your Apuro dealer immediately.

Installation

1. Remove the appliance from the packaging. Make sure that all protective plastic film and plastic coatings are thoroughly removed from all surfaces.
2. Place the appliance on a flat surface, ensuring the suction feet on the bottom get a firm grip.

Before first use

1. Open the lid and wipe it clean.
2. Put a container beneath the spout, then pour warm water through the ice jar to rinse the system thoroughly.
3. Empty the container and put it beneath the spout to collect ice cubes.


Operation

1. Drop ice cubes into the ice chute. (**Note:** Suitable for cubes up to 2x2x2 cm)
2. Close the lid in place.
3. Connect to the mains power supply and press the power switch to start.

Warning: The blades of the crusher are self feeding! Do not attempt to push cubes into blades with hand or instrument.

Note: With the safety microswitch, the appliance will stop automatically once the lid is opened during operation.

4. After use, press the power switch again to turn Off. Then disconnect from power supply.

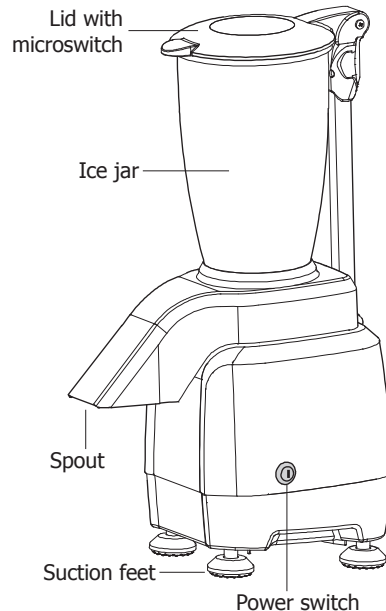

Ice blockage

1. Should a large cube get blocked in the crushing unit, press the power switch to turn Off. Then unplug the unit.
2. Pour warm water through the ice jar to melt ice blockage.
3. Re-plug and re-start the appliance.

Cleaning, Care & Maintenance

- **Always turn off and disconnect the appliance from the power supply before cleaning.**
- Pour warm water through the ice jar to rinse the system thoroughly.
- Wipe the appliance housing with a damp cloth. Dry well afterwards.

Troubleshooting

A qualified technician should carry out repairs if required.

Fault	Probable Cause	Solution
The unit is not working	Unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Replace plug or lead
	Mains power supply fault	Check mains power supply
	Overheating protection is activated after a long period of intensive use	Wait at least 30 minutes and try again. Placing the appliance in a cool place will reduce the waiting time

Technical Specifications

Note: Due to our continuing program of research and development, the specifications herein may be subject to change without notice.

Model	Voltage	Power	Current	Max. Ice crushing capacity	Ice container capacity	Net Weight	Dimensions H x W x D mm	Largest ice cube
CH919-A	220-240V~ 50-60Hz	200W	0.87A	90kg/hour	3L	5.4kg	533 x 329 x 197	2 x 2 x 2 cm

Electrical Wiring

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

Apuro parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

Apuro products have been approved to carry the following symbol:



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Apuro.
Every effort is made to ensure all details are correct at the time of going to press, however, Apuro reserves the right to change specifications without notice.

DECLARATION OF CONFORMITY

• Conformiteitsverklaring • Déclaration de conformité • Konformitätserklärung • Dichiarazione di conformità •
• Declaración de conformidad

Equipment Type • Uitrustingstype • Type d'équipement • Gerätetyp • Tipo di apparecchiatura • Tipo de equipo		Model • Modèle • Modell • Modello • Modelo
Ice Crusher		CH919 -A
Application of Territory Legislation & Council Directives(s) Toepassing van Europese Richtlijn(en) • Application de la/des directive(s) du Conseil • Anwendbare EU-Richtlinie(n) • Applicazione delle Direttive • Aplicación de la(s) directiva(s) del consejo	Electrical Safety EN 60204-1:2018 EN ISO 12100:2010 Electro-Magnetic Compatibility EN 55014-1: 2017 +A11:2020 EN 55014-2:2015 EN IEC 61000-3-2: 2019 EN 61000-3-3:2013 +A1:2019	
Producer Name • Naam fabrikant • Nom du producteur • Name des Herstellers • Nome del produttore • Nombre del fabricante		Apuro

I, the undersigned, hereby declare that the equipment specified above conforms to the above Territory Legislation, Directive(s) and Standard(s).

Ik, de ondergetekende, verklaar hierbij dat de hierboven gespecificeerde uitrusting goedgekeurd is volgens de bovenstaande Richtlijn(en) en Standaard(en).

Je soussigné, confirme la conformité de l'équipement cité dans la présente à la / aux Directive(s) et Norme(s) ci-dessus

Ich, der/die Unterzeichnende, erkläre hiermit, dass das oben angegebene Gerät der/den oben angeführten Richtlinie(n) und Norm(en) entspricht.

Il sottoscritto dichiara che l'apparecchiatura di sopra specificata è conforme alle Direttive e agli Standard sopra riportati.

El abajo firmante declara por la presente que el equipo arriba especificado está en conformidad con la(s) directiva(s) y estándar(es) arriba mencionadas.

Date • Data • Date • Datum • Data •
Fecha

Signature • Handtekening • Signature
• Unterschrift Firma • Firma

Full Name • Volledige naam • Nom et
prénom • Vollständiger Name • Nome
completo • Nombre completo

Position • Functie • Fonction • Position
• Qualifica • Posición

Producer Address • Adres fabrikant •
Adresse du producteur • Anschrift des
Herstellers • Indirizzo del produttore •
Dirección del fabricante

22nd December 2022

DocuSigned by:

Ashley Hooper
B39382C9FD9C478...

Ashley Hooper

Technical & Quality Manager

Fourth Way,
Avonmouth,
Bristol,
BS11 8TB
United Kingdom

DocuSigned by:

Brendan Denmeade
D052C5837EB7465...

Brendan Denmeade

Commercial Manager/ Responsible
Supplier

15 Badgally Road,
Campbelltown
NSW 2560



apuro

CH919-A_A5_v1_2023/03/29