


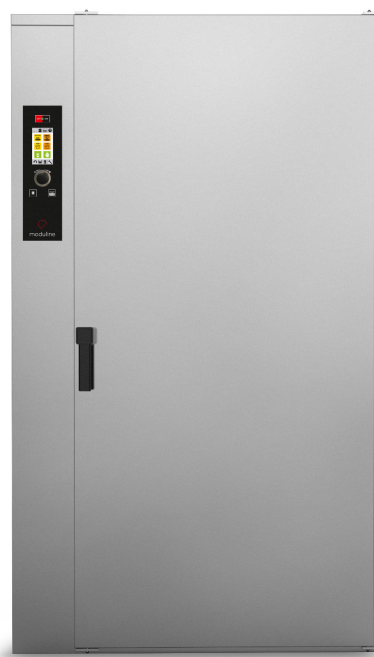

RRFF40E

Floor regenerating
cabinet (+3°C→+65°C)

CONSTRUCTION FEATURES

- Tightness chamber with radiused corners
- Internal AISI 304 18/10 stainless steel bumpers for trolley's introduction
- Total thermic insulation with rock or glass wool
- Long lasting front seals made up of food grade of high heat resistance
- Ventilated heating provided by high efficiency protected heating elements
- Door fitted with three point locking system
- Easy access to facilitate maintenance and repair

FUNCTIONAL FEATURES

- Electronic control panel of temperature, time and humidity with LCD touch-screen
- End-of-cycle buzzer
- Simplified, user-friendly control
- Automatic control of the humidity's percentage in the chamber, Climachef system
- Operating temperature: 30°C - 160°C
- Automatic humidity vent
- Chamber can accommodate different sized plate or tray rack transport trolleys
- Chamber with safety thermostat
- Delayed start timer
- Intelligent temperature decrease in the cavity at the end of the regenerating cycle allows a perfect warm holding

STANDARD SUPPLY

- Climachef

OPTIONS & ACCESSORIES

- ☐ Core probe with the possibility to register 30 different temperatures and save them in the HACCP report (available only with USB port device)
- ☐ Concealed water storage tank
- ☐ USB port saving device HACCP
- ☐ GN pans cart
- ☐ Plates cart
- ☐ Cart thermal cover
- ☐ Glass door and lighting
- ☐ Multipoint core probe
- ☐ Speedgrade fan speed reduction system
- ☐ External hand shower

MODULINESRL

Via dell'Industria 11, Z.I. San Giacomo di Veglia 31029 Vittorio Veneto (TV) - ITALY
 tel. +39 0438 5063 - fax +39 0438 912 323 - info@moduline.it - www.moduline.it

Overall dimensions
(W x D x H) - mm

1150 x 1100 x 1950

Oven interior
(W x D x H) - mm

780 x 965 x 1860

Trays capacity

40 x GN 1/1

Plates capacity
Plates Ø 230-310

126

Power kW

23

Power supply

3N AC 400V 50Hz

Rated voltage
[Vac]

3N - 400V

Total input [kW]

23

Amps. [A]


33,2

Connecting wire
min. section (type
H07 RN-F) [mm²]

5 x 6

Water pressure
[kPa]

150 ÷ 500

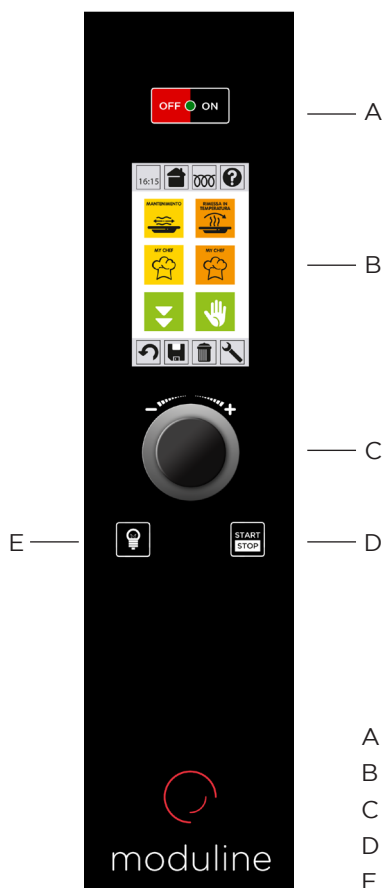

- A ON/OFF switch
- B Display
- C Setting knob and select "Enter"
- D START/STOP button
- E Chamber light button