### **OPERATOR'S MANUAL**

## PX03P-XXX-XXX-AXXX

INCLUDING: OPERATION, INSTALLATION AND MAINTENANCE

### 3/8" DIAPHRAGM PUMP

1:1 RATIO, NON-METALLIC

**REVISED:** 



12-17-21



### READ THIS MANUAL CAREFULLY BEFORE INSTALLING, **OPERATING OR SERVICING THIS EQUIPMENT.**

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

### **SERVICE KITS**

Refer to Model Description Chart to match the pump material options. **637428** for air section repair (see page 7). 637429-XX for fluid section repair (see page 5).

### **PUMP DATA**

**Models**..... See Model Description Chart for "-XXX" options.

**Pump Type**.. Air Operated Double Diaphragm. **Material**..... See Model Description Chart.

### Weight

Maximum FlowRate (flooded inle	et)
Air Consumption @ 40 psig	1 cfm /gallon (approx.)
Maximum Outlet Pressure	100 psig (6.9 bar)
Maximum Material InletPressure	10 psig (0.69 bar)
Maximum Air Inlet Pressure	
PX03P-X <u>R</u> S-XXX-AXXX	
PX03P-X <u>P</u> S-XXX-AXXX	3.44 lbs (1.56 kgs)
PX03P-X <u>L</u> S-XXX-AXXX	4.62 lbs (2.10 kgs)
PX03P-X <u>K</u> S-XXX-AXXX	4.50 lbs (2.04 kgs)
PX03P-X <u>E</u> S-XXX-AXXX	4.26 lbs (1.93 kgs)
PX03P-X <u>D</u> S-XXX-AXXX	4.16 lbs (1.89 kgs)

Duckbill...... 8.7 gpm (32.9 lpm)

### Displacement / Cycle @ 100 psig

Ball check ...... 0.022 gallons (0.083 lit.) Duckbill............... 0.018 gallons (0.068 lit.)

### **Maximum Particle Size**

Duckbill..... fibers

### Maximum Temperature Limits (diaphragm / ball / seat material)

Acetal.....-20° to 180° F (-29° to 82° C) E.P.R / EPDM...... -60° to 280° F (-51° to 138° C) Hytrel<sup>®</sup> ..... -20° to 180° F (-29° to 82° C) Kynar<sup>®</sup> PVDF ...... 10° to 200° F (-12° to 93° C) Neoprene ........... 0° to 200° F (-18° to 93° C) Polypropylene......  $32^{\circ}$  to  $175^{\circ}$  F ( $0^{\circ}$  to  $79^{\circ}$  C) Santoprene<sup>®</sup> . . . . . . -40° to 225° F (-40° to 107° C) PTFE ..... 40° to 225° F (4° to 107° C) Viton<sup>®</sup> ..... -40° to 350° F (-40° to 177° C)


**Groundable Models.** . PX03P-XDS-XXX-AXXX

PX03P-XES-XXX-AXXX

**Dimensional Data**.... See page 9

**Noise Level @ 70 psig 60 cpm** . . . . . 72.7 dB(A) $^{\odot}$ 

① The pump sound pressure levels published here have been updated to an Equivalent Continuous Sound Level (LA<sub>eq</sub>) to meet the intent of ANSI S1.13-1971, CAGI-PNEUROP S5.1 using four microphone locations.

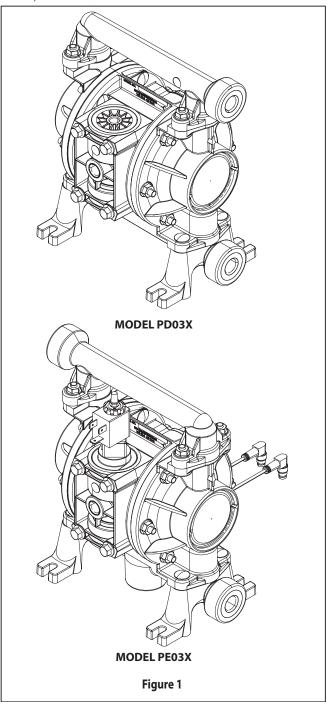



209 NORTH MAIN STREET - BRYAN, OHIO 43506



### **MODEL DESCRIPTION CHART**

Exar	ple: PX03 P - X X S - X X X - A X	Х
		î
	Standard Pump	1
		1
PE03		1
.en	r Body Material	1
	olypropylene	
Fluid	Connection Connection	1
۹ -	/8 - 18 NPTF - 1	1
В -	p 3/8 (3/8 - 19 BSP)	1
Fluid	Caps & Manifold Material	
) -	roundable Acetal (single port)	1
	roundable Acetal (multiple port)	1
	ynar PVDF (single port)	1
	ynar PVDF (multiple port) olypropylene (single port)	1
	olypropylene (multiple port)	1
	vare Material	1
	tainless Steel	
	Material	1
	cetal	1
	ynar PVDF	
	olypropylene	
S -	tainless Steel	
	Duckbill)	
Ball	Material	1
۹ -	antoprene antoprene	1
	ytrel	
	itrile (*) PR (*)	
	iton (*)	
	eoprene (*)	
5 -	tainless Steel	
	TFE	
V - (*)	iton	
		1
_	ragm Material	1
	antoprene ytrel	
	FFE / Santoprene	
٧-		
Revi	on	1
Α-	evision	1
Spec	alty Code 1 (Blank if no Speciality Code)	1
Λ_	olenoid 120 VAC,110 VAC AND 60 VDC	1
	olenoid 12 VDC, 24 VAC and 22 VAC	
	olenoid 240 VAC, 220 VAC AND 120 VDC	
	olenoid 24 VDC, 48 VAC and 44 VAC	1
	olenoid 12 VDC NEC / CEC	
	olenoid 24 VDC NEC / CEC	1
G-	olenoid 12 VDC ATEX / IECEx	1
H-	olenoid 24 VDC ATEX / IECEx	1
J-	olenoid 120 VAC NEC / CEC	
<b>K</b> -	olenoid 220VAC ATEX / IECEx	
	olenoid with no Coil	
	orted Motor (No major valve)	
	tandard Valve Block (No Solenoid)	
	cycle Sensing on Major Valve	
pec	alty Code 2 (Blank if no Speciality Code)	⅃
E-	ind of Stroke feedback + Leak Detection	
	nd of Stroke feedback + Leak Detection	
	nd of Stroke Reedback	
	ind of Stroke + Leak Detection ATEX / IECEx / NEC / CEC	
	eak Detection	
	eak Detection ATEX / IECEx / NEC / CEC	
	nd of Stroke NEC	
	nd of Stroke NEC / Leak Detection NEC	
0-	lo option	
	al Testing	

NOTICE: All possible options are shown in the chart, however, certain combinations may not be recommended. Consult a representative or the factory if you have questions concerning availability.

Page 2 of 12 PX03P-XXX-XXXX-AXXXX (en)

### **OPERATING AND SAFETY PRECAUTIONS**

#### READ, UNDERSTAND, AND FOLLOW THIS INFORMATION TO AVOID INJURY AND PROPERTY DAMAGE.





**<u>∧ WARNING</u>** EXCESSIVE AIR PRESSURE. Can cause personal injury, pump damage or property damage.

- Do not exceed the maximum inlet air pressure as stated on the pump model plate.
- Be sure material hoses and other components are able to withstand fluid pressures developed by this pump. Check all hoses for damage or wear. Be certain dispensing device is clean and in proper working condition.
- <u>★ WARNING</u> STATIC SPARK. Can cause explosion resulting in severe injury or death. Ground pump and pumping system.
- PX03P-XDS-XXX-AXXX and PX03P-XES-XXX-AXXX
  Groundable Acetal pumps: Use the pump ground lug
  provided. Connect to a 12 ga. (minimum) wire (kit is
  included) to a good earth ground source.
- Sparks can ignite flammable material and vapors.
- The pumping system and object being sprayed must be grounded when it is pumping, flushing, recirculating or spraying flammable materials such as paints, solvents, lacquers, etc. or used in a location where surrounding atmosphere is conducive to spontaneous combustion. Ground the dispensing valve or device, containers, hoses and any object to which material is being pumped.
- Secure pump, connections and all contact points to avoid vibration and generation of contact or static spark.
- Consult local building codes and electrical codes for specific grounding requirements.
- After grounding, periodically verify continuity of electrical path to ground. Test with an ohmmeter from each component (e.g., hoses, pump, clamps, container, spray gun, etc.) to ground to insure continuity. Ohmmeter should show 0.1 ohms or less.
- Submerse the outlet hose end, dispensing valve or device in the material being dispensed if possible. (Avoid free streaming of material being dispensed.)
- Use hoses incorporating a static wire.
- Use proper ventilation.
- Keep inflammables away from heat, open flames and sparks.
- Keep containers closed when not in use.
- **► WARNING** Pump exhaust may contain contaminants. Can cause severe injury. Pipe exhaust away from work area and personnel.
- In the event of a diaphragm rupture, material can be forced out of the air exhaust muffler.
- Pipe the exhaust to a safe remote location when pumping hazardous or inflammable materials.
- Use a grounded 3/8" minimum ID hose between the pump and the muffler.
- WARNING HAZARDOUS PRESSURE. Can result in serious injury or property damage. Do not service or clean pump, hoses or dispensing valve while the system is pressurized.
- Disconnect air supply line and relieve pressure from the system by opening dispensing valve or device and / or carefully and slowly loosening and removing outlet hose or piping from pump.
- MARNING HAZARDOUS MATERIALS. Can cause serious injury or property damage. Do not attempt to return a pump to the factory or service center that contains hazardous material. Safe handling practices must comply with local and national laws and safety code requirements.

- Obtain Material Safety Data Sheets on all materials from the supplier for proper handling instructions.
- ▲ WARNING EXPLOSION HAZARD. Models containing aluminum wetted parts cannot be used with 1,1,1-trichloroethane, methylene chloride or other halogenated hydrocarbon solvents which may react and explode.
- Check pump motor section, fluid caps, manifolds and all wetted parts to assure compatibility before using with solvents of this type.
- ▲ CAUTION Verify the chemical compatibility of the pump wetted parts and the substance being pumped, flushed or recirculated. Chemical compatibility may change with temperature and concentration of the chemical(s) within the substances being pumped, flushed or circulated. For specific fluid compatibility, consult the chemical manufacturer.
- ▲ CAUTION Maximum temperatures are based on mechanical stress only. Certain chemicals will significantly reduce maximum safe operating temperature. Consult the chemical manufacturer for chemical compatibility and temperature limits. Refer to PUMP DATA on page 1 of this manual.
- ▲ CAUTION Be certain all operators of this equipment have been trained for safe working practices, understand it's limitations, and wear safety goggles / equipment when required.
- <u>^</u> CAUTION Do not use the pump for the structural support of the piping system. Be certain the system components are properly supported to prevent stress on the pump parts.
- Suction and discharge connections should be flexible connections (such as hose), not rigid piped, and should be compatible with the substance being pumped.
- <u>CAUTION</u> Prevent unnecessary damage to the pump. Do not allow pump to operate when out of material for long periods of time.
- Disconnect air line from pump when system sits idle for long periods of time.
- <u>↑ CAUTION</u> Use only genuine ARO replacement parts to assure compatible pressure rating and longest service life.
- NOTICE Install the pump in the vertical position.
  The pump may not prime properly if the balls do not check by gravity upon start-up.
- NOTICE RE-TORQUE ALL FASTENERS BEFORE OPERATION. Creep of housing and gasket materials may cause fasteners to loosen. Re-torque all fasteners to insure against fluid or air leakage.
- NOTICE Replacement warning labels are available upon request: Static Spark" pn \ 93616-1, Diaphragm Rupture" pn \ 93122.
- ▲ WARNING = Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.
   ▲ CAUTION = Hazards or unsafe practices which could result in minor personal injury, product or property damage.
   NOTICE = Important installation, operation or

maintenance information.

PX03P-XXX-XXXA (en) Page 3 of 12

#### **GENERAL DESCRIPTION**

The ARO diaphragm pump offers high volume delivery even at low air pressure and a broad range of material compatibility options available. Refer to the model and option chart. ARO pumps feature stall resistant design, modular air motor / fluid sections.

Air operated double diaphragm pumps utilize a pressure differential in the air chambers to alternately create suction and positive fluid pressure in the fluid chambers, ball checks insure a positive flow of fluid.

Pump cycling will begin as air pressure is applied and it will continue to pump and keep up with the demand. It will build and maintain line pressure and will stop cycling once maximum line pressure is reached (dispensing device closed) and will resume pumping as needed.

### **AIR AND LUBE REQUIREMENTS**

# **WARNING** EXCESSIVE AIR PRESSURE. Can cause pump damage, personal injury or property damage.

- A filter capable of filtering out particles larger than 50 microns should be used on the air supply. There is no lubrication required other than the "O" ring lubricant which is applied during assembly or repair.
- If lubricated air is present, make sure that it is compatible with the "O" rings and seals in the air motor section of the pump.

### **OPERATING INSTRUCTIONS**

- Always flush the pump with a solvent compatible with the material being pumped if the material being pumped is subject to "setting up" when not in use for a period of time.
- Disconnect the air supply from the pump if it is to be inactive for a few hours.
- The outlet material volume is governed not only by the air supply but also by the material supply available at the inlet. The material supply tubing should not be too small or restrictive. Be sure not to use hose which might collapse.
- When the diaphragm pump is used in a forced-feed (flooded inlet) situation, it is recommended that a Check Valve" be installed at the air inlet.
- Secure the diaphragm pump legs to a suitable surface to insure against damage by vibration.

### **MAINTENANCE**

- Certain ARO "Smart Parts" are indicated which should be available for fast repair and reduction of down time.
- Provide a clean work surface to protect sensitive internal moving parts from contamination from dirt and foreign matter during service disassembly and reassembly.
- Keep good records of service activity and include pump in preventive maintenance program.
- Service Kits are available to service two separate Diaphragm Pump functions: 1. AIR SECTION, 2. FLUID SEC-TION. The Fluid Section is divided further to match typical active MATERIAL OPTIONS.

• Viton® is a registered trademarks of the Chemours Company • Hytrel® is a registered trademark of the DuPont Company •
• Santoprene® is a registered trademark of ExxonMobil • Lubriplate® is a registered trademark of Lubriplate Lubricants Company • Loctite® is a registered trademark of Henkel Corporation •

Page 4 of 12 PX03P-XXX-XXX-AXXX (en)

### PARTS LIST / PX03P-XXX-XXX-AXXX FLUID SECTION

● 637429-XX Fluid Section service kits include: Balls (see BALL OPTION, refer to -XX in chart below), Diaphragms (See DIAPHRAGM OPTION, refer to -XX in chart below) and item 19 (listed below), plus items 144, 174 and 94276 Lubriplate® grease (page 7).

	COMMON PARTS												
Item	Description (size)	Qty	Part No.	[Mtl]		Item	Description (size)	Qty	Part No.	[Mtl]			
<b>2</b> 1	Connecting Rod	(1)	97122	[SS]		27	Bolt (1/4" - 20 x 1-1/8")	(12)	96471	[SS]			
5	Diaphragm Washer	(2)	96556	[GFN]		29	Nut (1/4" - 20)	(20)	93828	[SS]			
26	Bolt (1/4" - 20 x 1-1/8")	(8)	96471	[SS]		77	Logo Plate	(2)	93264	[A]			

	MANIFOLD / FLUID CAP OPTIONS PX03P-XXS-XXX-AXXX													
				Polypr	opylene			Kyna	r PVDF		Gro	undak	le Acetal	
			PX03P-	X <u>P</u> S-	PX03P-X	( <u>R</u> S-	PX03P-2	K <u>K</u> S-	PX03P-)	(LS-	PX03P-	X <u>D</u> S- PX03P-X		X <u>E</u> S
Item	Description (size)	Qty	Part No.	[Mtl]	Part No.	[Mtl]	Part No.	[Mtl]	Part No.	[Mtl]	Part No.	[Mtl]	Part No.	[Mtl]
6	Diaphragm Nut (1/4" - 20)	(2)	93810-7	[P]	93810-7	[P]	93810-3	[K]	93810-3	[K]	93810-2	[D]	93810-2	[D]
15	Fluid Cap	(2)	96460-1	[P]	96460-1	[P]	96460-3	[K]	96460-3	[K]	96460-2	[GA]	96460-2	[GA]
43	Ground Strap	(1)									92956-1	[SS]	92956-1	[SS]
57	Ground Kit Assembly (not shown)	(1)									66885-1		66885-1	
60	Inlet Manifold (NPTF)	(1)	96468-1	[P]	96468-7	[P]	96468-3	[K]	96468-9	[K]	96468-2	[GA]	96468-8	[GA]
00	(BSP)	(1)	96468-4	[P]	96468-10	[P]	96468-6	[K]	96468-12	[K]	96468-5	[GA]	96468-11	[GA]
61	Outlet Manifold (NPTF)	(1)	96469-1	[P]	96469-1	[P]	96469-3	[K]	96469-3	[K]	96469-2	[GA]	96469-2	[GA]
01	(BSP)	(1)	96469-4	[P]	96469-4	[P]	96469-6	[K]	96469-6	[K]	96469-5	[GA]	96469-5	[GA]
63	Pipe Plug (NPTF)	(1)			94478-1	[PPG]			94478-3	[K]			94478-2	[D]
03	(BSP)	(1)			96559-1	[PPG]			96559-3	[K]			96559-2	[D]

SEAT OPTIONS PX03P-XXS- <u>X</u> XX-AXXX						BALL / DUCKBILL OPTIONS PX03P-XXS-X <u>X</u> X-AXXX									
	"21"	'				<b>0</b> "22" (5/8" dia.)					<b>0</b> 42	"			
- <u>X</u> XX	Seat	Qty	[Mtl]		-X <u>X</u> X	Ball	Qty	[Mtl]		-X <u>X</u> X	Duckbill	Qty	[Mtl]		
- <u>D</u> XX	96580-2	(4)	[D]		-X <u>A</u> X	96481-A	(4)	[Sp]		-X <u>J</u> X	96744-2	(4)	[B]		
- <u>K</u> XX	96580-3	(4)	[K]		-X <u>C</u> X	96481-C	(4)	[H]		-X <u>N</u> X	96744-3	(4)	[N]		
- <u>P</u> XX	96580-1	(4)	[P]		-X <u>S</u> X	96513	(4)	[SS]		-X <u>L</u> X	96744-4	(4)	[V]		
- <u>S</u> XX	96537	(4)	[SS]		-X <u>T</u> X	96481-4	(4)	[T]		-X <u>K</u> X	96744-1	(4)	[E]		
- <u>0</u> XX	96745	(4)	[P]		-X <u>V</u> X	96481-3	(4)	[V]							

NOTE: Item 19 "O" ring is not used with PX03P-XXX-0XX-AXXX seat option.

	DIAPHRAGM OPTIONS PX03P-XXS-XX <u>X</u> -AXXX														
	SERVICE KIT	0	"7"		0 '	<b>'8</b> "		<b>0</b> "1	9″						
	- <u>X</u> X = (Ball)							"O" Ring							
-XX <u>X</u>	-X <u>X</u> = (Diaphragm)	Diaphragm	Qty	[Mtl]	Diaphragm	Qty	[Mtl]	(3/32" x 1-1/8" OD)	Qty	[Mtl]					
-XX <u>A</u>	637429-XA	96533-A	(2)	[Sp]				93761	(4)	[E]					
-XX <u>C</u>	637429-XC	96533-C	(2)	[H]				Y325-119	(4)	[B]					
-XX <u>T</u>	637429-XT	96538	(2)	[T]	96533-A	(2)	[Sp]	96514	(4)	[T]					
-XX <u>V</u>	637429-XV	96558	(2)	[V]				Y327-119	(4)	[V]					

	DUAL INLET / DUAL OUTLET KITS 637442-X											
			Polypro	pylene	Grounda	ble Acetal						
			637442	- <b>1</b> (NPT)	(NPT) <b>637442-2</b> (NP							
Item	Description (size)	Qty	Part No.	[Mtl]	Part No.	[Mtl]						
17	<b>Dual Outlet Manifold</b>	(2)	96520-1	[P]	96520-2	[GA]						
18	Dual Inlet Manifold	(2)	96519-1	[P]	96519-2	[GA]						
19	O" Ring (3/32" x 1-1/8" OD)	(4)	96514	[T]	96514	[T]						

Smart Parts" keep these items on hand in addition to the service kits for fast repair and reduction of down time.


#### **MATERIAL CODE**

- [A] = Aluminum
- [B] = Nitrile [D] = Acetal
- [E] = E.P.R.
- [GA] = Groundable Acetal [GFN] = Glass Filled Nylon
- [H] = Hytrel

- [K] = Hydrel
  [K] = Kynar PVDF
  [N] = Neoprene
  [P] = Polypropylene
  [PPG] = Glass Filled
- Polypropylene
- [Sp] = Santoprene [SS] = Stainless Steel
- [T] = PTFE
- [V] = Viton

PX03P-XXX-XXX-AXXX (en) Page 5 of 12

### PARTS LIST / PX03P-XXX-XXX-AXXX FLUID SECTION

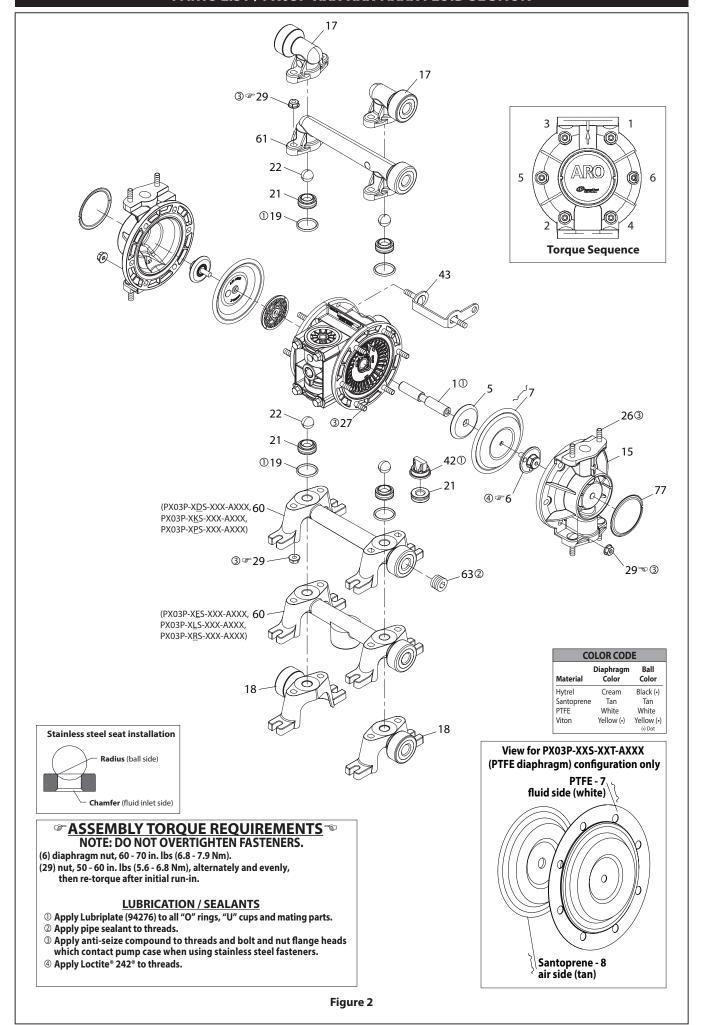

Page 6 of 12 PX03P-XXX-XXXX-AXXXX (en)

### PARTS LIST / PX03P-XXX-XXX-AXXX AIR MOTOR SECTION

1 Indicates parts included in 637428 Air Section Repair Kit.

Indicates parts included in 03/428 Air Section Repair Nr.								
Item	Description (size)	Qty	Part No.	[Mtl]				
101	Center Body	(1)	97008	[PPG]				
103R	Cover (right side)	(1)	96488	[D]				
103L	Cover (left side)	(1)	96489	[D]				
107	Plug, Small	(1)	96353	[D]				
111	Major Valve Spool (PX03P)	(1)	95919	[D]				
118	Actuator Pin	(2)	94874-1	[SS]				
<b>121</b>	Washer	(2)	96092	[D]				
123	Screw (#4 - 20 x 1/2")	(12)	96093	[SS]				
126	Pipe Plug	(2)	93832-3	[K]				
129	Muffler Baffle (PX03P-XXX-XXX-AX <u>0</u> X)	(1)	96542	[P]				
130	Gasket	(1)	96531	[SY]				
<b>132</b>	Air Manifold Gasket	(1)	96214-1	[B]				
134	Flange Bolt (1/4" - 20 x 3")	(4)	96487	[SS]				
135	Valve Block	(1)	96204	[PPG]				
136	Plug, Large	(1)	96352	[D]				
<b>137</b>	"O" Ring (1/16" x 1-5/8" OD)	(3)	Y325-29	[B]				
<b>138</b>	"U" Cup Packing (1/8" x 1" OD)	(1)	94395	[U]				
<b>139</b>	"U" Cup Packing (1/8" x 1-7/16" OD)	(1)	96383	[U]				
140	Valve Insert	(1)	93276	[CK]				

Item	Description (size)	Qty	Part No.	[Mtl]
141	Valve Plate	(1)	96173	[CK]
<b>1</b> 44	"U" Cup Packing (1/8" x 3/4" OD)	(2)	Y187-47	[B]
<b>©</b> 166	"O" Ring (1/16" x 1-1/4" OD)	(1)	Y325-24	[B]
<b>167</b>	Pilot Piston (includes 168 and 169)	(1)	67382	[D]
168	"O" Ring (1/16" x 7/16" OD)	(2)	96459	[U]
169	"U" Cup Packing (1/8" x 5/8" OD)	(1)	96384	[U]
170	Spool Bushing	(1)	96090	[D]
<b>171</b>	"O" Ring (1/16" x 13/16" OD)	(2)	Y325-17	[B]
<b>173</b>	"O" Ring (3/32" x 7/8" OD)	(2)	Y325-115	[B]
<b>174</b>	"O" Ring (3/32" x 11/32" OD)	(2)	Y325-105	[B]
<b>3</b> 200	Porting Gasket	(1)	96364	[B]
<b>©</b> 232	"O" Ring (1/16" x 3/8" OD)	(4)	Y325-10	[P]
236	Nut (1/4" - 20)	(4)	Y12-4-S	[SS]
0 0	Lubriplate FML-2 Grease	(1)	94276	
	Lubriplate Grease, 10 Pack		637308	

#### **MATERIAL CODE**

[B] = Nitrile [PPG] = Glass Filled Polypropylene [CK] = Ceramic [SS] = Stainless Steel

[CK] = Ceramic [SS] = Stainless Ste [D] = Acetal [SY] = Syn-Seal [K] = Kynar PVDF [U] = Polyurethane

[P] = Polypropylene

### **DIAPHRAGM PUMP SERVICE**

#### **GENERAL SERVICE NOTES:**

- Inspect and replace old parts with new parts as necessary.
   Look for deep scratches on metallic surfaces, and nicks or cuts in "O" rings.
- Tools needed to complete disassembly and repair:
- 5/8" socket or wrench, 7/16" socket or wrench, 3/8" socket or wrench, 5/16" Allen wrench, T-10 Torx screwdriver, torque wrench (measuring inch pounds), "O" ring pick.

### **FLUID SECTION DISASSEMBLY**

- 1. Remove (61) top manifold.
- 2. Remove (19) "O" rings, (21) seats and (22) balls.
- 3. Remove (60) bottom manifold.
- 4. Remove (19) "O" rings, (21) seats and (22) balls.
- 5. Remove (15) fluid caps.
- 6. Remove (6) diaphragm nut, (7) or (7 / 8) diaphragms and (5) washer.
- 7. Remove (1) connecting rod from air motor.
- Carefully remove remaining (6) diaphragm nut, (7) or (7 / 8) diaphragms and (5) washer from (1) connecting rod.
   Do not mar surface of connecting rod.

### **FLUID SECTION REASSEMBLY**

- Reassemble in reverse order.
- Lubricate (1) connecting rod with Lubriplate or equivalent "O" ring lubricant.
- Install (5) washers with ID chamfer toward diaphragm.
- When replacing PTFE diaphragms, install the 96533-A Santoprene diaphragm behind the PTFE diaphragm.

### AIR MOTOR SECTION SERVICE

Service is divided into two parts - 1. Pilot Valve, 2. Major Valve.

 Air Motor Section Service is continued from Fluid Section repair.

### **PILOT VALVE DISASSEMBLY**

- 1. Remove (123) screws, releasing (103) covers, (121) washers, (118) actuator pins and (167) pilot piston.
- 2. Remove (170) spool bushing and inspect inner bore of bushing for damage.

### **PILOT VALVE REASSEMBLY**


- Clean and lubricate parts not being replaced from service kit.
- 2. Assemble (171) "O" rings to (170) bushing and assemble bushing into (101) center body.
- 3. Lubricate and assemble (167) pilot piston assembly into (170) bushing.
- 4. Assemble (173 and 174) "O" rings and (121) washers to (103) covers, then insert (118) actuator pins through assembly.
- Assemble (144) "U" cups (note the lip direction) and (103) covers to (101) center body, securing with (123) screws.
   NOTE: Tighten (123) screws to 4 6 in. lbs (0.45 0.68 Nm).

### **MAJOR VALVE DISASSEMBLY**

- 1. Unthread (123) screws, releasing (129) muffler baffle.
- 2. Unthread (134) bolts and pull (135) valve block and components from (101) center body.
- 3. Remove (132) gasket, (141) valve plate and (140) valve insert from (135) valve block.
- 4. Remove (134) bolts, releasing (107 and 136) plugs and (111) spool.

PX03P-XXX-XXXX (en) Page 7 of 12

### PARTS LIST / PX03P-XXX-XXX-AXXX AIR MOTOR SECTION

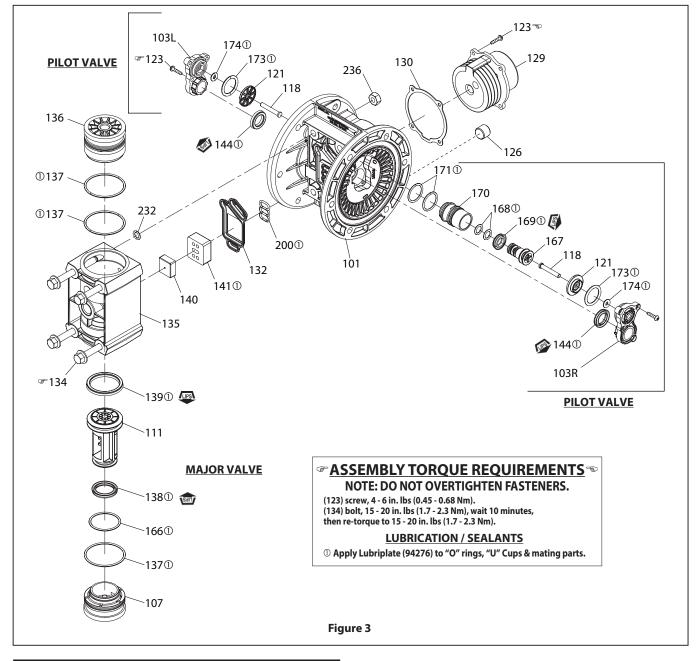

### **MAJOR VALVE REASSEMBLY**

- Assemble new (139 and 138) U" cups on (111) spool -LIPS MUST FACE EACH OTHER.
- 2. Assemble (137) O" rings to (136) large plug.
- 3. Assemble (137 and 166) O" rings to (107) small plug.
- 4. Insert (111) spool into (136) large plug, then insert (136) large plug into (135) valve block, being sure the (111) spool is rotated to accept (140) valve insert.
- 5. Assemble (107) small plug into (135) valve block.
- 6. Assemble (140) valve insert and (141) valve plate to (135) valve block. Note: Assemble (140) valve insert with dished" side toward (141) valve plate. Assemble (141) valve plate with identification dot toward (132) gasket.
- 7. Assemble (132 and 200) gaskets and (135) valve block to (101) center body, securing with (134) bolts. NOTE: Tighten (134) bolts to 15 20 in. lbs (1.7 2.3 Nm).
- 8. Assemble (130) gasket and (129) muffler baffle to (101) center body, securing with (123) screws. **NOTE:** Tighten (123) screws to 4 6 in. lbs (0.45 0.68 Nm).

Page 8 of 12 PX03P-XXX-XXXX-AXXX (en)

### **TROUBLESHOOTING**

### Product discharged from air exhaust.

- Check for diaphragm rupture.
- Check tightness of (6) diaphragm nut.

### Air Bubbles in product discharge.

- Check connections of suction plumbing.
- Check "O" rings between intake manifold and fluid caps.
- Check tightness of (6) diaphragm nut.


# Pump blows air out main exhaust when stalled on either stroke.

- Check "U" cups on (111) spool in major valve.
- Check (141) valve plate and (140) insert for wear.
- Check (169) U" cup on (167) pilot piston.

# Pump blows air out main exhaust when stalled on either stroke.

- Check air supply.
- Check for plugged outlet hose.
- For the pump to prime itself, it must be mounted in the vertical position so that the balls will check by gravity.
- Check for pump cavitation suction pipe should be sized at least as large as the inlet thread diameter of the pump for proper flow if high viscosity fluids are being pumped. Suction hose must be non-collapsible type, capable of pulling a high vacuum.
- Check all joints on intake manifolds and suction connections. These must be airtight.
- Inspect the pump for solid objects lodged in the diaphragm chamber or the seat area.

### **DIMENSIONAL DATA**

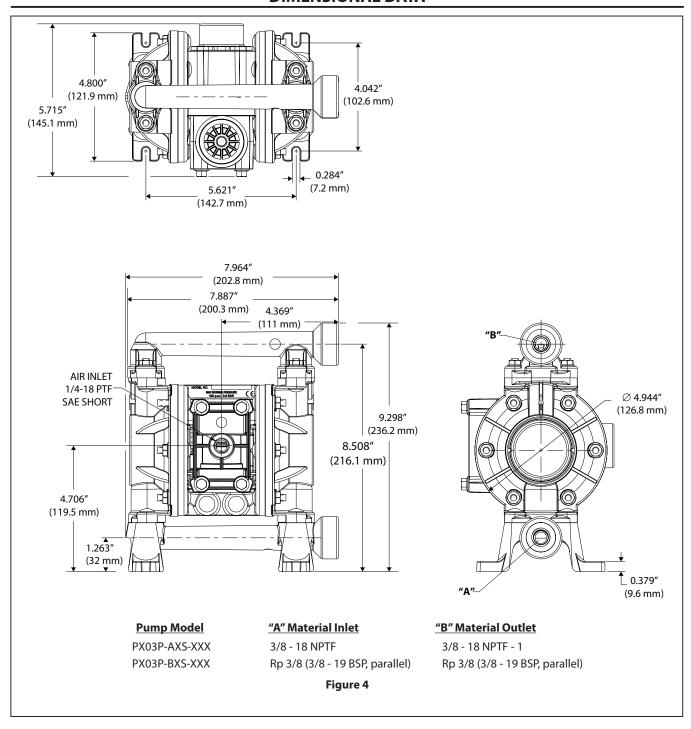

PX03P-XXX-XXXX (en) Page 9 of 12

### **ACCESSORIES**

76763 Wall Mount Bracket 66073-1 Air Line Connection Kit **Dual Inlet/Dual Outlet Kits** 637442-1 (NPT Polyproplyene) 637442-2 (NPT Acetal)

Page 10 of 12 PX03P-XXX-XXXX-AXXX (en)

PX03P-XXX-XXXX (en) Page 11 of 12

