




**SIG Assault Rifles  
SG 550 and SG 551  
Caliber 5.56 mm (.223)**

**Manual**

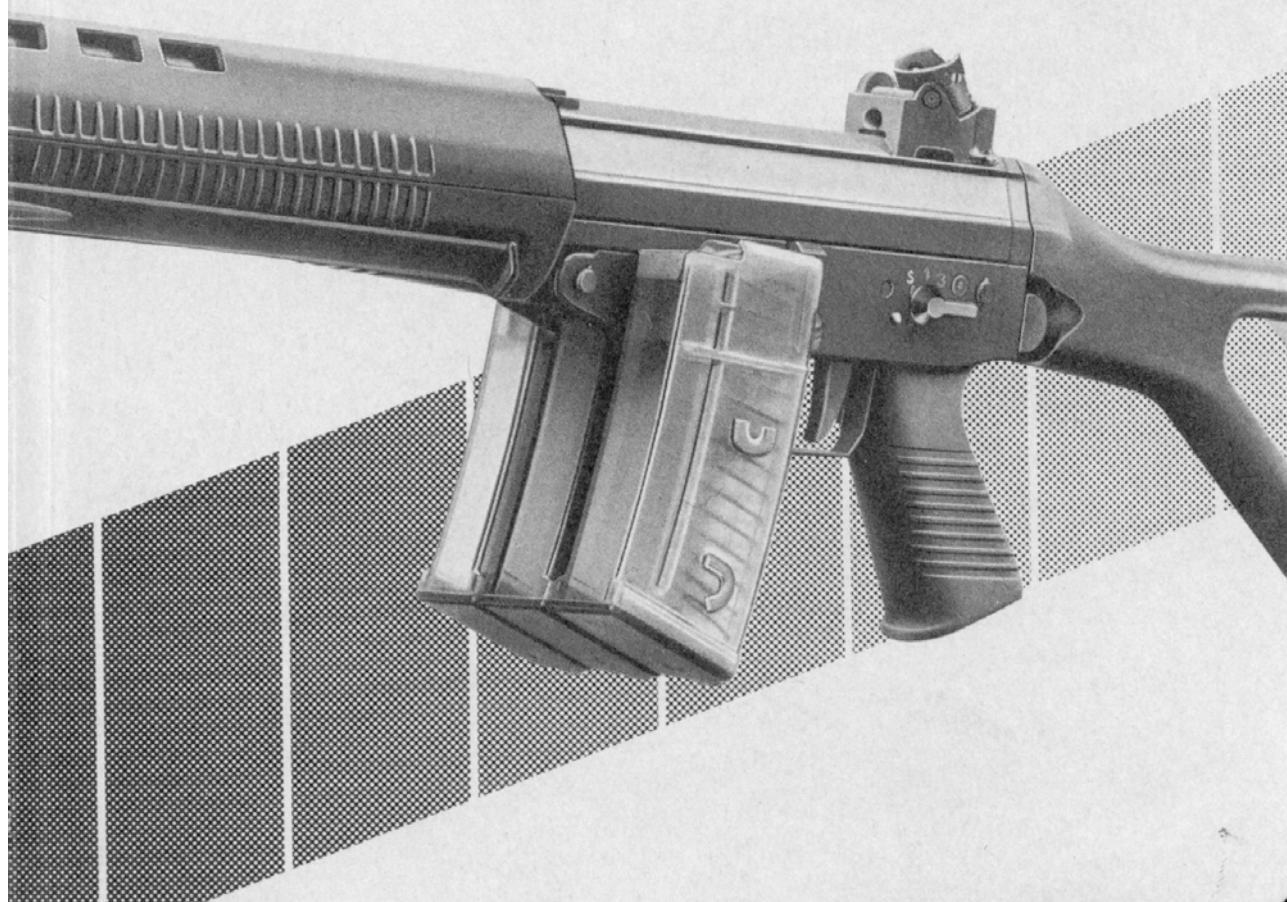

## Contents.

### 1. SAFETY RULES

### 2. WEAPON THEORY

- 2.1 Weapon description
- 2.2 Technical specifications
- 2.3 Accessories

### 3. HANDLING

- 3.1 Important instructions
- 3.2 Loading the weapon
- 3.3 Unloading
- 3.4 Changing the magazine
- 3.5 Reloading
- 3.6 Filling and coupling of magazines
- 3.7 Aiming, firing
- 3.8 Adjusting
- 3.9 Gas valve position
- 3.10 Folding the butt
- 3.11 Firing with mittens
- 3.12 Rifle grenades
- 3.13 Use of accessories
- 3.14 Field stripping
- 3.15 Assembly
- 3.16 Function check
- 3.17 Procedure in case of malfunction

### 4. MAINTENANCE

- 4.1 Types of maintenance
- 4.2 Cleaning and lubrication procedures

### 5. FUNCTION

- 5.1 Weapon function
- 5.2 Trigger functions

### 6. APPENDIX

- 6.1 List of parts
- 6.2 Exploded drawing

## 1. Safety rules

- The shooter should always consider the weapon as loaded and ready to fire until he has personally convinced himself of the contrary by unloading it.
- Use only commercial grade ammunition.
- Use only ammunition that corresponds to the caliber of the weapon.
- During all manipulations point the weapon in a safe direction.
- Never aim the weapon at any object you do not intend to shoot at.
- Do not load the weapon until immediately before use.
- Do not place your finger on the trigger until the target has been sighted.
- Unload weapon immediately after shooting is finished.
- Detach bolt and magazine from the weapon prior to transportation.
- Keep weapon and ammunition separately and under lock and key.
- Never leave the weapon unattended and keep it out of the reach of children.

## 2. WEAPON THEORY

### 2.1 Weapon description

#### 2.1.1 General

The SIG assault rifle SG 550 or 551 is a gas operated weapon with rotary bolt mechanism. The operation and maintenance of the assault rifle SIG SG 550 and the short version SIG SG 551 is identical.



Figure 1

#### SIG assault rifle SG 550

Standard version with folding butt, bipod and carrying sling

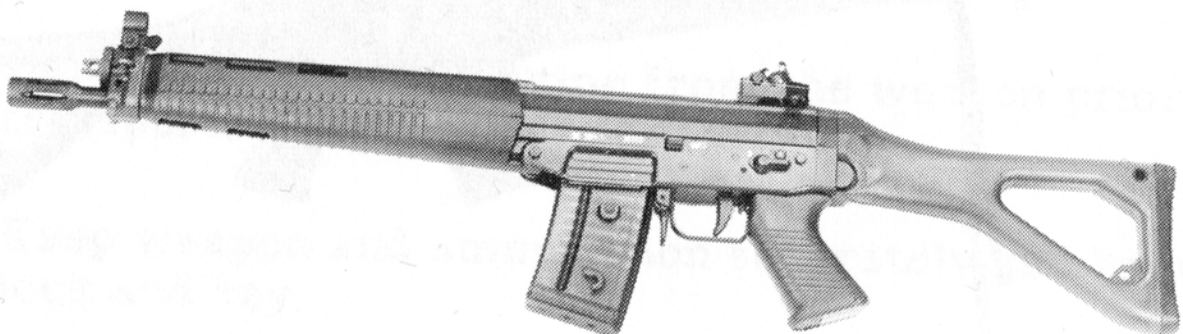


Figure 2

#### SIG assault rifle SG 551



Short version with folding butt.

The SIG assault rifle SG 550/551 can be used:

- at distances of up to 400 m,  
in semi automatic fire  
in rapid semi automatic fire  
in three round bursts  
in full auto operation
- at distances of up to 600 m, when fitted with telescopic sights
- with the bayonet attached, as a club and as a blank weapon (on SG 550 only)
- as a grenade launcher (on SG 550 only)

The SG 550/551 can be fired with the butt in the normal position or folded back.

#### 2.1.2 Barrel with receiver and gas system

The barrel is screwed into the receiver. The muzzle is fitted with a flash suppressor. The front sight mount, which is fixed to the barrel, contains the gas port, accepts the front sight and gas system and also serves as a support for the handguard.

The receiver guides the bolt and houses the locking system. The rear sight mount with diopter drum is also mounted on top of the receiver.

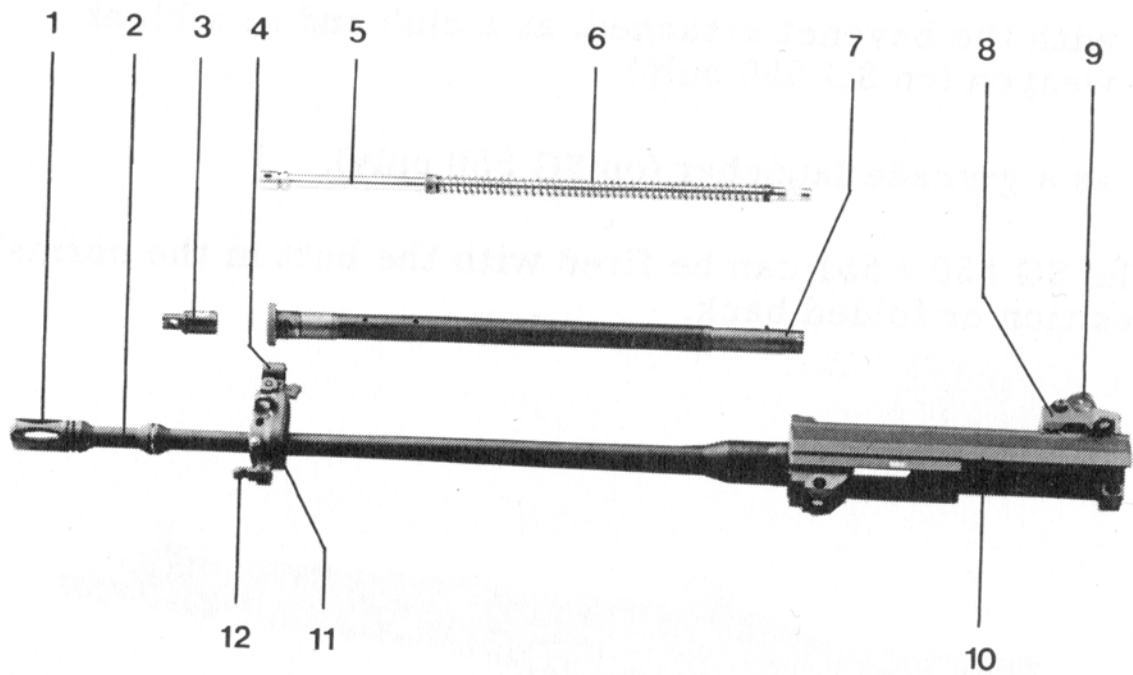


Figure 3

Barrel with upper receiver and gas system

- |                     |                                  |
|---------------------|----------------------------------|
| 1. Flash suppressor | 7. Gas tube                      |
| 2. Barrel           | 8. Rear sight mount              |
| 3. Gas valve        | 9. Diopter drum                  |
| 4. Front sight      | 10. Receiver casing              |
| 5. Gas piston       | 11. Front sight mount            |
| 6. Recoil spring    | 12. Bayonet lug (on SG 550 only) |

### 2.1.3. Bolt

The bolt consists of two main parts:

- bolt head
- bolt carrier

#### a. Bolt head

The bolt head locks the bolt assembly, houses the firing pin and the extractor and feeds the cartridge to the chamber.

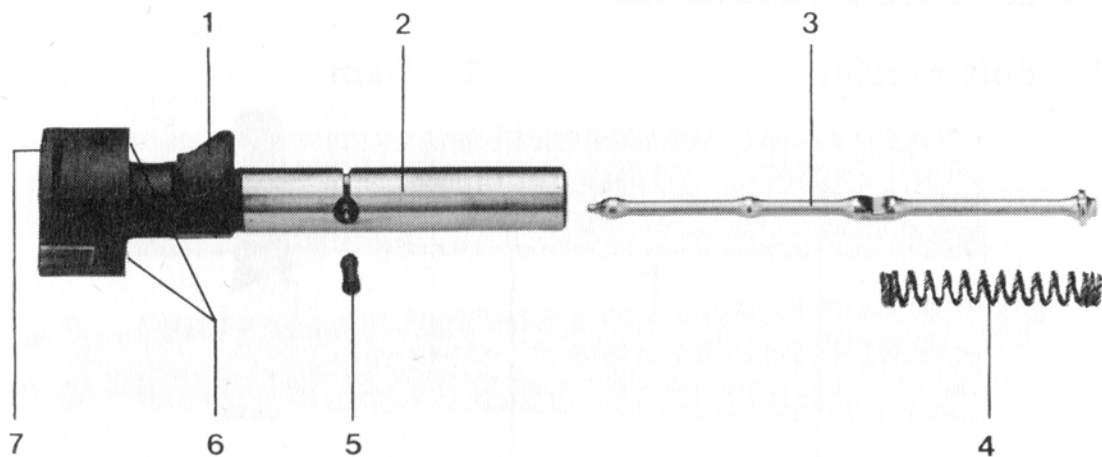


Figure 4

#### Bolt head

1. Control cam
2. Bolt head
3. Firing pin
4. Firing pin spring
5. Firing pin retaining stud
6. Locking lug
7. Extractor

b. Bolt carrier

The bolt carrier guides the bolt head, controls the locking and unlocking by means of the cam, connects the bolt to the gas system and cocks the hammer.

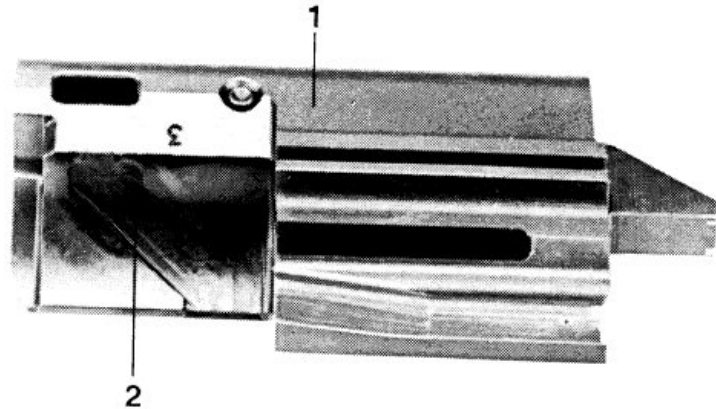


Figure 5

Bolt carrier from left

1. Bolt carrier

2. Cam

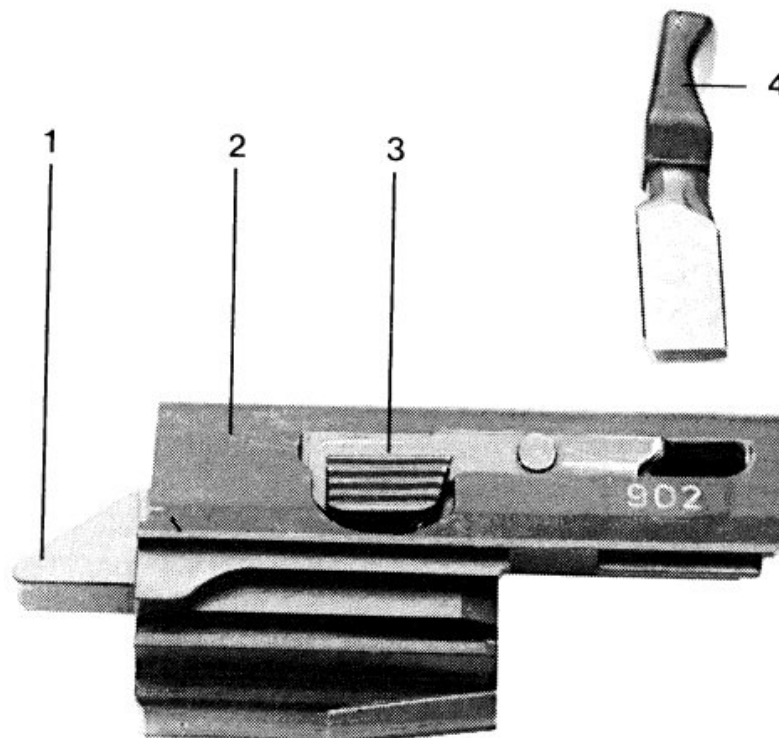


Figure 6

Bolt carrier from right

1. Cocking lug

2. Bolt carrier

3. Bolt handle catch

4. Bolt handle

#### 2.1.4. Handguard and bipod

The handguard protects the barrel and the gas system from damage and provides heat protection. The bipod on the SIG SG 550 can be used to support the rifle when firing.

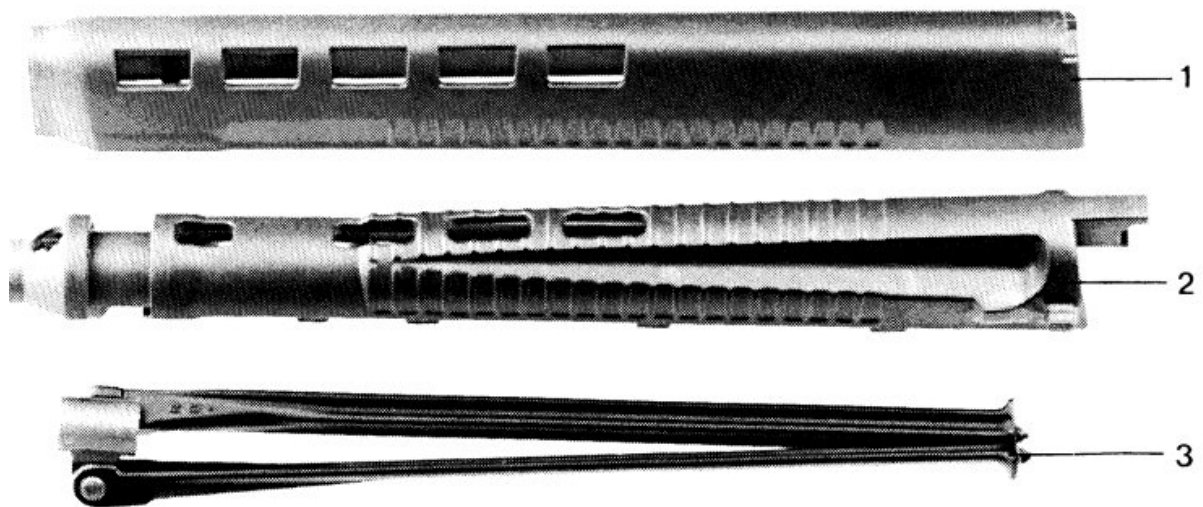


Figure 7

#### Hand guard with bipod

1. Handguard, upper part
2. Handguard, lower part
3. Bipod

#### 2.1.5. Trigger assembly and butt

The trigger assembly comprises all the parts required for firing a shot. The safety lever on both sides can be set to four positions.

Position "S"	The weapon is locked in the safe position.
--------------	--


Position "1"	The weapon will fire semi auto.
--------------	---------------------------------

Position "3"	The weapon fires 3-round burst. After each burst, the trigger must be released and then pulled again.
--------------	---

Position "20"	The weapon fires in the full auto mode.
---------------	---


By pivoting the trigger guard to the right or left side, the trigger becomes accessible for shooting with mittens. For safety reasons the trigger guard must not be shifted until just before firing the weapon, and after firing it should be immediately replaced in the normal position.

The folding butt is made of high strength synthetic material. In the firing position it is held by the butt locking mechanism, and when folded it's held by spring pressure on the handguard.

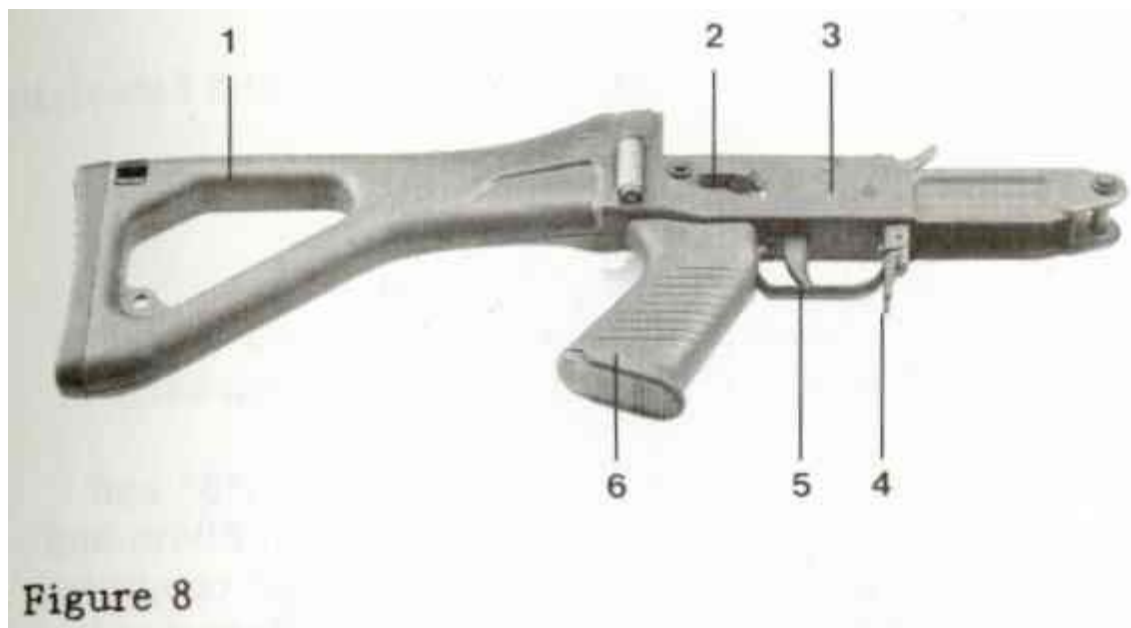

Trigger assembly and butt from right

- |                   |                   |
|-------------------|-------------------|
| 1. Butt           | 4. Magazine catch |
| 2. Safety lever   | 5. Trigger        |
| 3. Trigger casing | 6. Pistol grip    |

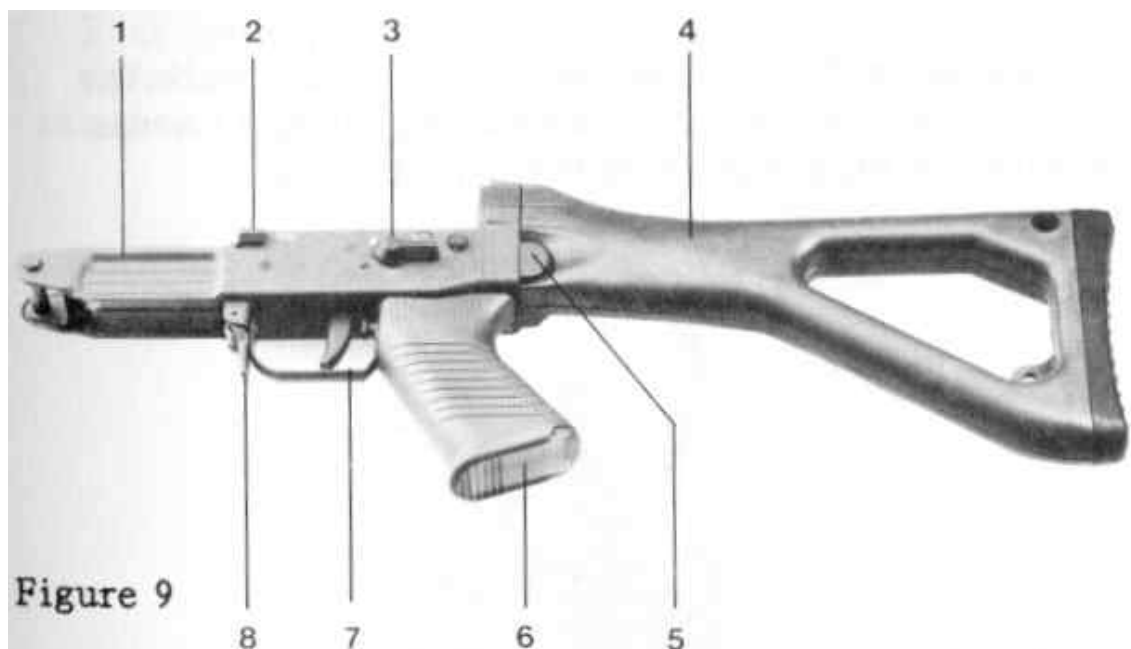

Trigger assembly and butt from left

- |                   |                |
|-------------------|----------------|
| 1. Trigger casing | 5. Butt catch  |
| 2. Bolt catch     | 6. Pistol grip |

- |                 |                   |
|-----------------|-------------------|
| 3. Safety lever | 7. Trigger guard  |
| 4. Butt         | 8. Magazine catch |
- 2.1.6 Sights mechanism

The sights mechanism comprises the rear sight and foresight.

The rear sight is made up of the:

- ❑ Rear sight mount
- ❑ Diopter drum
- ❑ Windage correction screw
- ❑ Elevation correction screw

The diopter drum can be set to positions "1", "2", "3", and "4", corresponding to firing ranges 100 m, 200 m, 300 m, and 400 m. The positions marked in white correspond to aiming point = point of impact.

The red "3" position corresponds to aiming point "black 6" at 300 m.

Sighting position "1" is designed for immediate firing, and two luminous dots are fitted laterally for aiming at night.

The foresight with tunnel is fixed to its mount with the foresight screw. A folding foresight is provided for use at with the night sights on the diopter drum.



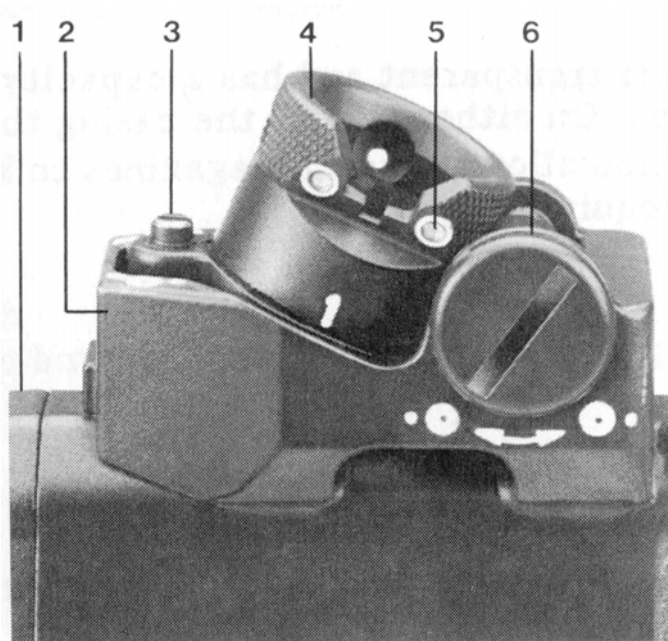


Figure 10

Rear sight assembly

- |                               |                             |
|-------------------------------|-----------------------------|
| 1. Receiver casing            | 4. Rear sight drum          |
| 2. Rear sight mount           | 5. Night sight              |
| 3. Elevation correction screw | 6. Windage correction screw |

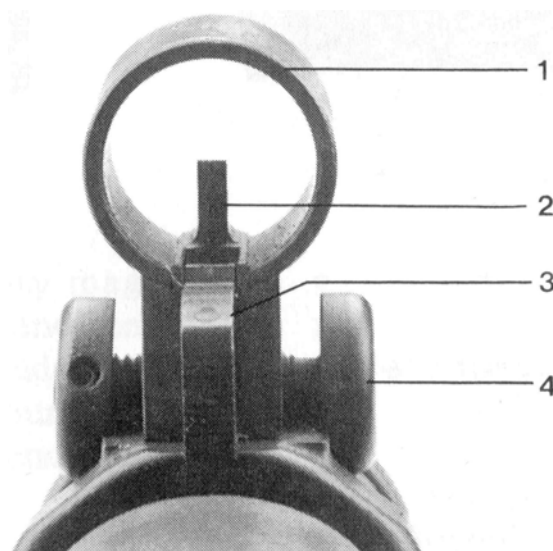


Figure 11

Front sight

- |                       |                      |
|-----------------------|----------------------|
| 1. Front sight tunnel | 3. Night front sight |
|-----------------------|----------------------|

2. Front sight

4. Front sight screw

#### 2.1.7. Magazine

The magazine is transparent and has a capacity of twenty or thirty rounds. On either side of the casing there is a mechanism, that allows several magazines to be connected if required.

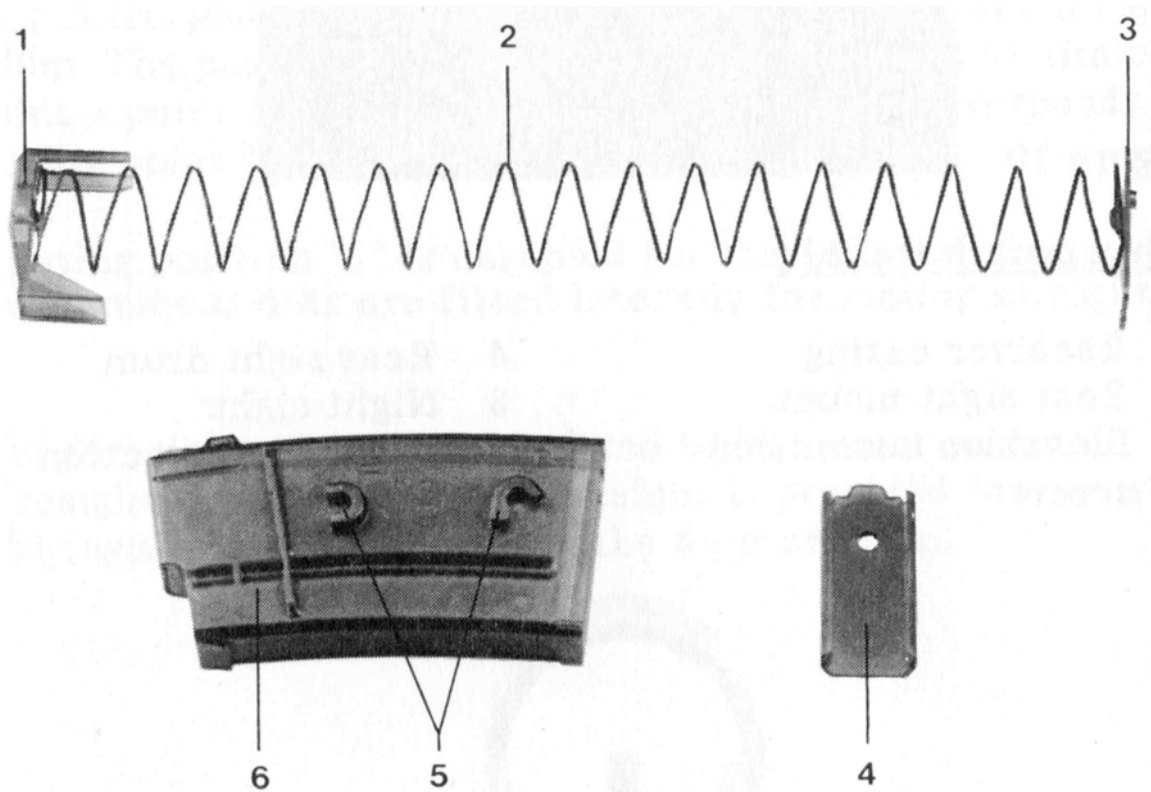


Figure 12

#### Magazine, dismantled

1. Feeder
2. Magazine spring
3. Magazine floorplate catch
4. Magazine floorplate
5. Magazine coupling lugs
6. Magazine casing

## 2.2. Technical specifications

		SG 550	SG 551
Dimensions	mm		
Caliber	mm	5.56x45	5.56x45
Total length	mm	998	833
Length with butt folded	mm	772	607
Barrel			
Barrel length	mm	363	363
Number of grooves		6	6
Rifling:			
SG550-1/ SG551-1	right	inches 10	10
SG550-2/ SG551-2	right	inches 7	7
Sights			
Type		Diopter sights	
Sight base	mm	540	466
Range adjustment	m		100 to 400
Weight			
Weapon incl. empty magazine	kg	4.1	3.4
Empty 20 rd. magazine	g	95	95
Empty 30 rd. magazine	g	110	110
Loaded 20 rd. magazine	g	340	340
Loaded 30 rd. magazine	g	475	475

Subject to change without notice

### 2.3. Accessories

Every SIG assault rifle SG 500/551 has the following accessories:

- ❑ Carrying sling
- ❑ Loading aid
- ❑ Cleaning kit

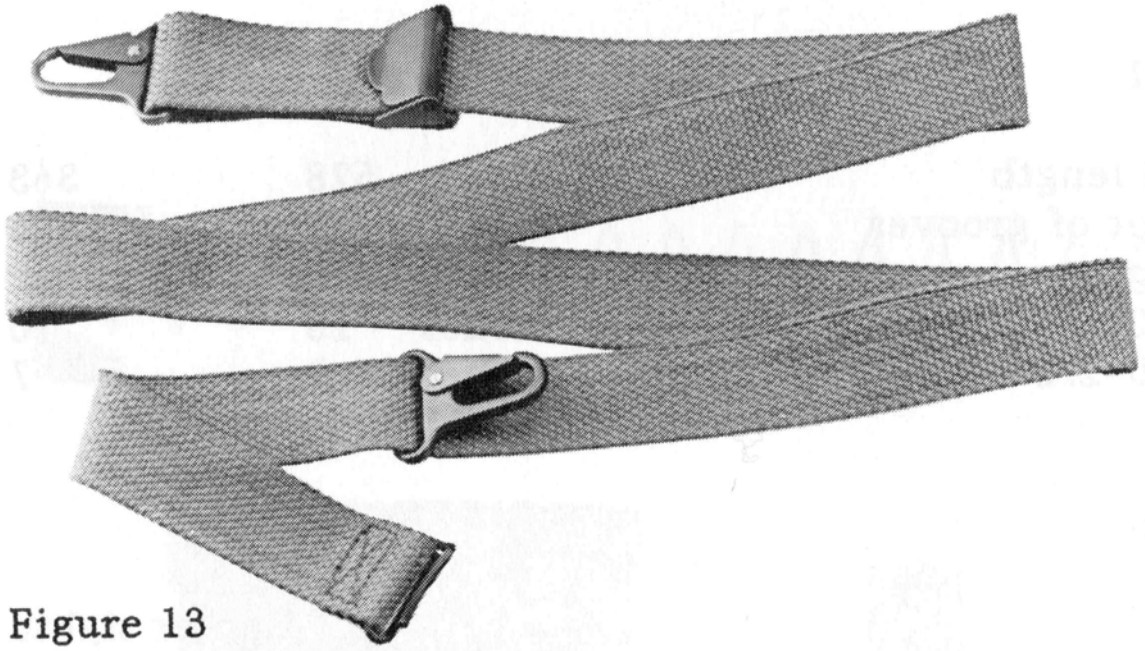


Figure 13

Carrying sling in woven nylon with two hooks, an adjustment clip and a buckle

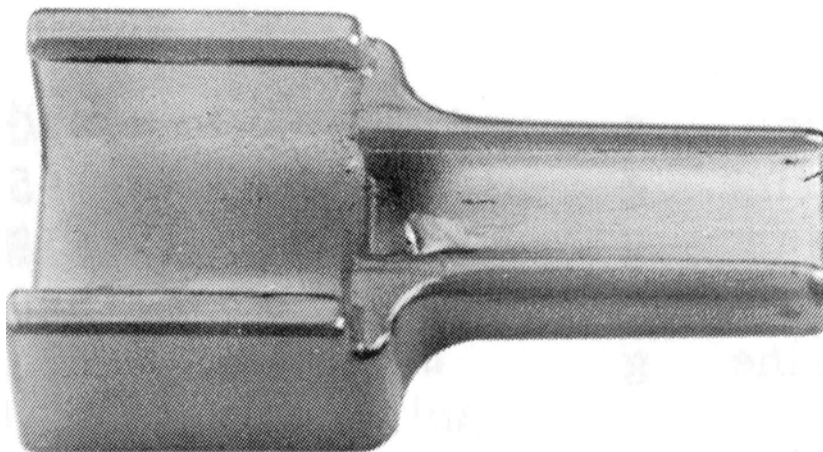


Figure 14

Loading tool

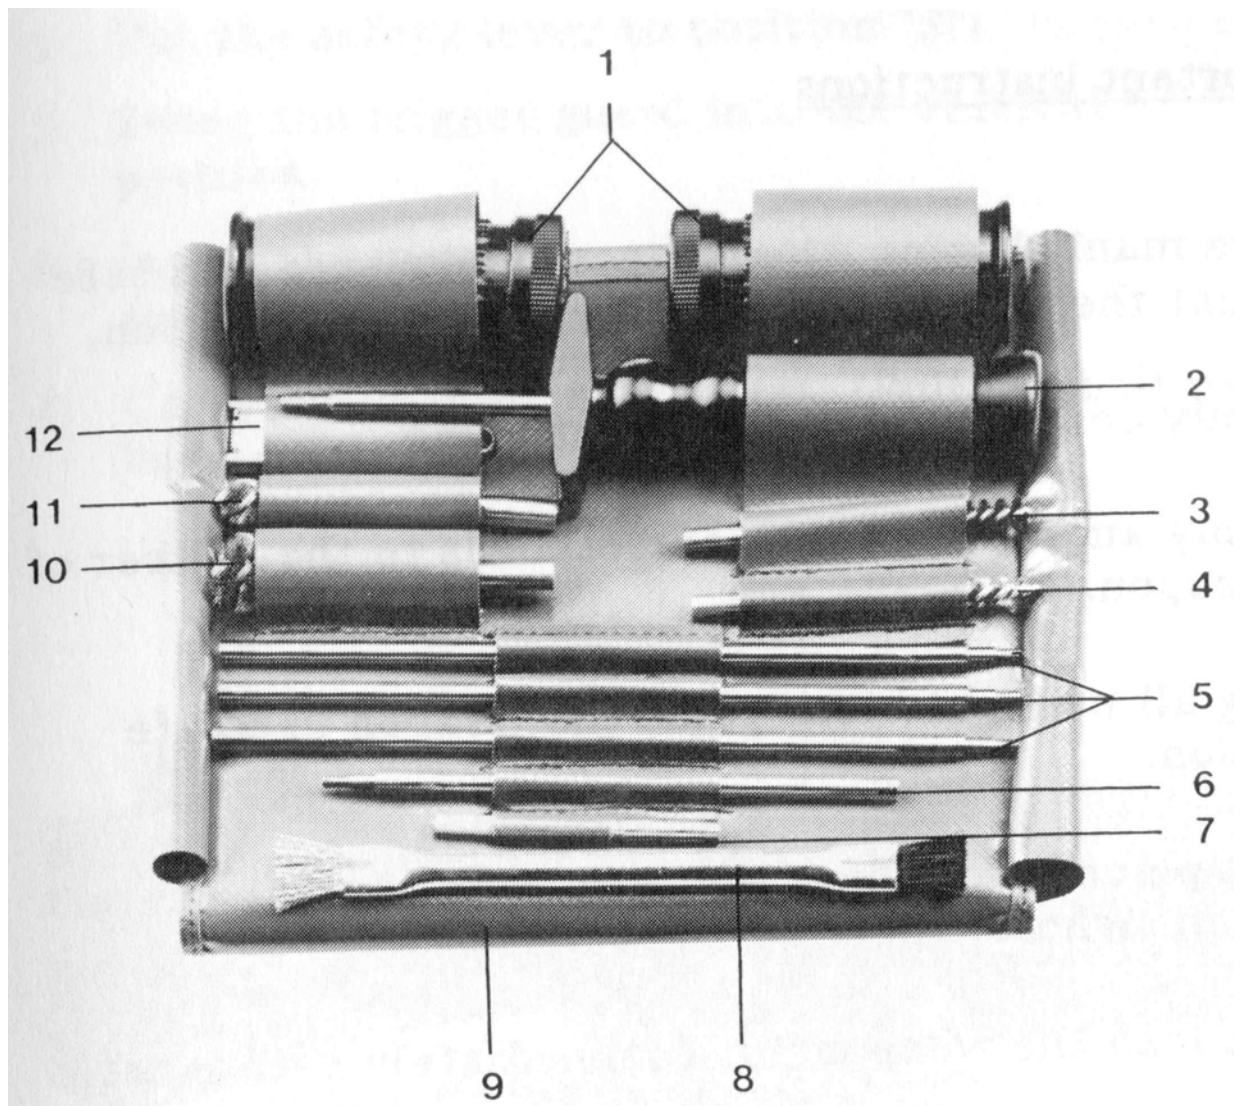


Figure 15

Cleaning kit

1. Weapon grease tube
2. Cleaning rod handle
3. Grease brush
4. Barrel brush
5. Cleaning rod sections
6. Extension rod with ferrule
7. Cleaning jag
8. Cleaning brush
9. Simileather case
10. Gas tube brush
11. Chamber cleaning tool
12. Barrel inspection mirror

### 3. Handling

#### 3.1 Important instructions

- ❑ Before manipulation the weapon, make sure that it is safe and that the trigger guard is put in the vertical position.
- ❑ Use only commercial grade ammunition.
- ❑ Use only ammunition that corresponds to the caliber of the weapon.
- ❑ During all manipulations point the weapon in a safe direction.
- ❑ Do not place your finger on the trigger until the target has been sighted.
- ❑ Do not load the weapon until immediately before use.
- ❑ Unload weapon immediately after shooting is finished.
- ❑ Detach bolt and magazine from the weapon prior to transportation.

### 3.2. Loading the weapon

1. Put the safety lever to position "S";
2. Swing the trigger guard into the vertical position;
3. Insert the magazine and check that it is properly seated by pressing forward;
4. Carry out loading movement. (Pull the bolt handle fully back and let it fly forward)

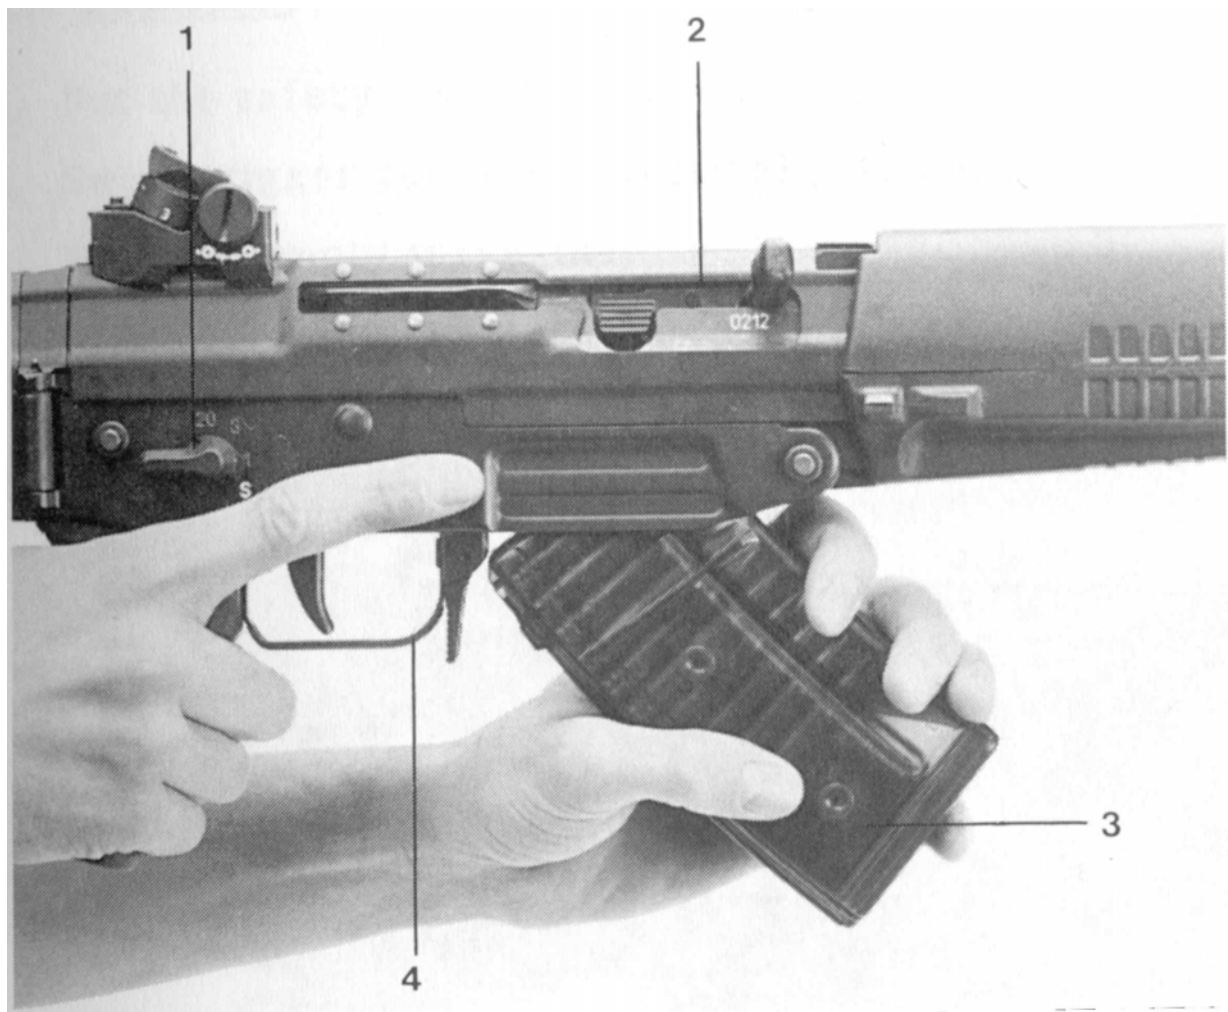


Figure 16

#### Inserting the magazine

1. Safety lever
2. Bolt
3. Magazine
4. Trigger guard

### 3.3. Unloading

1. Put safety lever to position "S";
2. Swing trigger guard into vertical position;
3. Remove magazine by pressing magazine catch;
4. Carry out loading movement, with bolt retracted check for empty chamber;
5. Switch safety lever to "1", pull trigger (with weapon pointing downrange), switch safety lever to "S".

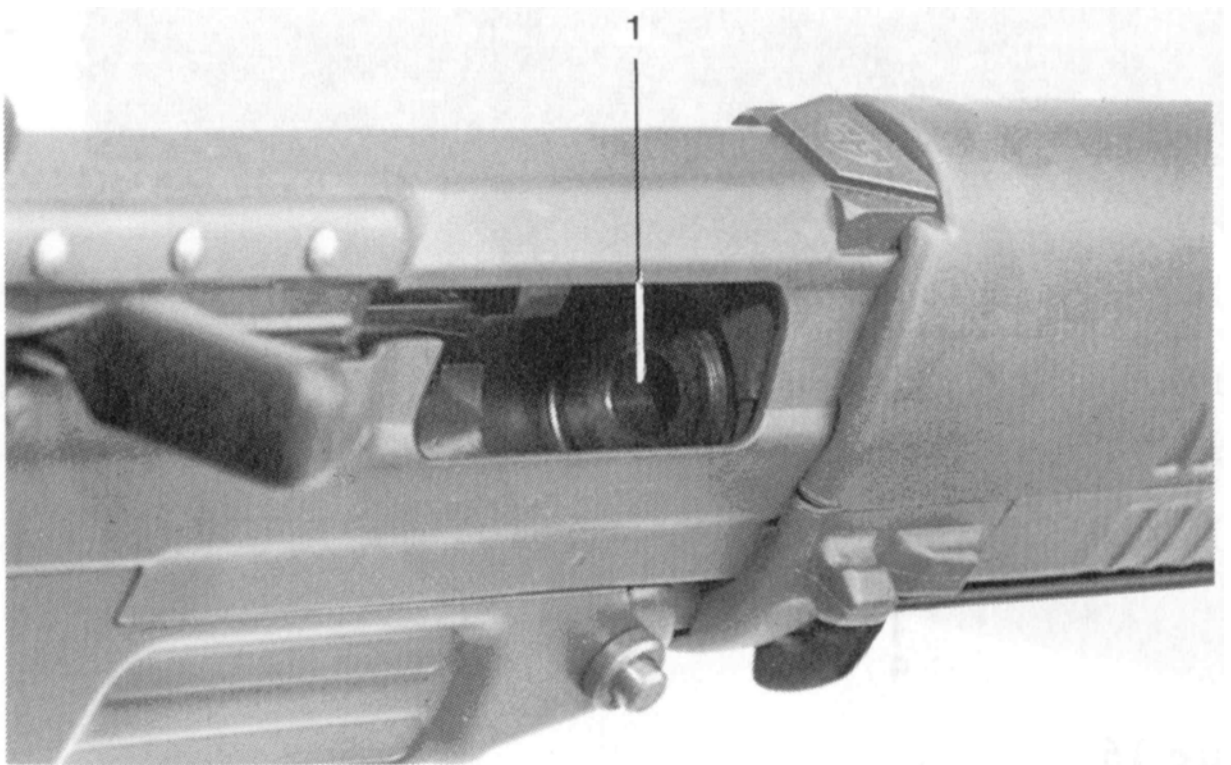


Figure 17

#### Check the chamber

1. Chamber



### 3.4. Changing the magazine

1. Put safety lever to position "S";
2. Swing trigger guard into vertical position;
3. Remove magazine;
4. Insert loaded magazine and check that it is properly seated by pressing forward.

### 3.5. Reloading

1. Put safety lever to position "S";
2. Swing trigger guard into vertical position;
3. Remove magazine;
4. Insert loaded magazine and check that it is properly seated by pressing forward;
5. Push the bolt catch up or pull back the bolt handle slightly and allow the bolt to fly forward.



Figure 18

Push the bolt catch up

### 3.6. Filling and coupling of magazines

#### 3.6.1. Filling the magazine

1. Place the tool on magazine;
2. Insert the ammunition clip and press cartridges into magazine;
3. Remove loading tool.

#### 3.6.2. Coupling of magazines

1. Hold magazine vertically;
2. With the floorplate of the second or third magazine pointing to the rear, firstly connect the upper lugs, the rotate forward and connect lower lugs.

Coupling of more than three magazines in sequence is not recommended.



Figure 19

Loading the cartridges into the magazine by means of the loading tool



Figure 20

Coupling of magazines

### 3.7. Aiming, firing

To aim, align the eye, diopter or battle sight, foresight and target. When using the diopter, ensure that the periphery of the foresight tunnel and the diopter aperture are concentric.

At all ranges the foresight should be aimed at the center of the target. Firing is therefore to point of aim.

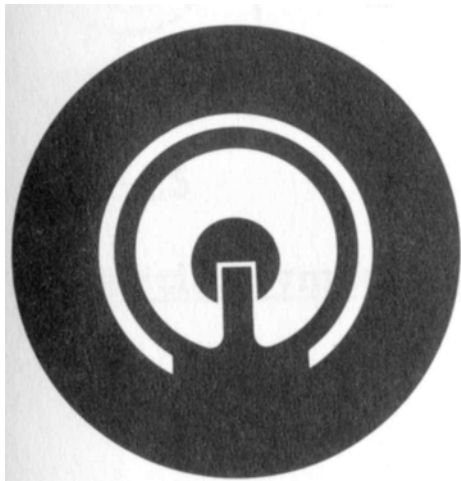


Figure 21

Sight picture point of aim



Figure 22

Bull's eye 6 o'clock with  
sight setting "red 3" at 300  
m.

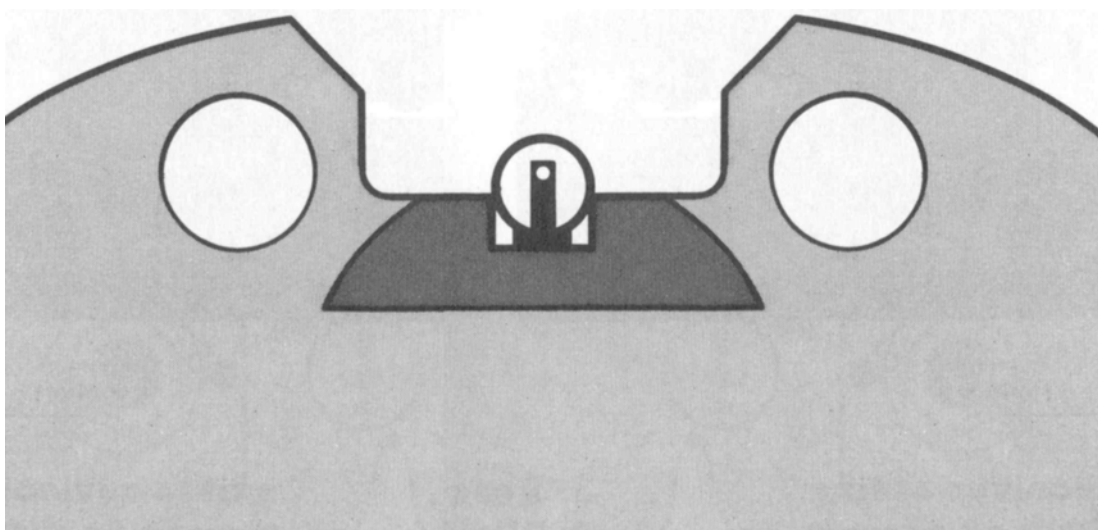


Figure 23

Sight picture night sight

### 3.8. Adjusting

To correct for elevation and windage, the corresponding correction screw is turned with a screwdriver.

By rotating the elevation correction screw and the windage correction screw by one click, the average point of impact in the vertical respectively the horizontal axis is displaced by approximately 0.15 ‰.

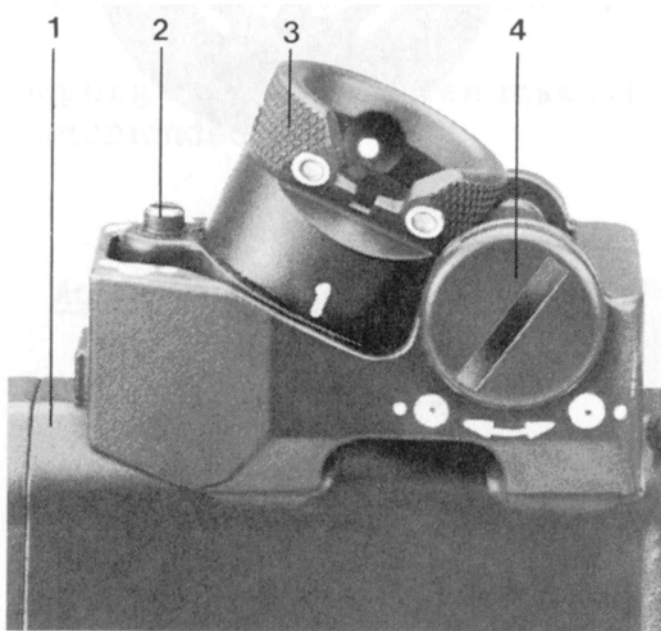


Figure 24

#### Rear sight

1. Receiver casing
2. Elevation correction screw
3. Rear sight drum
4. Windage correction screw

### Elevation:

High shots are corrected by turning the elevation correction screw to the left.

Low shots are corrected by turning the elevation correction screw to the right.



Figure 25

Correction symbol on rear sight (correction of elevation)

### Windage:

Shots to the right are corrected by turning the windage correction screw to the left.

Shots to the left are corrected by turning the windage correction screw to the right.



Figure 26

Correction symbol on rear sight (correction of windage)

Firing range	Average point of impact correction per notch	
	SG 550	SG 551
100 m	1.5 cm	1.8 cm
200 m	3.0 cm	3.6 cm
300 m	4.5 cm	5.4 cm
400 m	6.0 cm	7.2 cm

To correct for elevation or windage, the corresponding correction screw is turned with a screwdriver.

### 3.9. Gas valve position

With the SIG SG 550/551, the gas volume required for the function of the weapon can be controlled by adjusting the gas valve.

#### a. Position I (Rib of gas valve in vertical position)

Under normal conditions, firing is effected in this position.



Figure 27

Gas valve in position I

b. Position II

(Rib of gas valve in slanting position)

When cycling or ejection problems are encountered due to heavy fouling or icing-up, the gas valve is to be turned clockwise as far as the stop. In this position, a larger gas quantity acts on the gas piston.

The adjustment of the gas valve is effected manually, and, in case of a hot or heavily fouled weapon, by means of a cartridge or auxiliary aid.

Firing with the gas valve in position II is an exception. As soon as the weapon works, the gas valve must be turned back to position I, otherwise the recoil is intensified and the weapon is unnecessarily stressed.

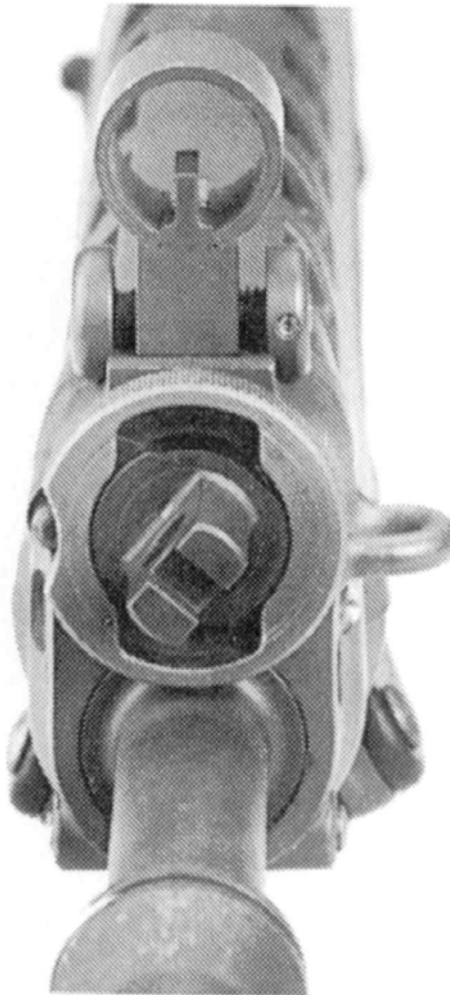


Figure 28

Gas valve in position II



### 3.10. Folding the butt

Thumb in the butt catch and fold the butt so that it registers with the handguard under spring pressure.



Figure 29

#### Butt folded

1. Butt catch
2. Butt

### 3.11 Firing with mittens

For firing with mittens the trigger guard can be pivoted to the left or right.

For safety reasons the trigger guard must be placed in the vertical position before carrying out any manipulations.



Figure 30

#### Trigger guard folded

1. Trigger casing
2. Trigger guard

### 3.12 Rifle grenades (Bullet trap type)

#### 3.12.1. General

The rifle grenades are invented to be launched in flat trajectory. Standard, live ammunition is used for launching, whereby the weapon cycles automatically.

(The bullet is caught in the bullet trap integrated in the grenade.

#### 3.12.2. Handling

Acting on orders, or his own initiative in situations of danger, the trooper prepares his weapon for grenade launching.

Loading procedure:

- ❑ Load model SG 550 assault rifle with standard, hardball ammunition.
- ❑ Place safety lever of model SG 550 on "S"
- ❑ Mount rifle grenade: It must be possible to twist on the grenade up to the stop without encountering significant resistance.

#### 3.12.3. Aiming

At a range of 75 m, aim over the upper edge of the rifle grenade and upper rim of the foresight tunnel. At longer ranges, cover the target with the body of the grenade. Consequently, first obtain the height of the target by approaching it from the side. Then move the rifle sideways, without changing the inclination of the barrel, until the target is covered.

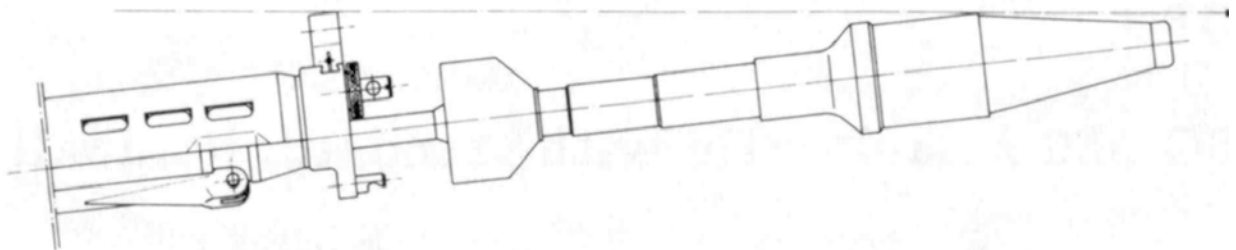


Figure 31

#### Aiming the rifle grenade

Range 75 m: point of aim = average point of impact

Launching positions: The grenade launching can be done from the standing, kneeling and prone positions.

The rifle butt should be held as tightly as possible under the armpit of the firing arm; the other hand grasps the handguard firmly. The safety is on position "1". Firing from the shoulder is also possible. However, the trooper must take cover before the grenade detonates upon impact.

### 3.13. Use of accessories

#### 3.13.1. Carrying sling

One end of the sling hooks into the lug on the foresight mount, the other end is attached to the butt.

To fix the taut sling, use the clip.

To maintain a taut sling, slip the clip over the sling strap.

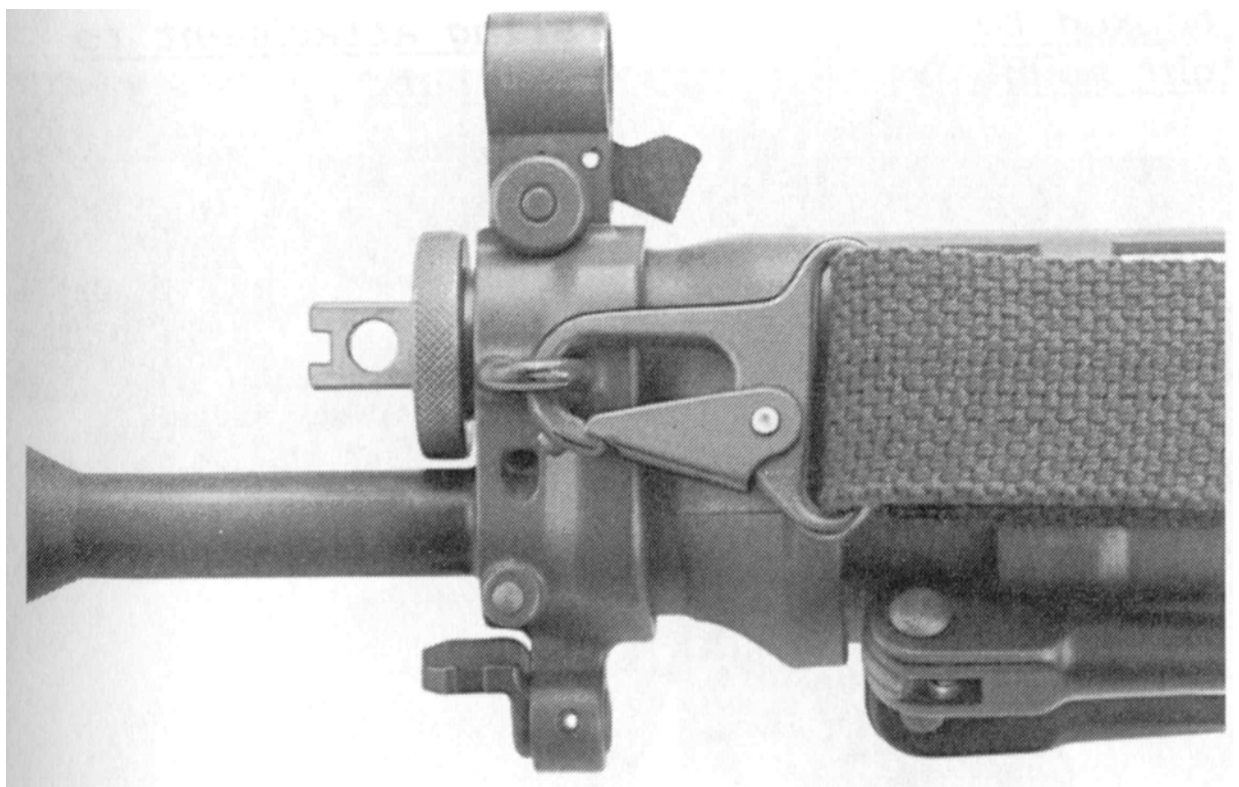


Figure 32

Sling hooked to foresight mount

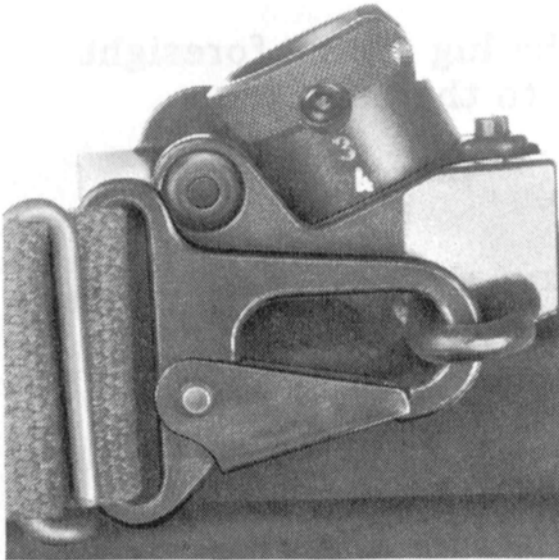


Figure 33

Sling hooked to rear sight mount



Figure 34

Sling attachment to the butt



Figure 35

Fix the taut sling

### 3.14. Field stripping

1. Unload weapon;
2. Remove carrying sling;
3. Press the rear trigger casing stud from both sides and withdraw it from the stud head side as far as the stop;
4. Lay the weapon on its left side and swing out the trigger assembly;
5. Withdraw the front trigger casing stud as described in point 3 and remove the trigger assembly;



Figure 36

Remove the trigger housing stud

6. Press down the bolt handle catch and remove the bolt handle;
7. Use the bolt handle to push the bolt to the rear, remove the bolt from the receiver;

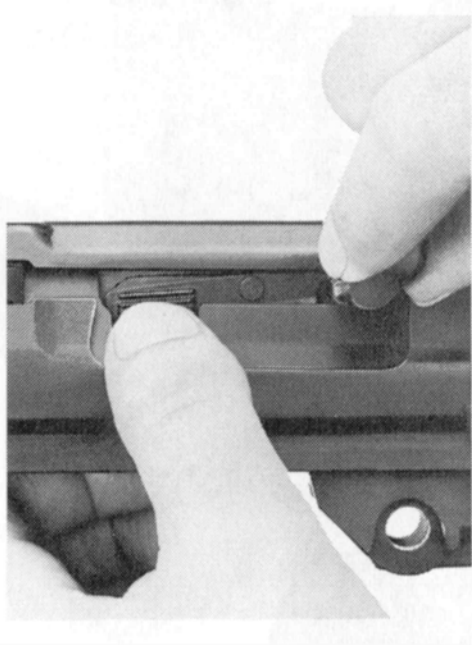


Figure 37

Remove the bolt handle

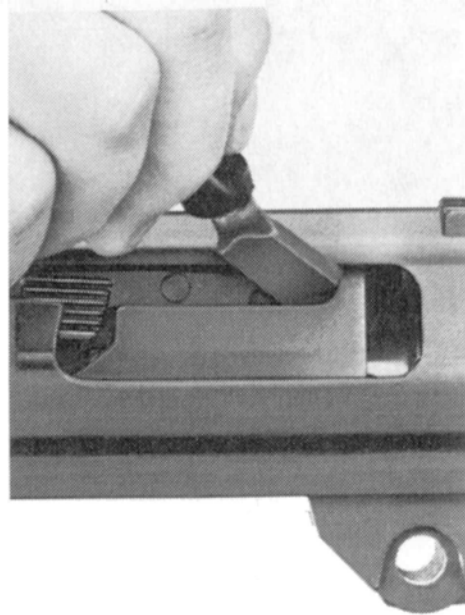


Figure 38

Push the bolt to the rear, using bolt handle

8. Twist the bolt head to remove it from the bolt carrier;

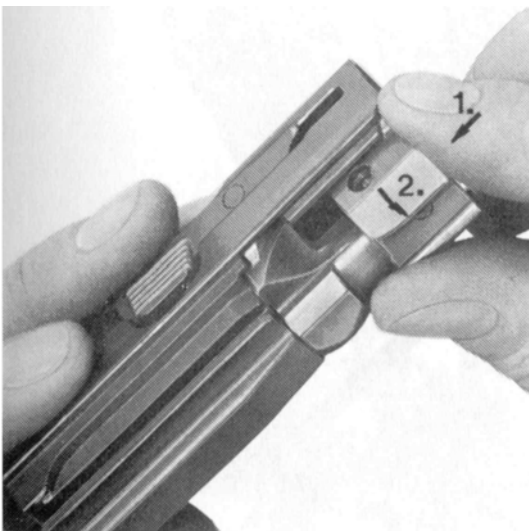


Figure 39

Remove bolt head



Figure 40

Remove bolt head

9. Pull lower handguard to the rear and remove; swing out the bipod legs and remove laterally;
10. Lift upper handguard at the rear and remove at the front sight mount;

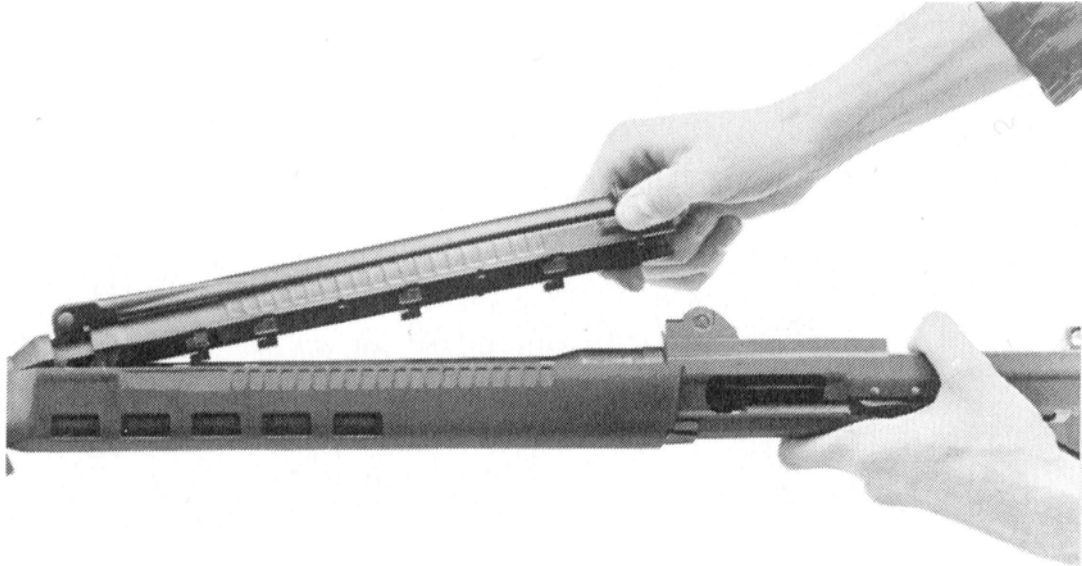


Figure 40

Lift off lower handguard

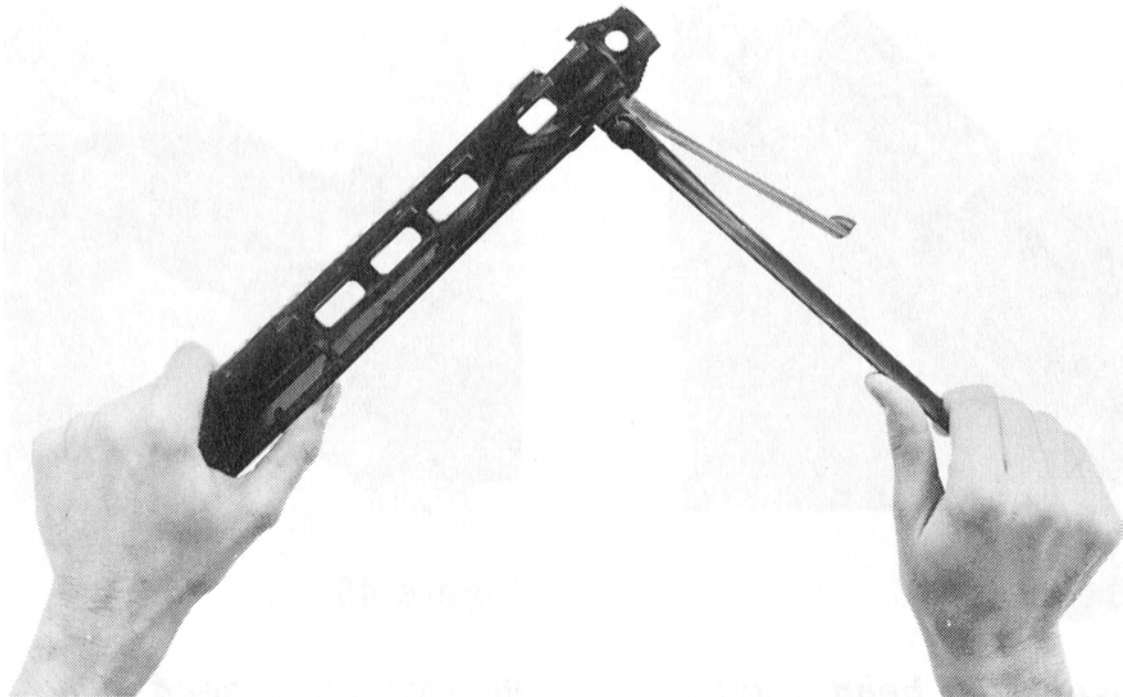


Figure 42

Remove bipod carrier from the handguard



11. Press in the gas valve catch, remove the valve by simultaneously rotating it and pulling it forward;
12. Push the Gas piston and recoil spring forward, reaching through the ejection port, and extract them from the front;
13. Press down the gas-valve catch and rotate the gas tube through 90° so that the notch on the headpiece lies on the barrel;
14. Pull the gas tube out from the front end;

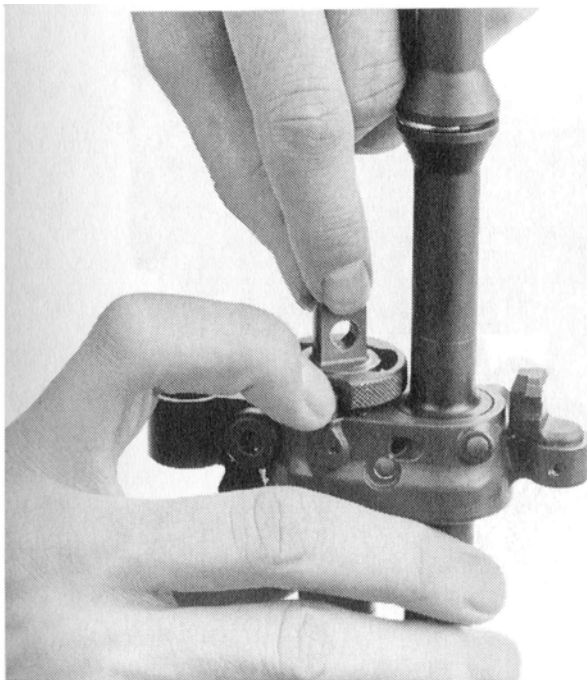


Figure 43

Remove gas valve

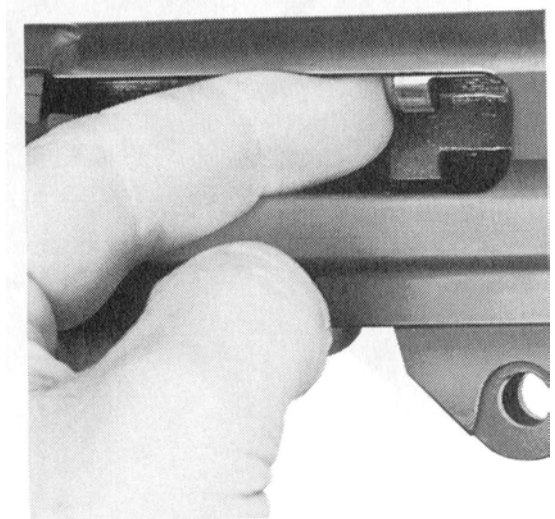


Figure 44

Push in gas piston

15. Remove the firing pin:

- ❑ Hold the bolt head against a firm surface in such a way that the firing pin is completely pressed into the bolt head;
- ❑ Remove the retention pin using a knife-edge and extract the firing pin and spring;

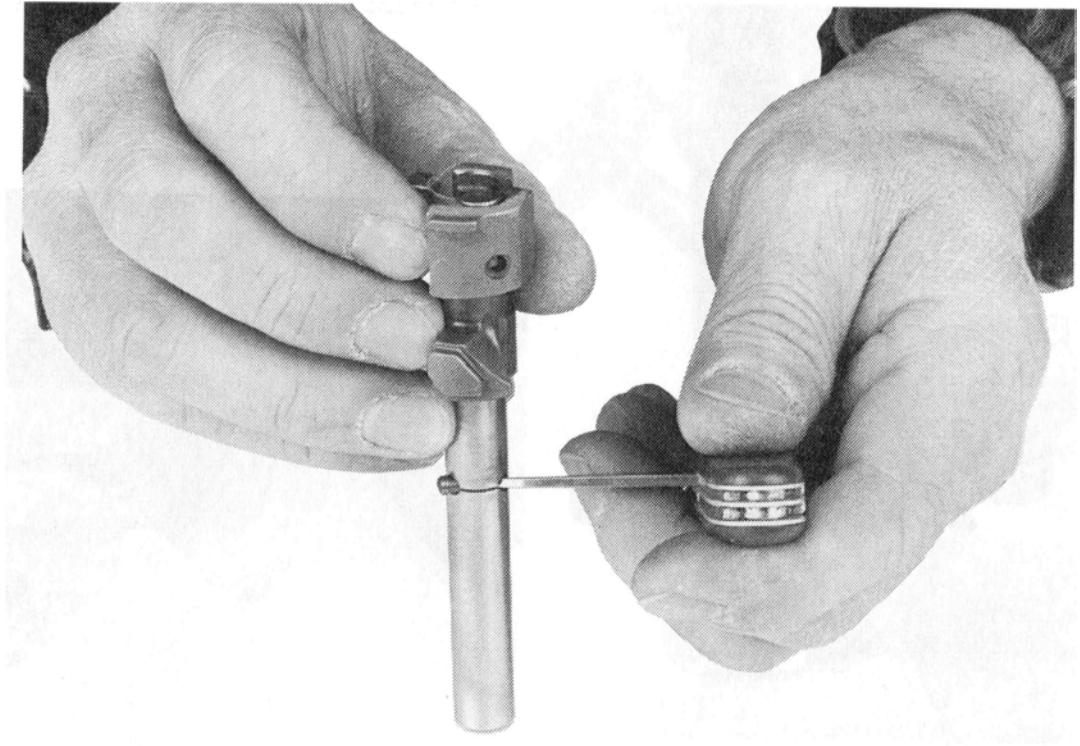


Figure 45

Remove firing pin

16. Dismantle the magazine;

- ❑ Press in the retention plug of the magazine floorplate with the thick end of the firing pin. Pull the magazine floorplate out from the rear;
- ❑ Pull out the floorplate catch along with the spring and follower.

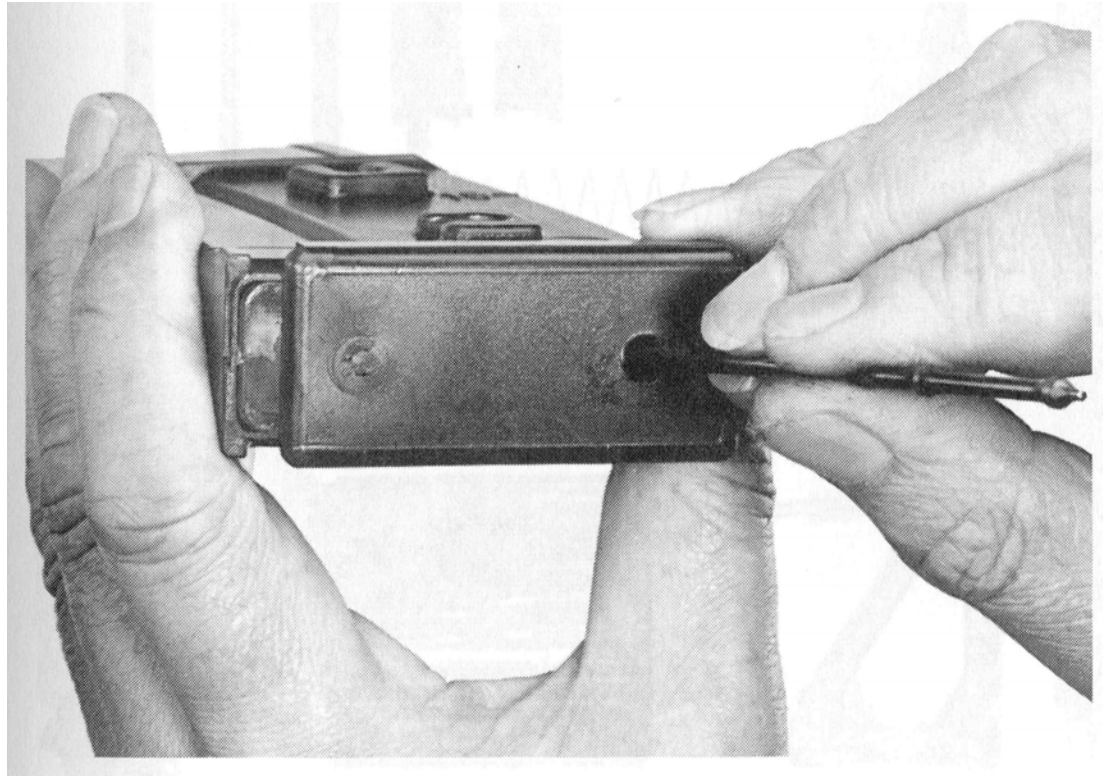


Figure 46

Dismantle magazine



Figure 47

SIG SG 550 dismantled

### 3.15 Assembly

The weapon should always be reassembled in the reverse order of stripping:

1. Assemble magazine;
2. Insert firing pin:
  - Slip the firing pin into the bolt head.  
Ensure that the notch is correctly placed to accept the retention stud;
  - Push the firing pin into the bolt head and secure it with the retention stud as soon as the notch is flush with the bore;

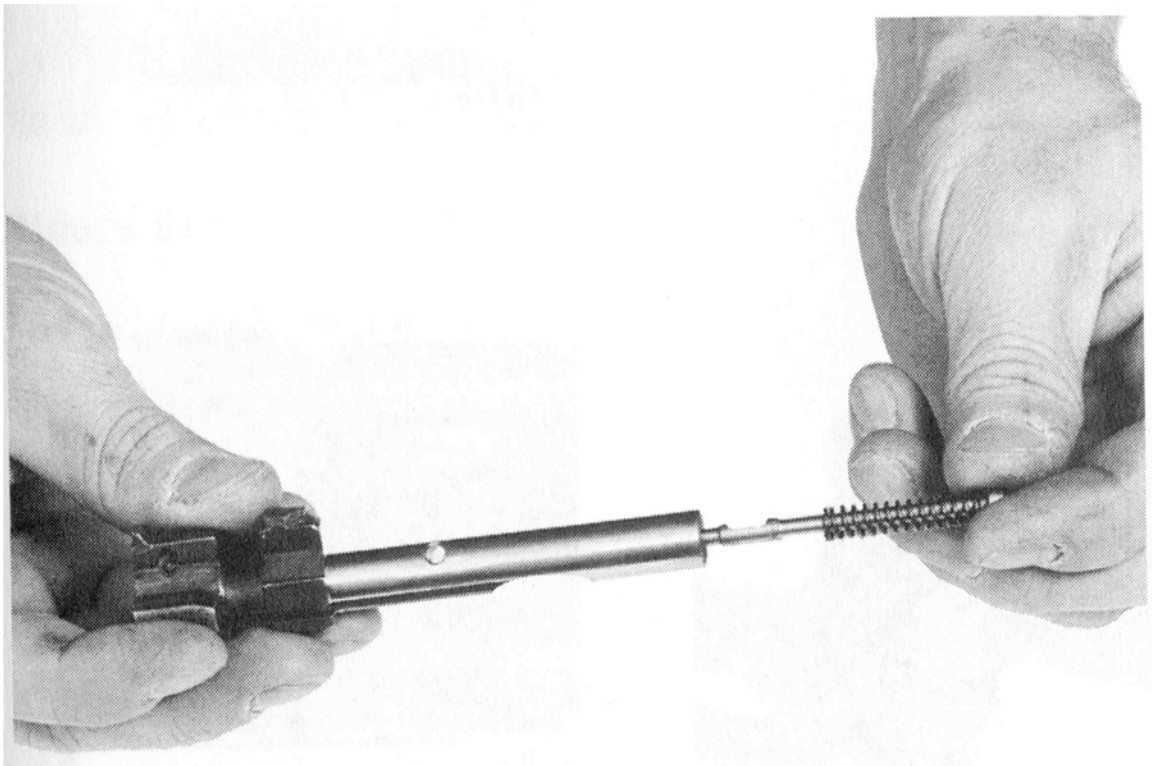


Figure 48

*Insert firing pin*

Correct position of the notch

3. Install the gas tube:
  - ❑ Slip the gas tube (flange notch pointing downwards) through the bore of the foresight mount and insert the end into the corresponding opening in the receiver;
  - ❑ Press the gas tube against the foresight mount and turn it through 90° to the right so that the retention stud of the gas valve registers in the flange;
4. Insert the piston with the recoil spring:
  - ❑ Insert the piston, with its retention notch slide facing against the barrel, into the gas tube;
  - ❑ Check with forefinger that the gas piston moves freely in the tube;

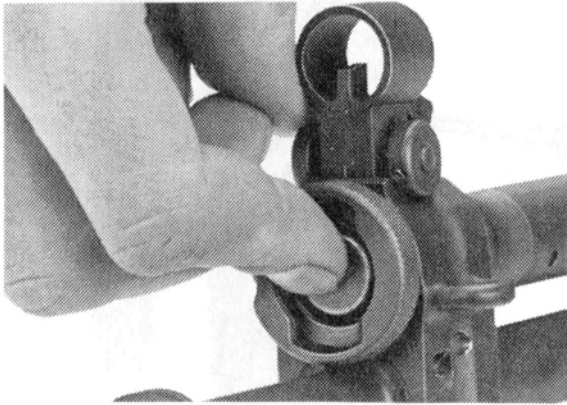


Figure 49

Check correct position with index finger

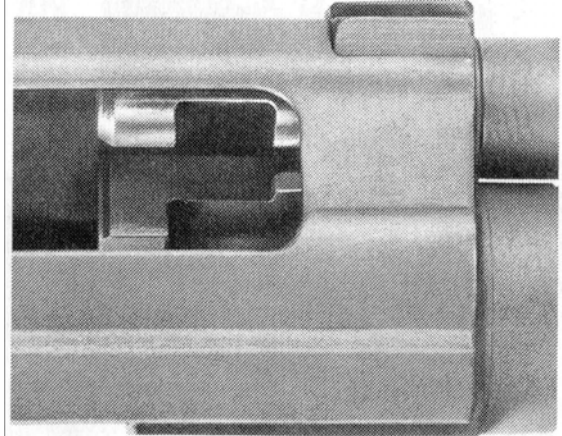


Figure 50

Correct position of retention notch

5. Install the gas valve:
  - ❑ With the notch for retention stud facing downwards in the flange of the gas tube;
  - ❑ Press in the catch and turn the gas valve to the right up to position I;
  - ❑ Check that the gas valve catch has registered;

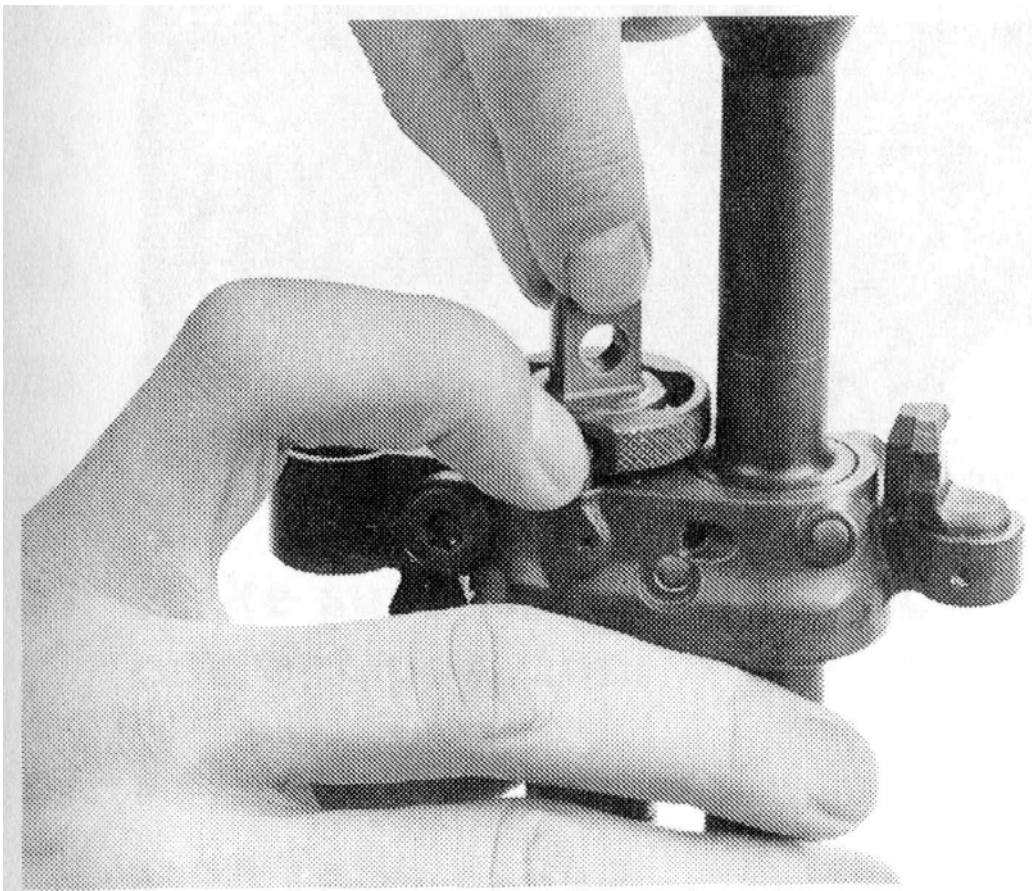


Figure 51

Install gas valve

6. Install the upper handguard;
7. Attach the bipod;
8. Install the lower handguard;
9. Assemble bolt head and carrier;



10. Insert bolt assembly:
  - ❑ Slide bolt head completely to the front by pressing firing pin;
  - ❑ Slide bolt into receiver casing.



Figure 52

Inserting the bolt assembly

11. Insert the bolt handle into its slot in the bolt carrier and check that it has registered with the catch
12. Install trigger casing:
  - ❑ Ensure that the holes in the front trigger casing stud overlap;
  - ❑ Press the trigger casing stud through as far as the stop;
  - ❑ Tilt up the trigger casing and fix with rear trigger casing stud.
13. The function check should be carried out in accordance with section 3.16;



### 3.16 Function check

The function check described below is to be made after every stripping as well as before and after repairs:

#### 3.16.1. Function check of weapon

#### SEQUENCE OF OPERATIONS:

1. Unloading per Section 3.3;
2. Remove magazine;
3. Check number;
4. Check firm seating of bayonet;
5. Make sure that bolt handle is engaged in correct position;
6. Functions:
  - a. Safety lever set to "S", carry out loading movement, pull the trigger:
    - The hammer must not trip, the trigger tongue must be blocked;
  - b. Safety lever set to "1", pull the trigger and hold it back:
    - The hammer must tripCarry out loading movement with trigger still held back:
    - The hammer must not trip;
  - c. Carry out loading movement;

d. Set safety lever to "3", pull the trigger and hold it:

- The hammer must trip

Carry out loading movement with trigger pulled through (ease bolt forward slowly):

- The hammer must trip immediately the bolt reaches the forward position;

Repeat the loading action:

- On the third loading cycle, the hammer must not trip;  
Release the trigger:

e. Set safety lever to "20", perform check as under position "3":

- The hammer must trip each time

f. Pressure point;

Loading movement:

- Set safety lever to "1"; verify several times that there is a discernible pressure point;

7. Insert empty magazine and check firm seat;

8. Bolt catch;

a. Carry out loading movement;

- The bolt must be retained in the rear position;

b. Push up the bolt catch:

- The bolt must run forward;
- Check engagement of folded butt, pull the trigger and put the weapon on safe.

### 3.17. Procedure in case of malfunction

In the event of a malfunction, proceed as follows:

- ❑ Carry out loading movement;
- ❑ Continue firing;

If the weapon does not fire:

- ❑ Insert a fresh magazine;
- ❑ Loading action;
- ❑ Continue firing;

If the weapon still does not fire:

- ❑ Put weapon on safe;
- ❑ Remove magazine;
- ❑ Loading action, hold the bolt in rearmost position, check ejection of cases and, if necessary, remove any jammed cases or cartridges;
- ❑ Turn gas valve to position II when weapon is heavily fouled or iced up;
- ❑ Insert a fresh magazine and load;
- ❑ Set safety lever to the desired firing mode

If the weapon still will not fire:

- ❑ Put weapon on safe;
- ❑ Unload per Section 3.3;
- ❑ Clean weapon in accordance with section 4.1;
- ❑ Take up firing position;
- ❑ Load;
- ❑ Set safety lever to the desired firing mode;

If the weapon can not be unloaded or the fault rectified by the rifleman in accordance with the operating instructions, a trained expert must be consulted. The following points must be borne in mind:

- ❑ If the weapon can not be unloaded immediately and there is any danger that of self-ignition due to a hot barrel (140°C), wait at least 15 minutes.
- ❑ The weapon must remain in position as long as it is loaded.
- ❑ Spectators and other unnecessary persons must be sent away so that the problem can be tackled carefully without disturbance.
- ❑ As long as the weapon is loaded, only trained experts should be allowed to manipulate the weapon.

Malfunctions can largely be avoided by:

- ❑ Cleaning the weapon according to item 4.1. after each period of firing, at the latest just after setting the gas valve to position II.
- ❑ Carrying out cleaning in accordance with the regulations
- ❑ Loading the magazine correctly.

## 4. Maintenance

### 4.1 Types of maintenance

There are the following types of maintenance:

- Daily cleaning
- Cleaning after firing
- Cleaning after malfunctioning

#### 4.1.1. Daily cleaning

Daily cleaning should be carried out if the weapon is dry and has not been fired.

#### SEQUENCE OF OPERATIONS:

1. Unload weapon;
2. Clean the weapon externally;
3. Lightly oil steel parts (to prevent rusting);
4. Carry out function check in accordance with Section 6.2.

#### 4.1.2. Cleaning after firing

#### SEQUENCE OF OPERATIONS:

1. Unload weapon;
2. Field strip the weapon (see Section 3.14.);
3. Clean and lubricate the weapon as described in the cleaning and lubrication procedures in Section 4.2.;
4. Assemble weapon;
5. Carry out function check in accordance with Section 6.2.

#### 4.1.3. Cleaning after malfunctioning

The SG 550/551 must be cleaned whenever the gas valve has been switched to position II. After cleaning, all moving parts should be lubricated and a light coat of oil applied to all steel parts to prevent rusting.

#### SEQUENCE OF OPERATIONS:

1. Set the safety lever to "S";
2. Unload the weapon;
3. Withdraw the rear casing stud to the stop;
4. Fold down the trigger casing, clean and check;
5. Remove the bolt, clean and check;
6. Remove the gas valve, clean and check;
7. Remove the gas piston, clean and check for correct operation;
8. Clean the receiver;
9. Oil all parts in accordance with Section 4.2.6.;
10. Assemble the weapon in reverse sequence;
11. Carry out function check;
12. Load and continue with assignment.

## 4.2. Cleaning and lubrication procedures

### 4.2.1. Prior to firing

The barrel should be checked and cleaned prior to firing.

### 4.2.2. After firing

After firing the barrel should be cleaned with at least ten strokes of the greased dry barrel brush. This should be carried out from the chamber down and whenever possible while the barrel is still warm. In this way, residual powder can be softened, thus preventing rusting.

#### 4.2.3. Greasing and degreasing

#### SEQUENCE OF OPERATIONS:

1. Unload the weapon;
2. Remove the bolt;
3. Clean from the chamber down.

#### 4.2.4. Daily cleaning

During daily cleaning the weapon should be wiped with a dry cloth and the metal parts should be lightly lubricated with weapon oil.

#### 4.2.5. Cleaning procedure

- ❑ Carry out stripping procedure.
- ❑ Remove residual powder from the gas valve, gas tube and gas piston with weapon cleaning oil.
- ❑ Clean the receiver and barrel from the rear.
- ❑ Clean the trigger assembly and all remaining parts of the weapon.
- ❑ Clean accessories

#### 4.2.6. Lubrication procedure

- ❑ Lightly oil the gas piston and recoil spring.
- ❑ Lubricate the barrel from the chamber down using oil.
- ❑ Lightly oil the valve and gas tube internally and externally.
- ❑ Wipe all remaining metal parts with an oil cloth.



## 5. Function

### 5.1. Weapon function

#### 5.1.1. Readiness to fire

At the moment of readiness to fire the bolt is closed and locked.

- ❑ The recoil spring [2] holds the bolt carrier [4] in the front final position, via the gas piston [1];
- ❑ The bolt head [5] is rotated by the control cam [3] of the bolt carrier [4] in such a way that its locking lugs [8] engage in the corresponding recesses of the locking piece [9];
- ❑ In this position the hammer [7] is cocked and the release bar [6] is depressed.

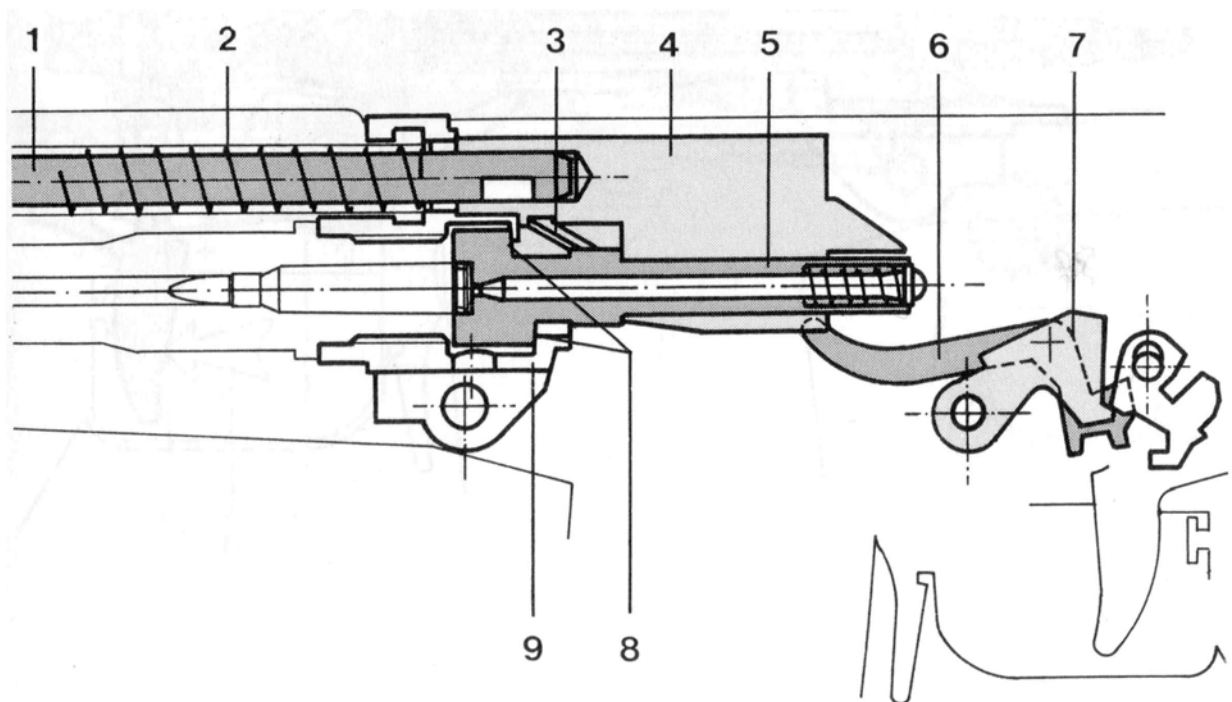


Figure 53

Weapon loaded

### 5.1.2. Discharging the shot

By pressing the trigger [11] the hammer [7] is released. The hammer is under pressure from the main spring [12] and strikes the firing pin [10] which, in turn, impacts against the cartridge primer of the cartridge [P] thus discharging the shot.

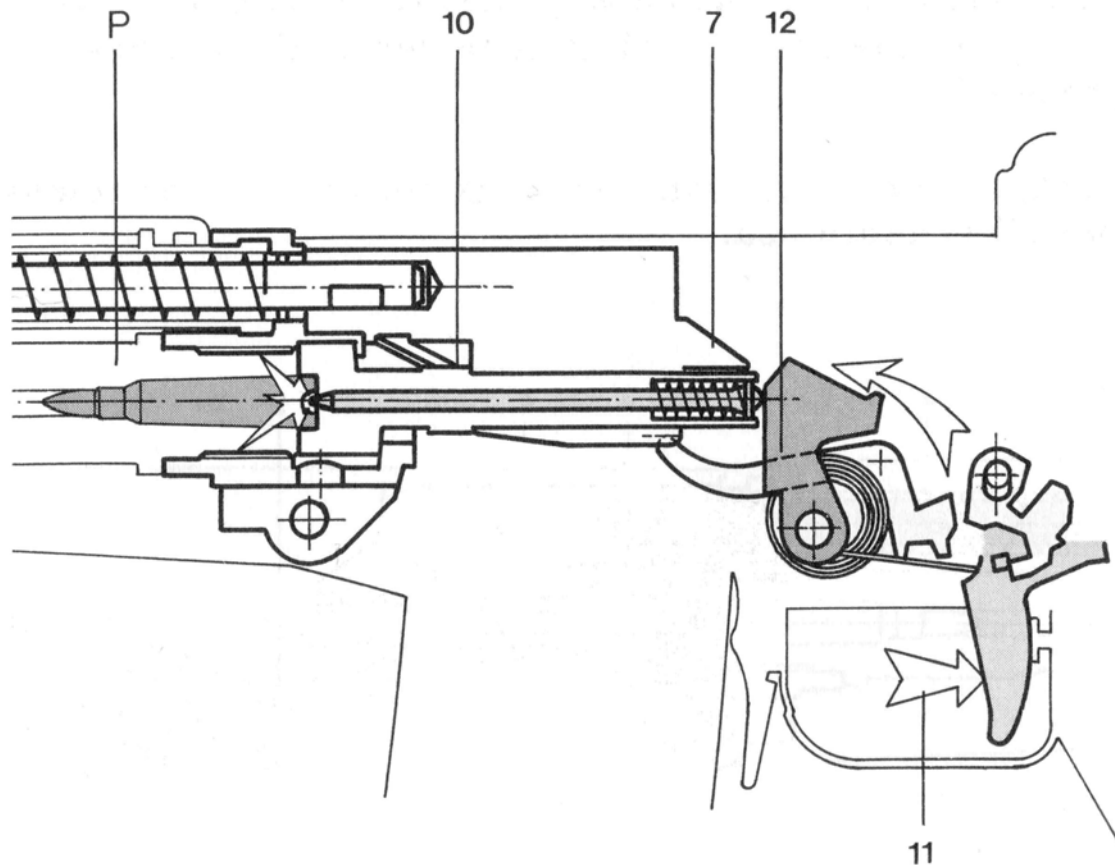


Figure 54

Discharging the shot

### 5.1.3. Unlocking and recoil of bolt

The gas pressure, generated by the burning powder, drives the bullet up the barrel [13]. As soon as the projectile passes the gas port [15], the propellant gas flows through the adjustable gas valve [14]. The gas pressure acts on the gas piston [1] which pushes the bolt carrier to the rear.

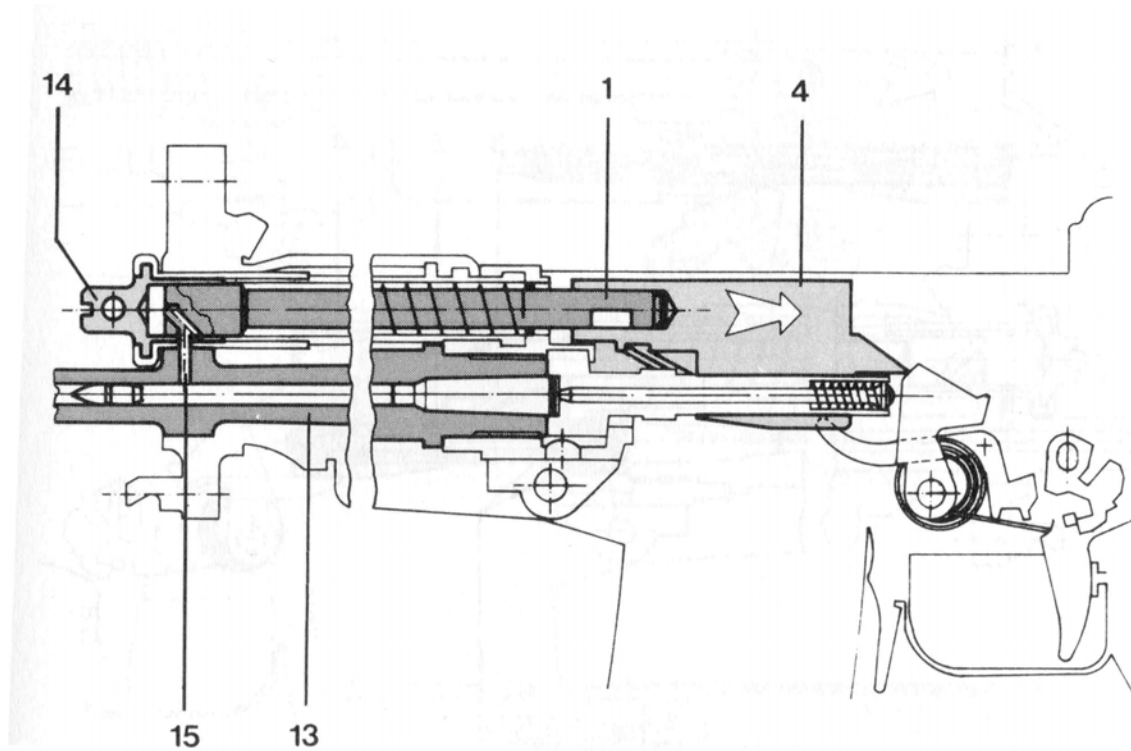


Figure 55

Bolt carrier recoil begins

During the rearward motion of the bolt carrier [4] the bolt head [5] is rotated by the control cam [3] so that the locking lugs [8] are disengaged. The bolt is now unlocked.

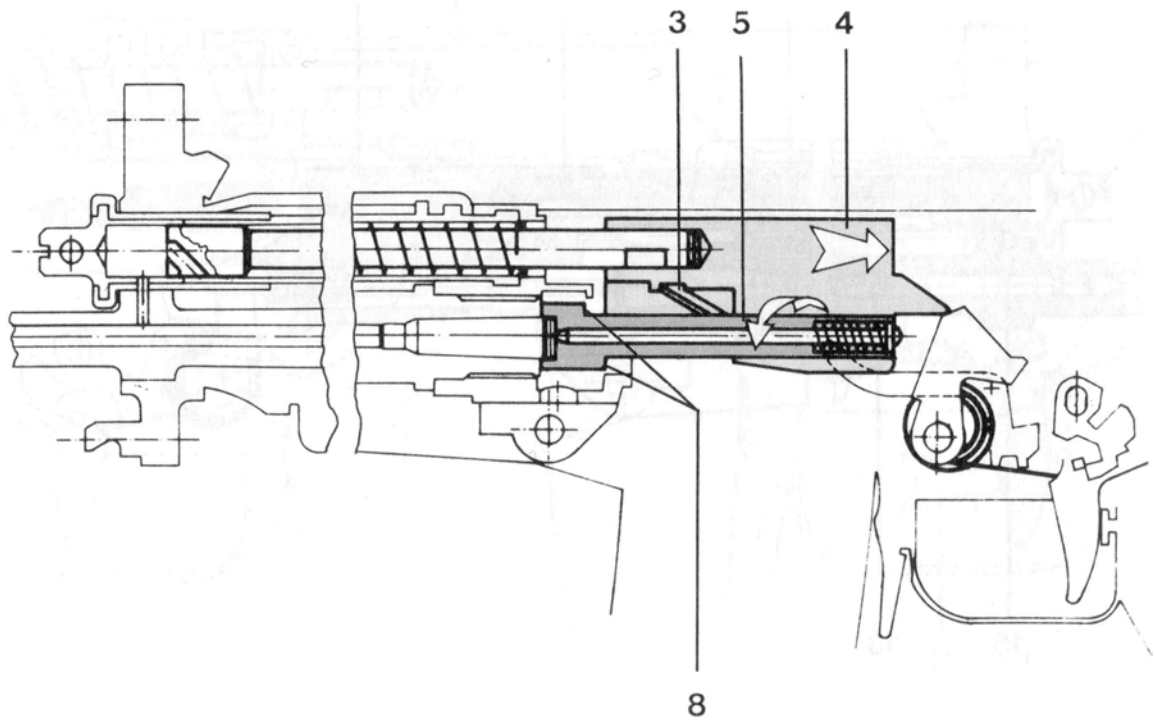


Figure 56

Unlocking begins

The bolt assembly moves back along the rails in the receiver [16] as far as the stop [17] whereby:

- The recoil spring [2] is compressed;
- The hammer [7] is cocked;
- The extractor [18] extracts the case from the chamber;
- The ejector [19] ejects the case through the port in the receiver [16].

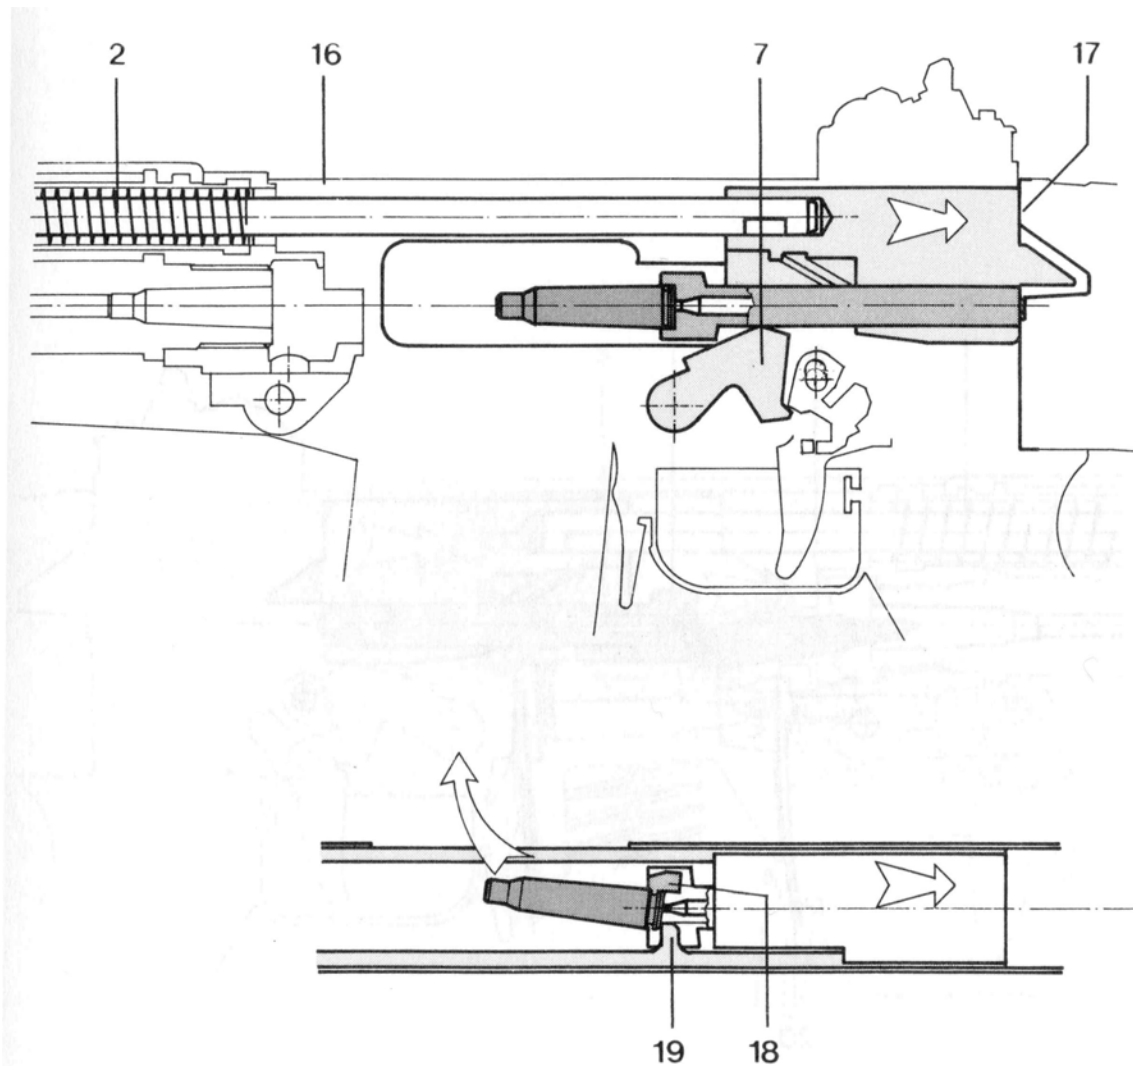


Figure 57

Case ejection

#### 5.1.4. Bolt advance

The force of the compressed recoil spring [2] thrusts the bolt forward. The bolt head [5] feeds the next round from the magazine [20] into the chamber.

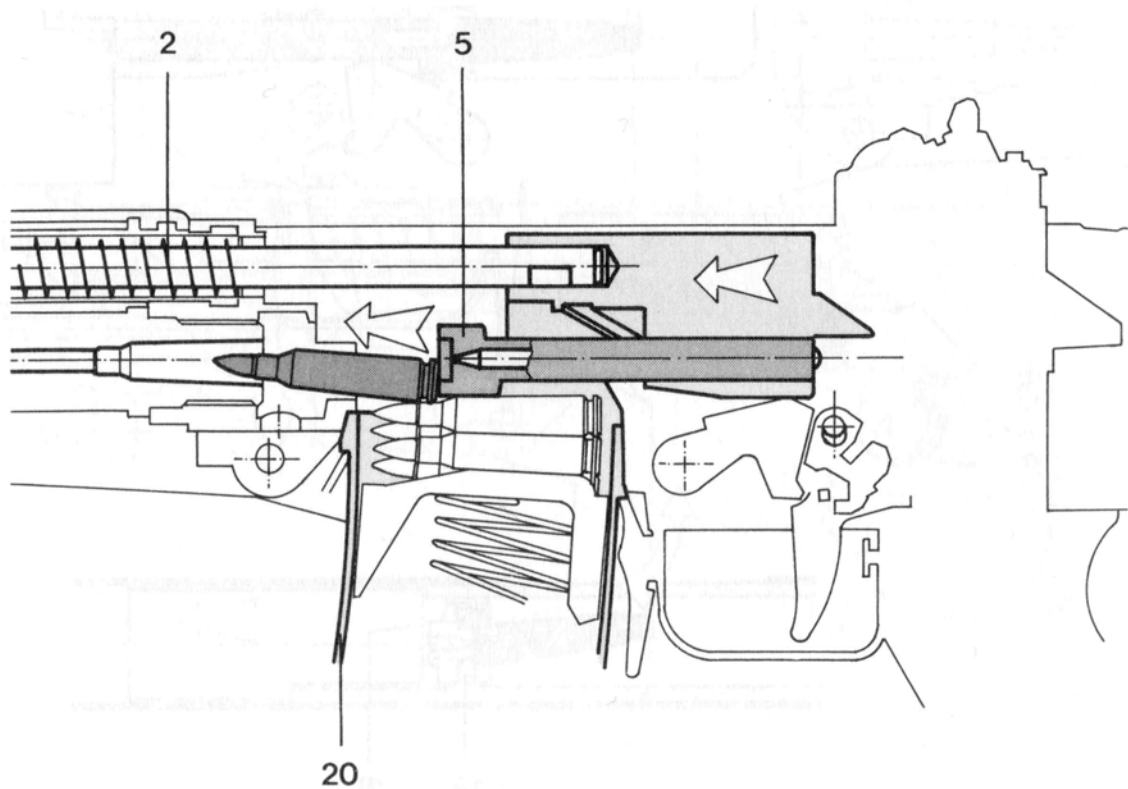


Figure 58

Bolt advance

In the final stage of the advance, the bolt head [5] locks up and the release bar [6] is depressed. The weapon is ready to be fired.

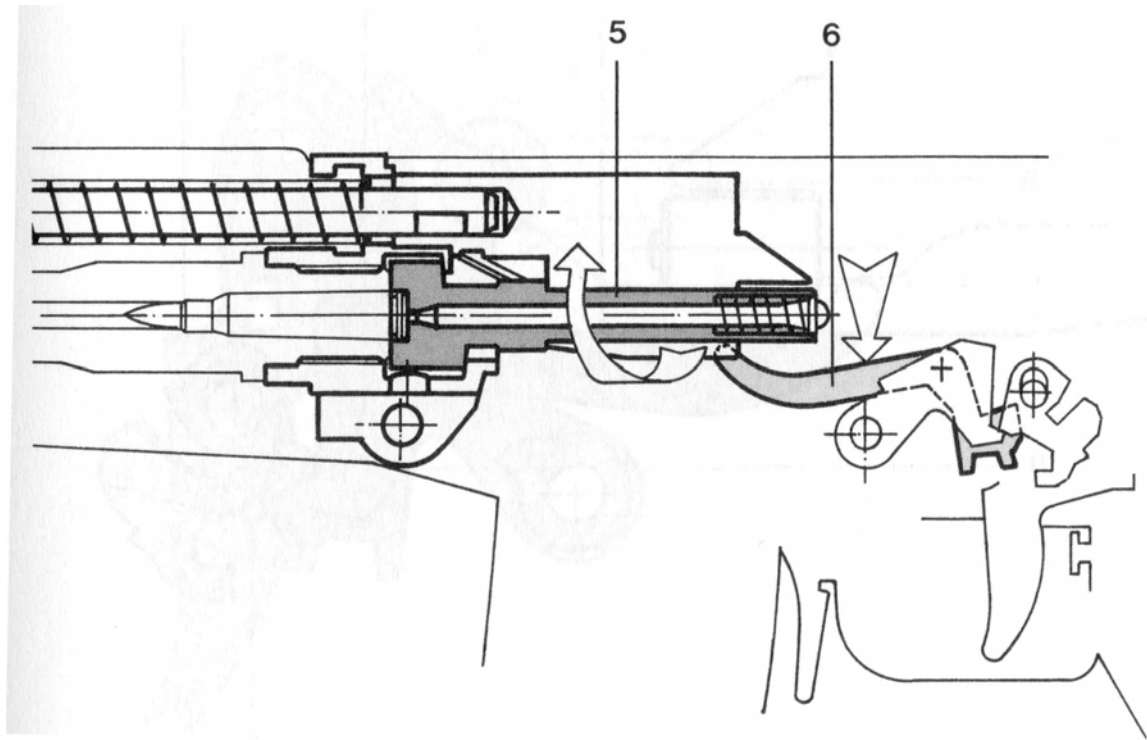


Figure 59

Locking

## 5.2. Trigger functions

### 5.2.1. General

Home position for describing the trigger functions:

- The hammer [3] is held by the trigger rod [4]
- The release bar [2] is depressed by the bolt carrier [1]
- The sear [5] is not engaged

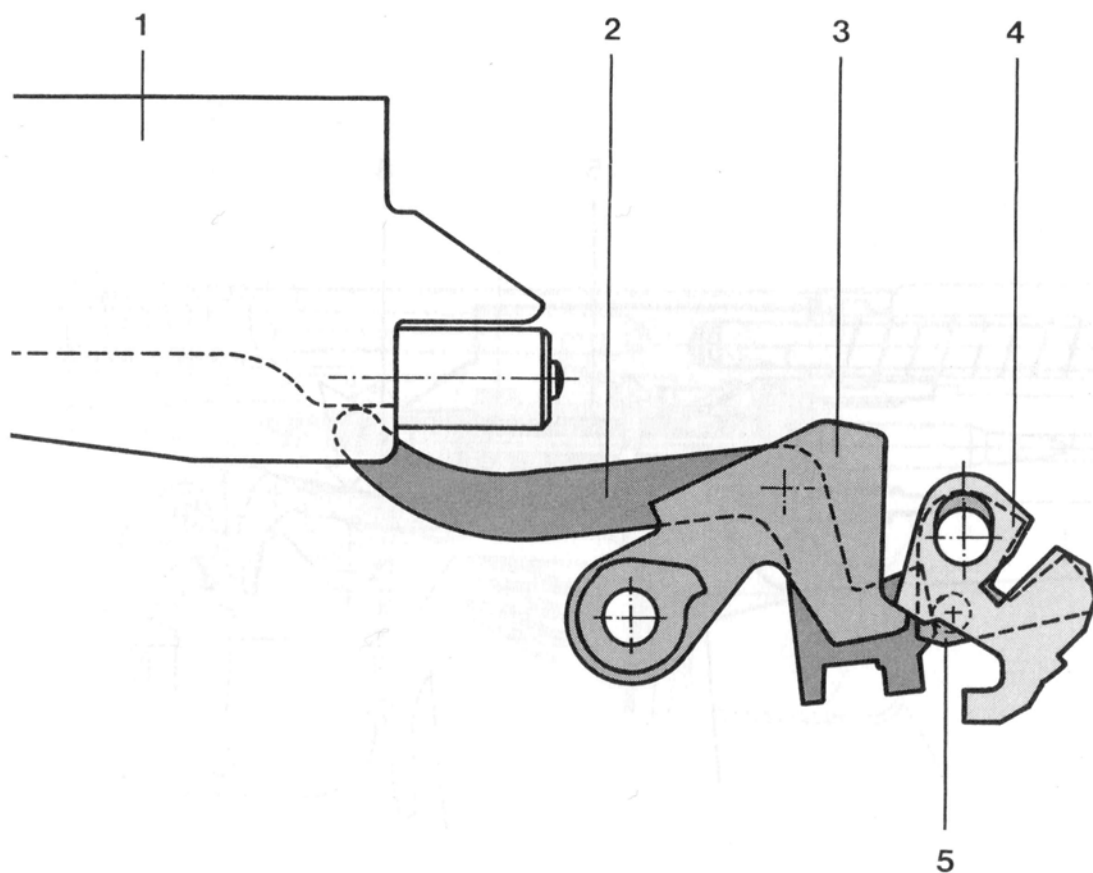


Figure 60

Trigger mechanism in cocked position



### 5.2.2. Trigger in safe position "S"

The safety lever [6] is set to "S".

The safety shaft [7] locks the trigger [8].

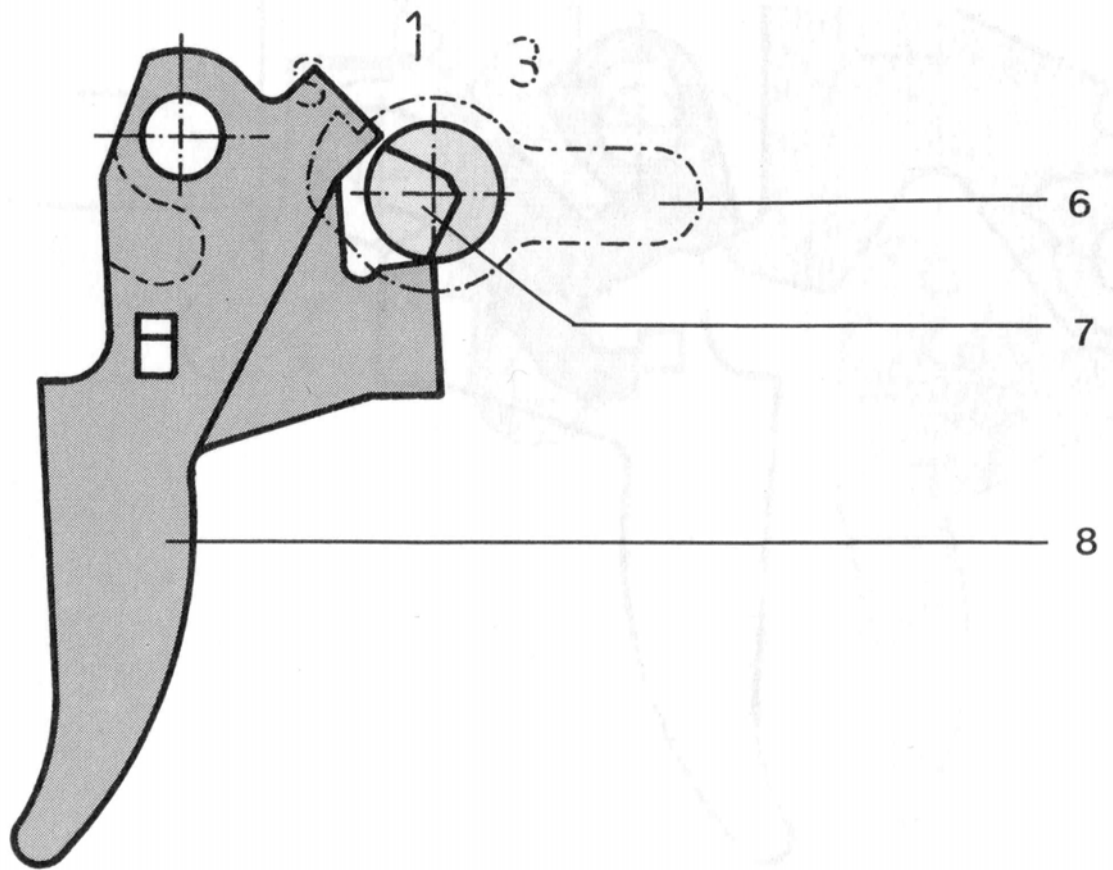


Figure 61

Trigger in safe position "S"

### 5.2.3. Semiautomatic fire

The safety lever [6] is set to "1" and the hammer [3] is held by the trigger rod [4].

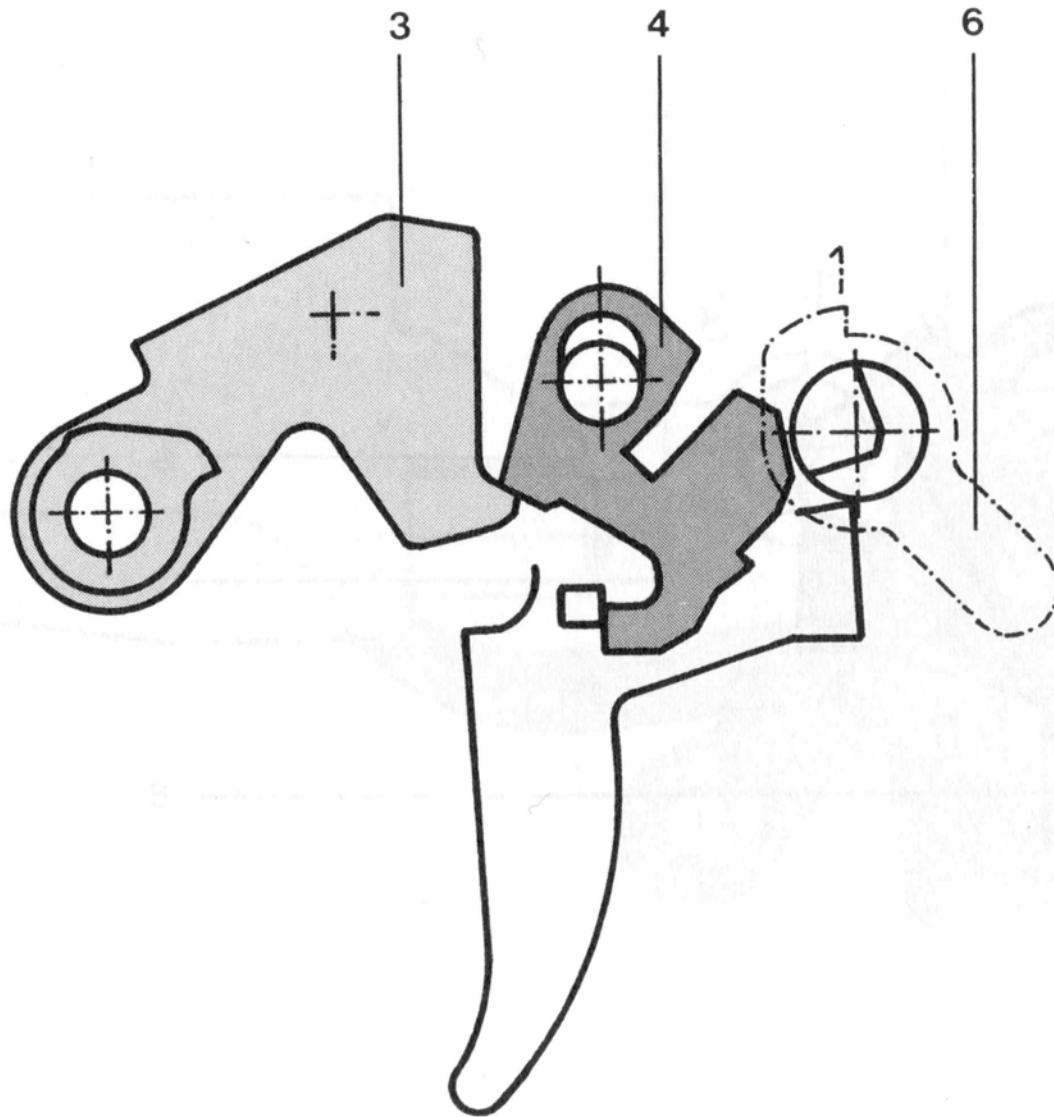


Figure 62

Trigger mechanism before firing

By pulling the trigger [8] and after having overcome the pressure point, the trigger rod [4] releases the hammer [3] which strikes the firing pin [9]. The trigger rod [4] falls downwards.

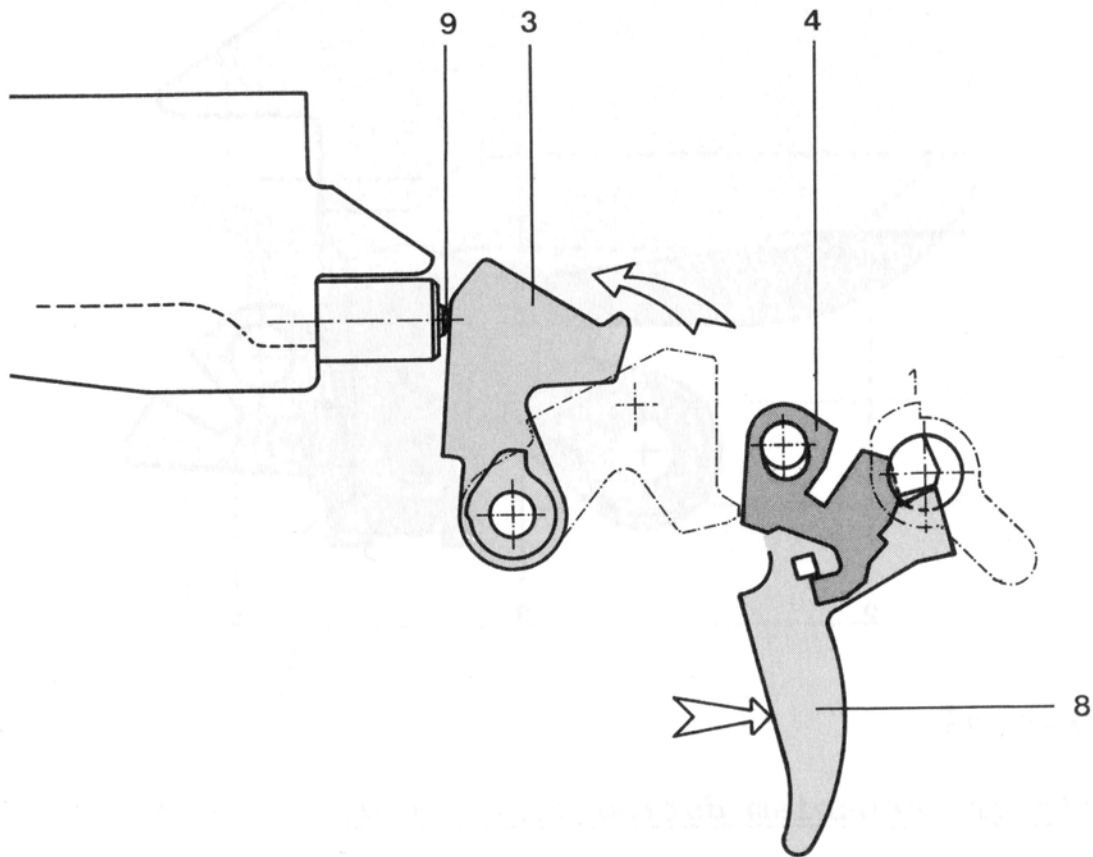


Figure 63

Striking the firing pin

The recoiling bolt presses the hammer [3] down and releases the sear [5] via the release bar [2]. The sear [5] catches the hammer [3].

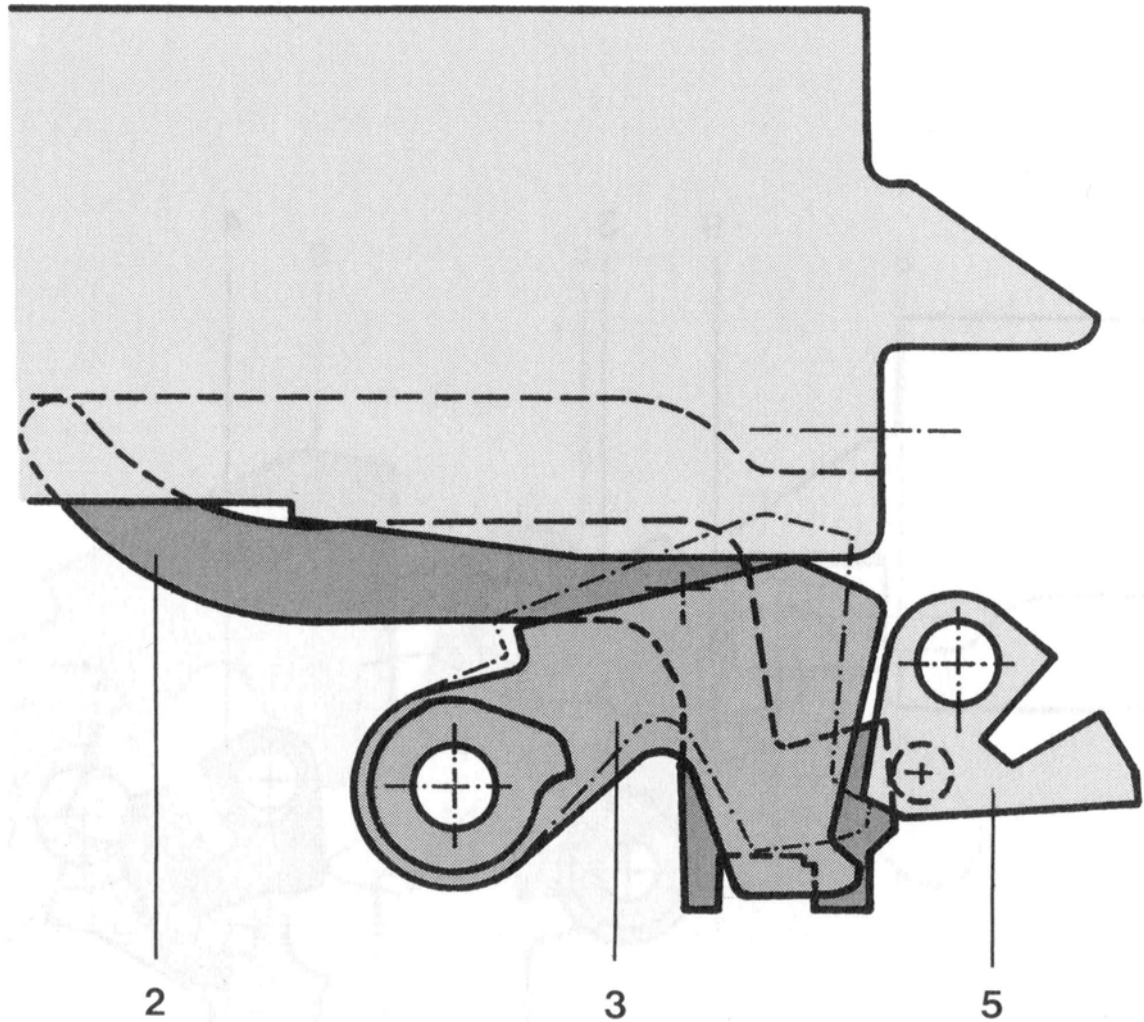


Figure 64

Trigger mechanism during bolt recoil

During the bolt advance, the bolt presses down the release bar [2]. The sear is thereby moved to the rear and releases the hammer [3] to the trigger rod [4]. When the trigger is released, the trigger rod [4] moves to its upper end position [refer to figure 60].

#### 5.2.4. 3-round burst control system

The safety lever [6] is set to "3". The automatic fire pawl [11] lies in the groove of the safety shaft [7]. The segment [10] is controlled by the safety shaft [7] and moved upward.

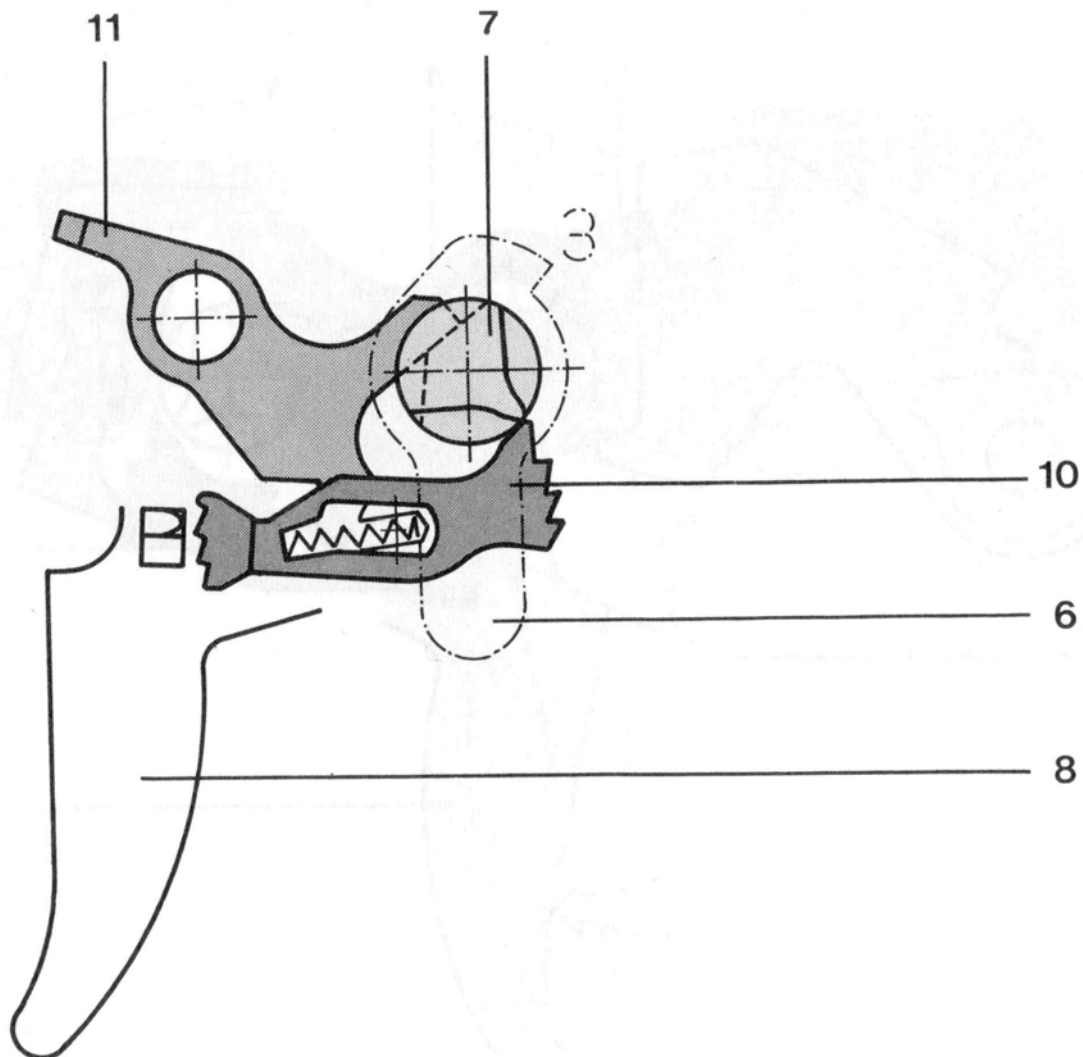


Figure 65

Home position, 3-round burst control system

By pulling the trigger [8], the trigger rod [4] is withdrawn and simultaneously retained by the automatic fire pawl [11]. The segment [10] is pressed to the rear by the driving cam [12] in the trigger [8] so that the pawl [13] is allowed to register.

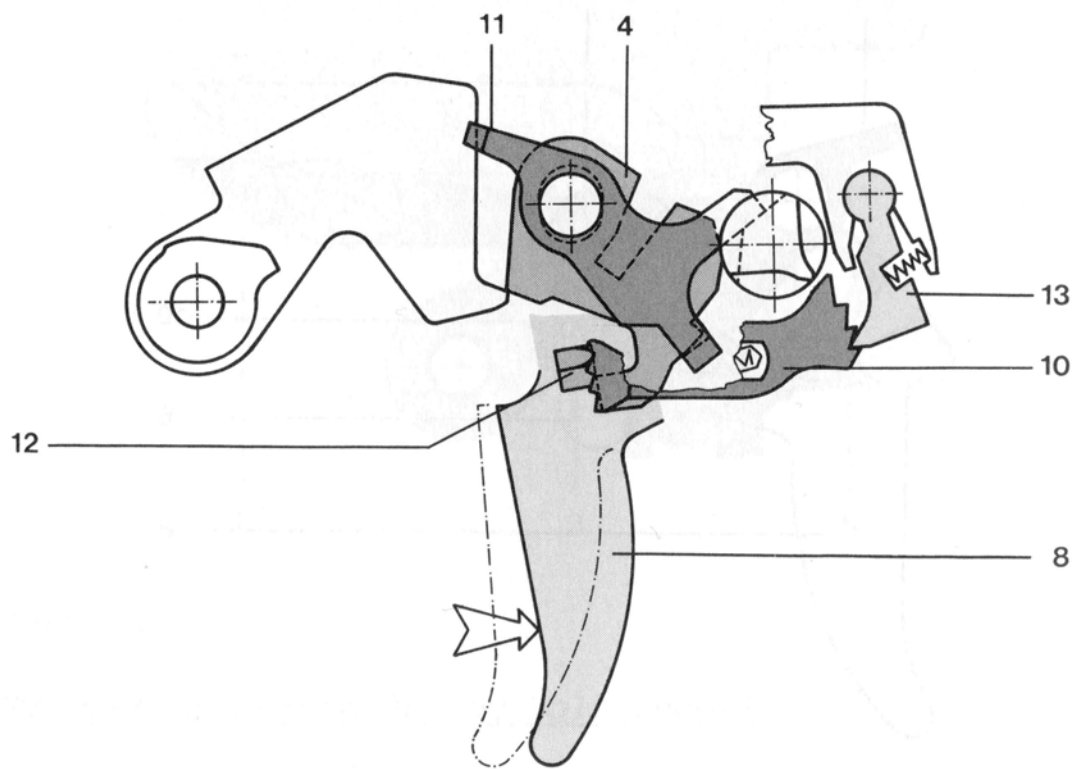


Figure 66

Trigger mechanism, immediately prior to firing

When the hammer [3] is thrust forward, the chargeover [14] presses the pawl [13] via its eccentric [15] on the segment [10]. The segment jumps up by one notch.

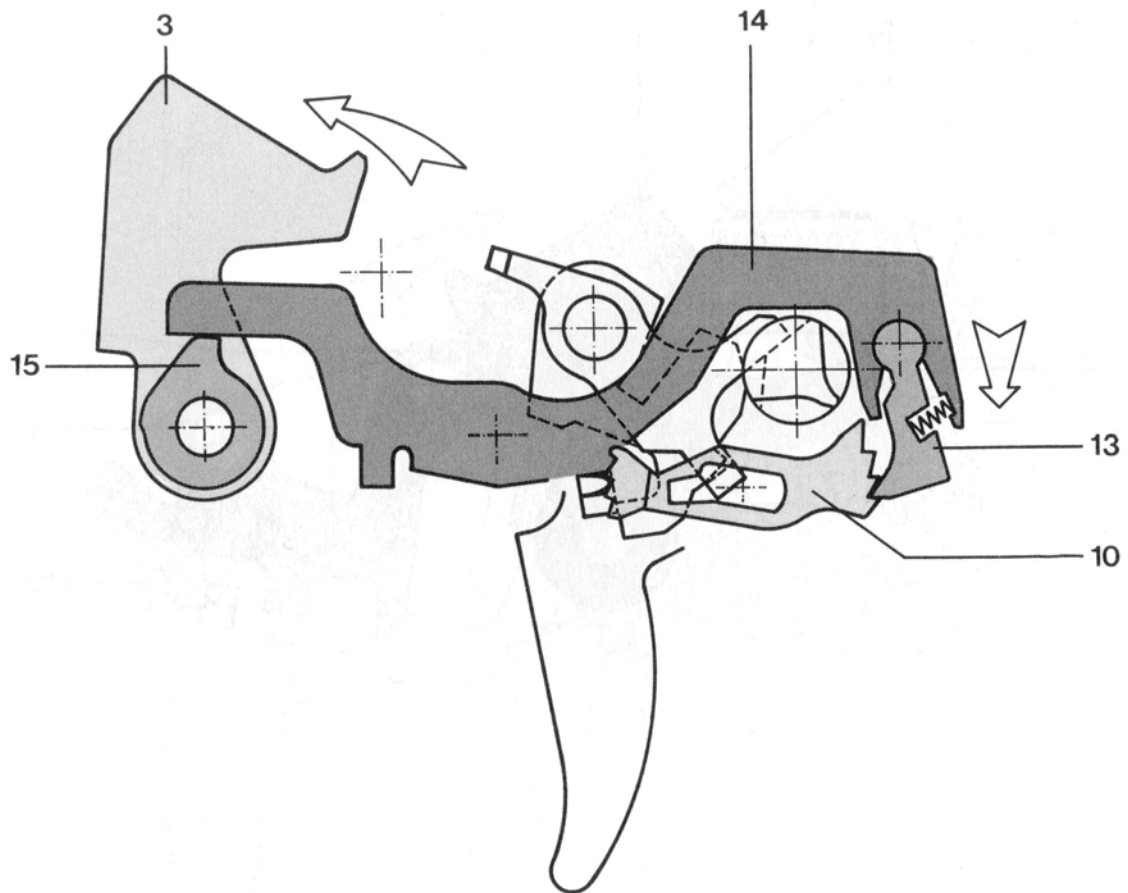


Figure 67

Trigger mechanism after firing  
[first round]

The recoiling bolt cocks the hammer [3] which is retained by the sear [5] [Refer to figure 64].

The advancing bolt presses the sear [5] via the release bar [2] to the rear thus releasing the hammer [3]. The segment [10] moves up another notch.

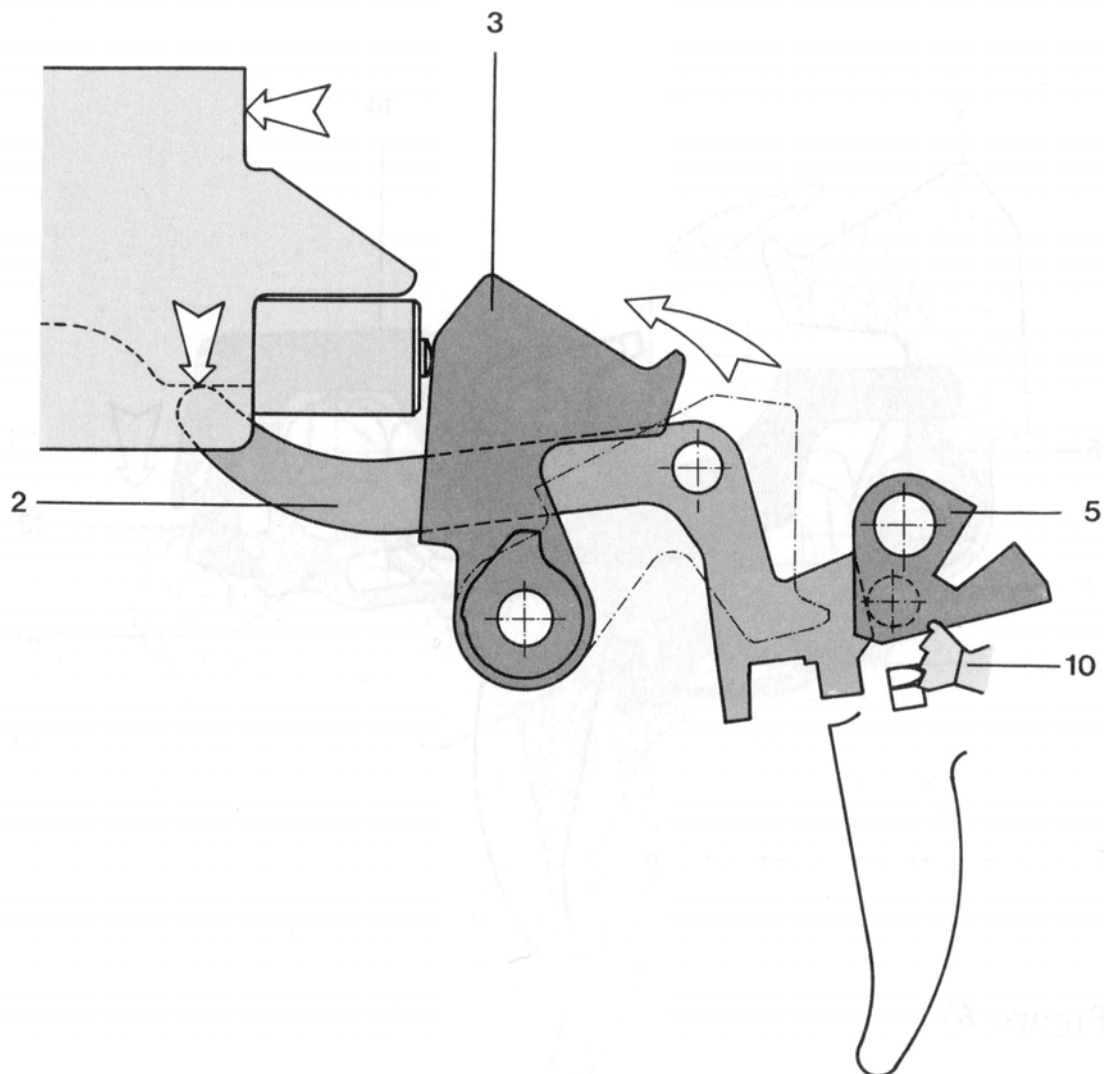


Figure 68

Trigger mechanism during firing  
[second round]



When the third round is fired –just like the second round- via the release bar, the segment [10], pressed by the chargeover [14] jumps on the driving cam [12] of the trigger [8] and interrupts the support of the trigger rod [4] by the automatic fire pawl [11].

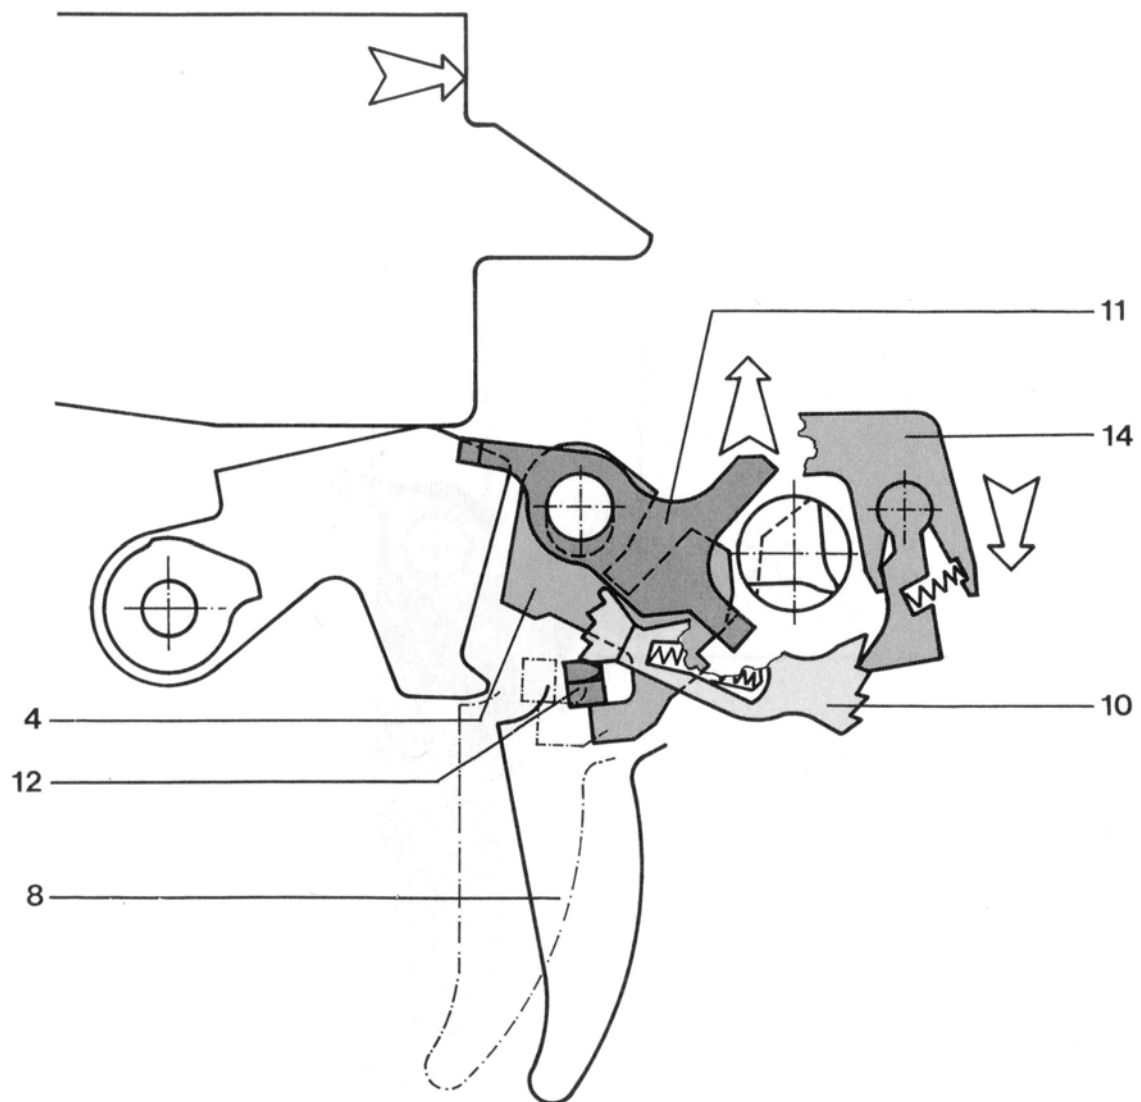


Figure 69

Trigger mechanism after the third round

The sear [3] catches the hammer [5] [refer to figure 64].

The advancing bolt drives the release bar [2] downward.  
The release bar [2] presses the sear [5] to the rear and releases the hammer [3] [refer to figure 68].

The hammer is retained by the trigger rod. When the trigger [8] is released the segment [10] moves back to its home position [refer to figure 65].

#### 5.2.5. Full auto fire

The safety lever [6] is set on "20". The automatic fire pawl [11] which supports the trigger rod [4] lies in the groove of the safety shaft [7]. By pulling the trigger [8] the trigger rod [4] is drawn to the rear and supported by the automatic fire pawl [11].

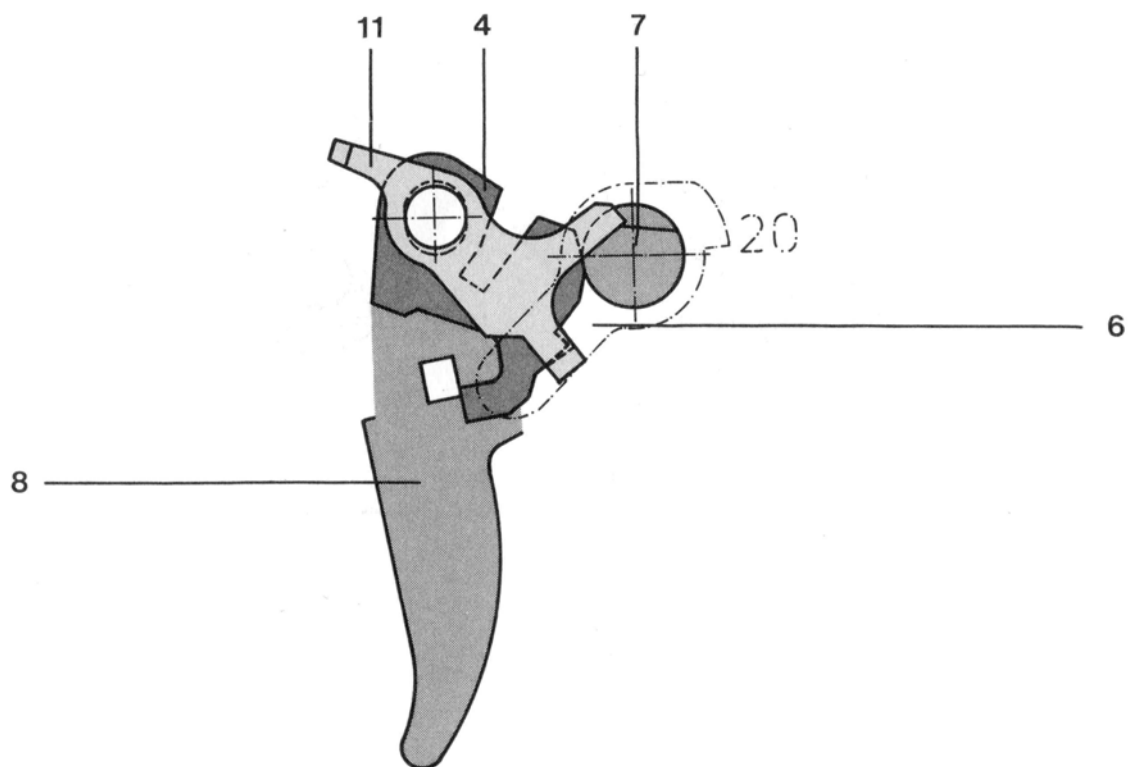


Figure 70

Trigger mechanism during full auto fire

The hammer [3] is released and strikes forward [refer to figure 63].

The recoiling bolt cocks the hammer [3] which is retained by the sear [5] [refer to figure 64].

The advancing bolt presses on the release bar [2] which pushes the sear [5] to the rear thus releasing the hammer [3] [refer to figure 68].

This trigger function is only interrupted when the trigger [8] is released. In doing so the link between the automatic fire pawl [11] and the trigger rod [4] is disconnected. The trigger rod [4] moves downward and catches the hammer [3].

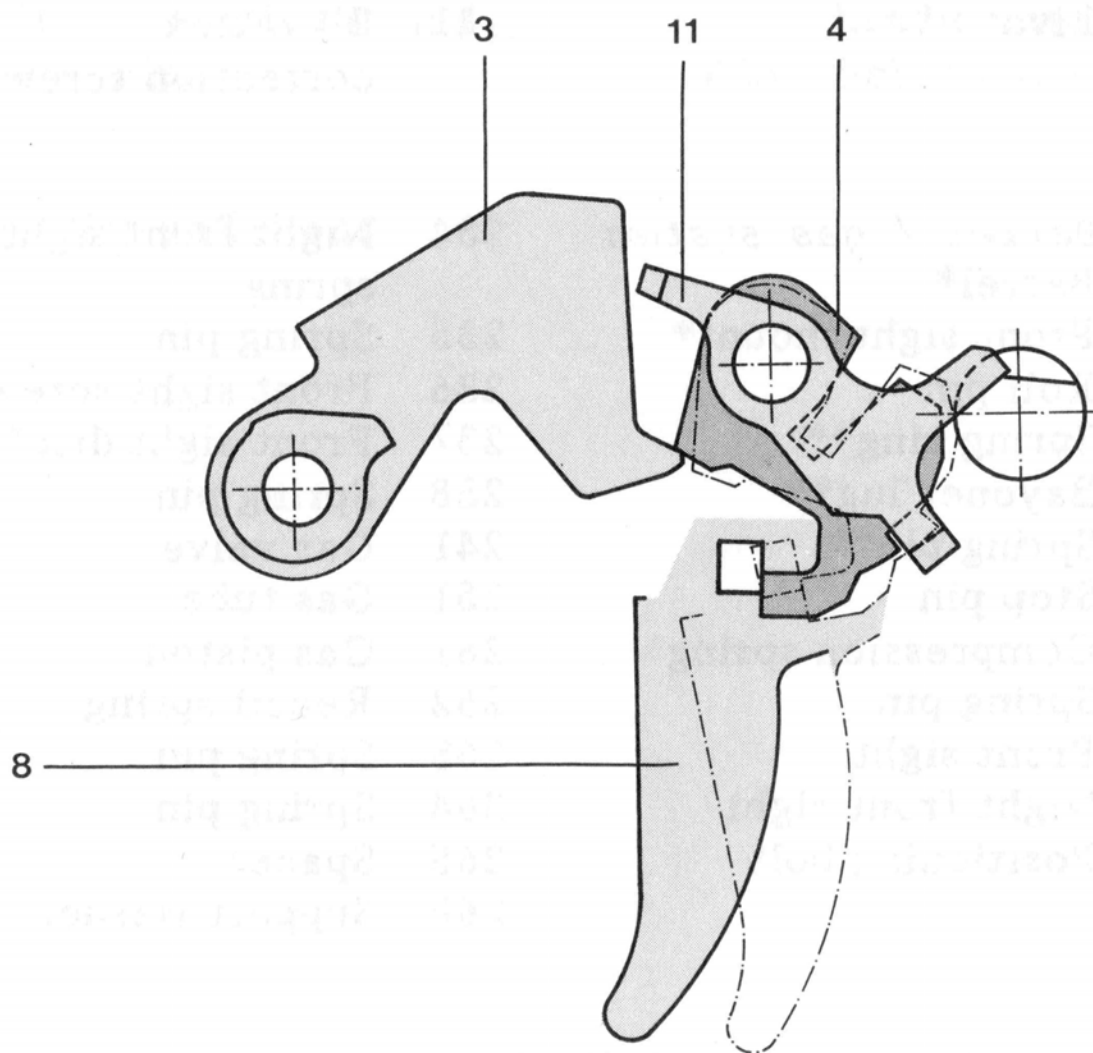


Figure 71

Interruption of fully automatic fire

## 6. Appendix

### 6.1. list of parts

#### *100 receiver*

- |                       |                                 |
|-----------------------|---------------------------------|
| 111. Receiver casing  | 162. Drum axle                  |
| 141. Bolt cover       | 163. Spring washer              |
| 142. Rivet            | 164. Safety washer              |
| 151. Rear sight drum  | 165. Leaf spring                |
| 152. Drum spring      | 171. Windage correction screw   |
| 153. Drum stud        | 172. Click stud                 |
| 154. Luminous ampule* | 173. Rear sight spring          |
| 155. Insert           | 174. Limitation spring          |
| 156. Rubber disc      | 175. Spring pin                 |
| 161. Pivot            | 181. Elevation correction screw |

#### *200 Barrel / gas system*

- |                               |                        |
|-------------------------------|------------------------|
| 211. Barrel*                  | 235. Spring pin        |
| 212. Front sight mount*       | 236. Front sight screw |
| 213. Roll pin                 | 237. Front sight disc  |
| 214. Spring ring**            | 238. Spring pin        |
| 221. Bayonet lug**            | 241. Gas valve         |
| 222. Spring pin               | 251. Gas tube          |
| 223. Stop pin                 | 261. Gas piston        |
| 224. Compression spring       | 262. Recoil spring     |
| 225. Spring pin               | 263. Spring pin        |
| 231. Front sight              | 264. Spring pin        |
| 232. Night front sight        | 265. Spacer            |
| 233. Positioning bolt         | 268. Support washer    |
| 234. Night front sight spring |                        |

#### *300 Handguard*

- |                       |                      |
|-----------------------|----------------------|
| 311. Upper handguard  | 333. Bipod carrier** |
| 321. Lower handguard  | 334. Stud**          |
| 330. Bipod complete** | 335. Circlip**       |
| 331. Leg left**       | 336. Click stud**    |
| 332. Leg right**      | 337. Bipod spring**  |

#### *400 Bolt*

- |                        |                                  |
|------------------------|----------------------------------|
| 411. Bolt head         | 421. Bolt carrier                |
| 412. Firing pin        | 422. Bolt handle catch           |
| 413. Firing pin stud   | 423. Axel of bolt handle catch   |
| 414. Firing pin spring | 424. Spring of bolt handle catch |
| 415. Extractor         | 425. Bolt handle                 |
| 416. Extractor spring  |                                  |
| 417. Pin               |                                  |

\* Can not be ordered as individual parts

\*\*Not on SG 551

### *500 Trigger assembly*

- |                             |                                     |
|-----------------------------|-------------------------------------|
| 501. Trigger casing         | 562. Hammer axle                    |
| 510. 3-round burst facility | 563. Main spring                    |
| 511. Template               | 564. Bolt catch                     |
| 512. Chargeover             | 565. Bolt catch spring              |
| 513. Pawl                   | 566. Spring bolt                    |
| 514. Pawl spring            | 571. Safety lever                   |
| 515. Bush                   | 572. Safety shaft                   |
| 516. Segment                | 573. Locking spring                 |
| 517. Segment axle           | 575. Automatic firing lock axle     |
| 518. Segment spring         | 576. Spring pin                     |
| 519. Locking washer         | 578. Stop ring                      |
| 520. Compression spring     | 581. Trigger                        |
| 521. Magazine catch         | 582. Trigger spring                 |
| 522. Magazine catch spring  | 583. Trigger rod                    |
| 523. Magazine catch pin     | 584. Pivot trigger                  |
| 524. Bush                   | 585. Trigger bush                   |
| 531. Release bar            | 586. Trigger rod spring             |
| 532. Circlip                | 587. Sear*                          |
| 541. Pistol grip            | 588. Automatic fire pawl            |
| 542. Floorplate             | 589. Automatic fire pawl spring     |
| 543. Allen screw            | 591. Trigger casing stud            |
| 544. Stop nut               | 592. Spring –pressure pin           |
| 545. Nameplate              | 593. Spring for trigger casing stud |
| 551. Pressure point screw   | 594. Spring pin                     |
| 552. Stop nut               | 595. Pin                            |
| 553. Pressure point spring  | 596. Cup spring                     |
| 554. Trigger guard          | 597. Baffle plate                   |
| 555. Trigger guard bearing  | 598. Sear bolt*                     |
| 561. Hammer                 | 599. Sear roller*                   |

### *600 Butt*

- |                        |                 |
|------------------------|-----------------|
| 611. Buttstock         | 614. Clip       |
| 612. Butt catch        | 615. Spring pin |
| 613. Butt catch spring | 616. Butt       |

### *700 Magazine*

- |                          |                      |
|--------------------------|----------------------|
| 711. Magazine casing     | 714. Feeder          |
| 712. Magazine floorplate | 715. Magazine spring |
| 713. Floorplate catch    |                      |

\* Can not be ordered as individual parts

## 6.2. Exploded drawing

Information to be supplied when ordering spare parts:

- ❑ Type of weapon
- ❑ Serial number
- ❑ Caliber
- ❑ Item number
- ❑ Parts designation



# Assault Rifle SG 550

