


Reverse Accumulator/1st-hold Accumulator

Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air.
- Blow out all passages.
- Replace the O-rings.
- Check all pistons for free movement. If any fail to slide freely, see Valve Body Repair on page 14-114.
- Coat all parts with ATF before reassembly.

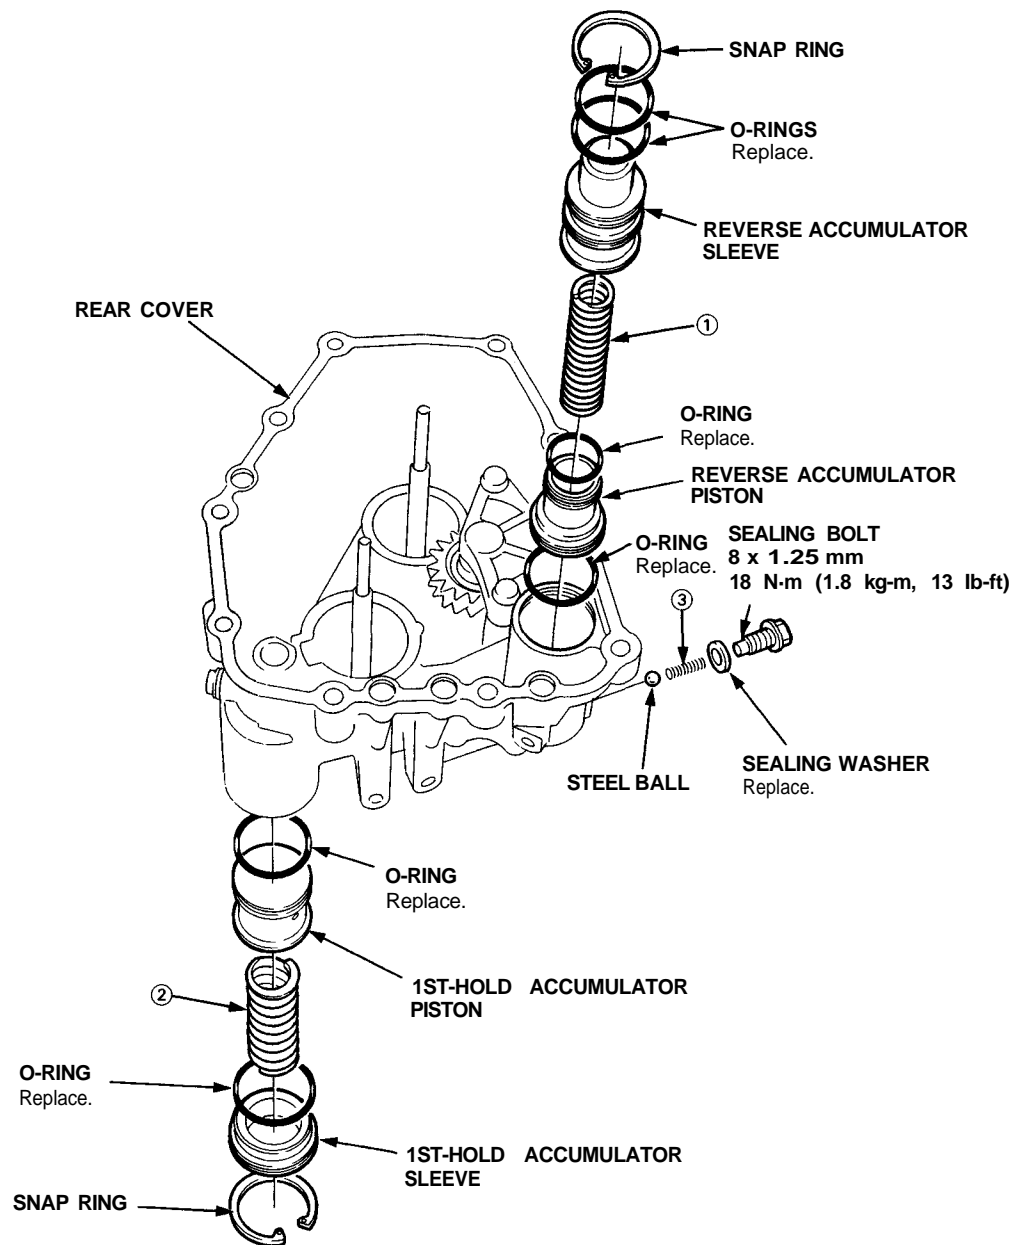

SPRING SPECIFICATIONS

Unit: mm (in)

No.	Spring	Standard (New)			
		Wire Dia.	O.D.	Free Length	No. of Coils
①	Reverse accumulator spring	3.5 (0.138)	18.6 (0.732)	115.5 (4.547)	19.0
②	1st-hold accumulator spring	4.0 (0.157)	25.0 (0.984)	68.4 (2.693)	7.2
③	One-way ball spring	0.29 (0.011)	4.0 (0.157)	14.0 (0.551)	13.0