


— COLONNADE —

Pressed Hopper Head - Juno

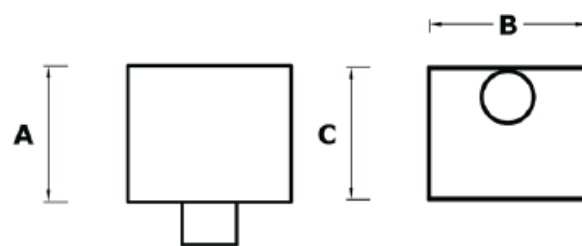

Pipe Size	Outlet	Product Code
63mmØ 76mmØ 101mmØ	Circular	HJUNO2R HJUNO3R HJUNO4R
63 x 63mm 76 x 76mm 101 x 101mm	Square	HJUNO2S HJUNO3S HJUNO4S
101x76mm	Rectangular	HJUNO43

Product Description

The Juno hopper head is available to suit all of ARP's downpipe systems. Generally used to collect and discharge water from a flat roof via a parapet outlet or alternatively from multiple downpipes.

Dimensions (default standard size)

A (H) = 190mm, **B** (W) = 228mm, **C** (D) = 190mm

Bespoke sizes can be manufactured

Properties

Made from aluminium sheet 1050A H14
100% recyclable
Lightweight and low maintenance
Available Mill Finished (uncoated) or coated on ARP's in-house Polyester Powder Coating line to clients choice of RAL or BS standard colours.

Joining

ARP hopper heads connect directly to the end of whatever downpipe system is chosen (must be identified at point of order). Should a waterproof seal be required between the 2 surfaces,, ARP recommends the use of a low modular sealant, such as Arbosil 1096.

Functional Life Expectancy

ARP qualifies that when installed correctly and maintained in accordance with its product guidelines and O&M procedure, its products are designed to give a minimum effective functional life expectancy of 30+ years.

Specification Information

Clause: R10/311 Rainwater Drainage Systems

Product: Colonnade Juno Hopper Head

Manufacturer: ARP Ltd
Unit 2 Vitruvius Way
Meridian Business Park
Braunstone, Leicester
LE19 1WA

Handling & Storage

Gutters, downpipes and fittings, particularly with polyester powder coat finish should be handled with care and should preferably be stored under cover on racks to prevent scratching. All lengths are supplied in protective polythene wrapping, components suitably packed in boxes. If painted products are to be stored outside, cover with tarpaulin to guard against water ingress into the protective polythene. Mill finish items should be stored undercover to avoid uneven oxidation prior to being fitted.

Maintenance

In order to maintain proper working order, gutters should be periodically cleaned out and any built-up debris removed. Check all fixings are secure and take any remedial action to rectify if necessary. To maximise the life of the decorative paint finishes, all parts should be washed down with clean water, at least every 12 months and any damage repaired. In marine/industrial environments and dependent on distance from either the coastline or source of pollution, this period may need to be shortened to 6 or 3 months. Records of the cleaning schedule and frequency should be kept and maintained. Please enquire of our sales office, should more information be required.

Further Information

Please visit www.arp-ltd.com or contact the ARP team on 0116 289 4400 for any other information