



**SIEMENS**

# MJ-5<sup>TM</sup> Communications Module

Fiber Optic and RS-232/485/ Network

Installation Manual for MJ-5<sup>TM</sup> Control Panels

 <b>DANGER</b>	
	<p><b>Hazardous Voltage.</b>  <b>Will cause death, serious injury, or equipment damage.</b></p> <p>De-energize and ground the equipment before maintenance.</p> <p>Only qualified personnel should work on this equipment after becoming thoroughly familiar with all warnings, safety notices, instructions and maintenance procedures contained herein. The successful and safe operation of this equipment is dependent upon proper handling, installation, operation and maintenance.</p>

The information contained herein is general in nature and not intended for specific application purposes. It does not relieve the user of responsibility to use sound practices in application, installation, operation, and maintenance of the equipment purchased. Siemens reserves the right to make changes in the specifications shown herein or to make improvements at any time without notice or obligations. Should a conflict arise between the general information contained in this publication and the contents of drawings or supplementary material or both, the latter shall take precedence.

**NOTE**

**Authorized and qualified Personnel**

For the purpose of this manual a qualified person is one who is familiar with the installation, construction or operation of the equipment and the hazards involved. In addition, he has the following qualifications:

- (a) **Is trained and authorized** to de-energize, clear, ground, and tag circuits and equipment in accordance with established safety practices.
- (b) **Is trained** in the proper care and use of protective equipment such as rubber gloves, hard hat, safety glasses or face shields, flash clothing, etc., in accordance with established safety practices.
- (c) **Is trained** in rendering first aid.

**SUMMARY**

These instructions do not purport to cover all details or variations in equipment, nor to provide for every possible contingency to be met in connection with installation, operation, or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the local sales office, listed on the back of this instruction guide.

The contents of this instruction manual should not become part of or modify any prior or existing agreement, commitment or relationship. The sales contract contains the entire obligation of Siemens Power Transmission & Distribution Inc. The warranty contained in the contract between the parties is the sole warranty of Siemens Power Transmission & Distribution Inc. Any statements contained herein do not create new warranties or modify the existing warranty.

<b>DANGER</b>	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
<b>WARNING</b>	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
<b>CAUTION</b>	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

# Table of Contents

<b>1</b>	<b>INTRODUCTION</b>	<b>1</b>
1.1	DESCRIPTION	1
<b>2</b>	<b>TRANSMISSION METHODS</b>	<b>1</b>
2.1	FIBER OPTIC TRANSMISSION	1
2.2	WIRE TRANSMISSION	2
2.2.1	RS-232	2
2.2.2	RS-485	3
<b>3</b>	<b>COMMUNICATION PROTOCOLS</b>	<b>4</b>
<b>4</b>	<b>INSTALLING THE COMMUNICATIONS MODULE IN MJ-5 CONTROL PANELS</b>	<b>4</b>
<b>5</b>	<b>CABLING THE COMMUNICATIONS MODULE TO THE POWER SYSTEM</b>	<b>4</b>
5.1	FIBER OPTIC CABLE TYPE	5
5.1.1	Fiber Optic Cable Lengths	5
5.1.2	Fiber Optic Connector	5
5.1.3	Fiber Optic Connections	5
5.2	RS-485 TWISTED-PAIR CABLE	6
5.2.1	RS-485 Cable Type	6
5.2.2	RS-485 Cable Grounding	6
5.2.3	RS-485 Connector	6
5.2.4	RS-485 Cabling Considerations	6
5.3	RS-232 CONNECTIONS	8
5.3.1	RS-232 Multi-drop Wiring	9
5.4	RS-232/485 CONNECTIONS	9
5.5	COMMUNICATIONS MODULE CONFIGURATION (REFERENCE 4.7)	10
5.5.1	Communications Menu Item Descriptions	11
5.6	TROUBLESHOOTING COMMUNICATIONS PROBLEMS	14
5.6.1	Using MJXplorer to Troubleshoot Communications Problems	14
<b>6</b>	<b>SETTING THE DNP POINTS</b>	<b>15</b>
6.1	USING THE DNP CONFIGURE PROGRAM FOR A CUSTOM DNP POINT SET	15
6.2	SELECTING A PREDEFINED DNP POINT SET	16
6.2.1	DNP point set for MJ-5	16
6.2.2	DNP Point set for other Control Panels	16
6.2.3	2.x4	16
6.2.4	Small 2.x3	17
6.2.5	Simple	18
6.2.6	Metering	19
6.2.7	Active	20
6.2.8	Set 7	21
6.2.9	2.x3	22
<b>7</b>	<b>SPECIFICATIONS</b>	<b>29</b>
7.1	PHYSICAL DIMENSIONS	29
7.2	FIBER OPTIC LINK INTERFACE SPECIFICATIONS	29
7.3	RS-232/RS-485 INTERFACE SPECIFICATIONS	29
<b>500</b>	<b>C, 1 MINUTE</b>	<b>29</b>
<b>8</b>	<b>MASTER SLAVE CONFIGURATION</b>	<b>28</b>

## Figures

FIGURE 1-1: MJ-5 COMMUNICATIONS MODULE	FIGURE 1-2: BACK OF MJ-5	1
FIGURE 2-1: FIBER OPTIC NETWORK		2
FIGURE 2-2: RS-232 CONNECTION		2
FIGURE 2-3: MODEM CONNECTION		2
FIGURE 2-4: RS-485 CONFIGURATION – LOOP NETWORK		3
FIGURE 2-5: RS-485 CONFIGURATION – STAR NETWORK		3
FIGURE 5-1: FIBER OPTIC CONNECTIONS		5
FIGURE 5-2: RS-485 CONNECTION		6
FIGURE 5-3: SCREW TERMINAL BLOCK CONNECTOR		6
FIGURE 5-4: RS-485 LOOP TOPOLOGY		7
FIGURE 5-5: COMMUNICATION CABLE ROUTING		8
FIGURE 5-6 : RS-232 MULTI-DROP CONFIGURATION		9
FIGURE 5-7: RS-232 CONNECTOR PINOUT		9
FIGURE 5-8: SCREW TERMINAL CONNECTION		9
FIGURE 5-9: MJXPLOER TROUBLESHOOTING CONNECTIONS		15

## Tables

TABLE 5-1 RS-485 CABLE SPECIFICATIONS	6
TABLE 5-2 RS-232 INTELLIGENT ELECTRONIC DEVICE WIRING	8
TABLE 5-3 MODEM WIRING	8
TABLE 5-4 COMMUNICATIONS MENU ITEMS	10

MJ-5, and MJXplorer are trademarks of Siemens Industry, Inc.

Siemens is a registered trademark of Siemens AG.

© 1994 - 2008 Siemens Industry, Inc.

## 1 Introduction

This manual describes the installation and connection procedures for the MJ-5™ Communications Module which has the Fiber Optic and RS-232/485, and networking interfaces combined in one single printed circuit board. The operation and functionality of the Fiber Optic and the RS-232-/485 interfaces are quite similar, only one of the interfaces can be used at a time. The manual covers the procedures for connecting the module to a system of networked MJ-5 Tap Changer Control Panels.

### 1.1 Description

The Siemens MJ-5 Communications Module is the communication interface used to connect the MJ-5 Control Panel to a network of regulator controllers, control devices and supervisory equipment. Figure 1-1 illustrates the MJ5 Communications Module.

The fiber optic interface enables connection of the tap changer control panel to the supervisory equipment via multimode fiber optic cable. The RS-232/485 interface enables connection of the tap changer control panel to the supervisory equipment via electrical wire.

The MJ-5 Communications Module is installed in MJ-5 Tap Changer Control Panels. This allows you to easily network the control panels and other field devices to a remote terminal unit (RTU) or other supervisory device. An adapter kit is available for mounting MJ-5 Communications Modules in MJ-X Control Panels.

Figure 1-1: MJ-5 Communications Module


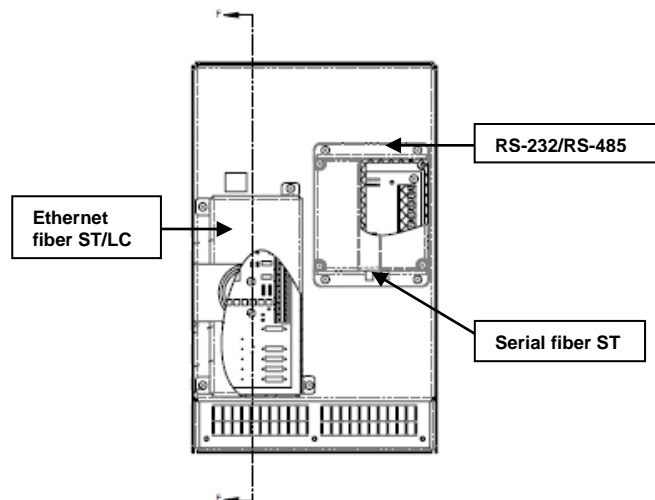


Figure 1-2: Back of MJ-5

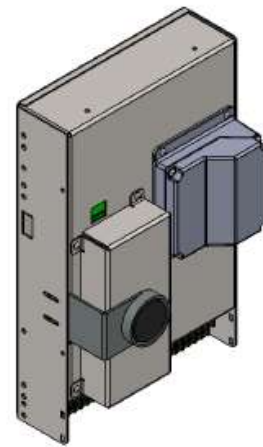

## 2 Transmission Methods


There are two transmission mediums available for sending data to the RTU:

- fiber optic
- wire

### 2.1 Fiber Optic Transmission

The primary benefits of fiber optic communications are its immunity to induced electrical interference and relatively low signal loss. Electrical noise cannot be induced into the cable to generate transient spikes that disrupt data communications.

The Fiber Optic interface on the Communications Module uses multi-mode fiber optic cable. The electrical signals are converted to optical signals by the communication unit. The optical signals are then transmitted via the fiber optic cable to the RTU. Communications modules in the path between the transmitting communications module and the RTU act as repeaters and simply regenerate the signals and forward them to the next device as seen in Figure 2-1.

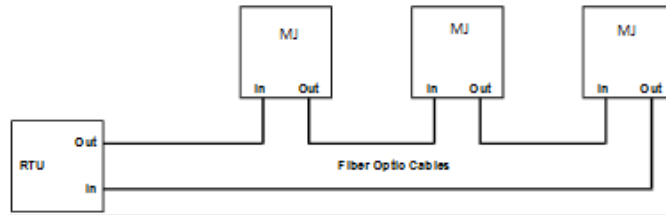

**Figure 2-1: Fiber Optic Network**


## 2.2 Wire Transmission

The advantage of wire transmission is simple installation. The MJ-5 supports two popular wire interfaces: RS-232 and RS-485. The screw terminal block connector supplied with the module can be wired for either interface. Connection to the supervisory device is typically accomplished using a DB-9 (DE-9) connector for RS-232, while the connector used for RS-485 will vary with the application.


### 2.2.1 RS-232

Direct RS-232 connections are limited to a maximum distance of 50 feet, Figure 2-2. The RS-232/485 interface on the MJ-5 Communications Module supports RS-232 multi-drop configurations.

The distance between devices may be extended with modems, Figure 2-3. Modem connections are either dial-up, short-haul, or radio-based. Dial-up modems are typically deployed when there is easy access to the telephone connections, while short-haul modems are useful within a facility where there is access to the wiring. Consider using a radio modem when laying cable for a land-line modem is impractical.

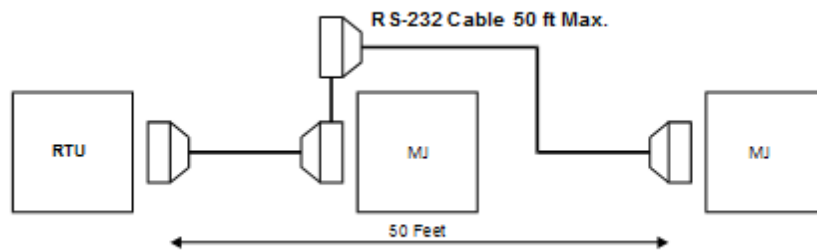

**Figure 2-2: RS-232 Connection**

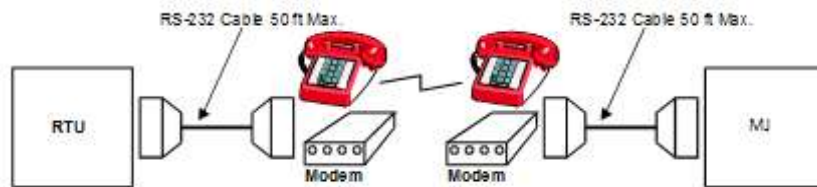

**Figure 2-3: Modem Connection**

### 2.2.2 RS-485

The maximum distance for RS-485 is 4000 feet, either from device to device or for an entire loop. The recommended cable for RS-485 is shielded, two twisted-pair, 22 AWG. This type of cable consists of jacketed wire that is twisted together and wrapped in a shield to prevent electromagnetic interference from affecting the data signal. A maximum of 32 devices can be connected to an RS-485 network. Typical network configurations are loop, star, and open-ended. These are shown in Figures 2-4 to 2-6. The recommended network configuration is a loop. This will ensure that all devices remain connected to the master unit in the event of a line break. If the loop configuration does not allow you to place the equipment in the desired location, connect the network open ended.

If either the star or open-ended configurations are used, termination resistors must be installed at the end devices. For more information on installing RS-485 networks, refer to Section 5.2 RS-485 Twisted-pair Cable. The following characteristics determine the maximum length and data rate of an RS-485 network.

**Impedance:** The maximum transfer of energy occurs when the cable’s terminating impedance matches the characteristic impedance of the cable. If the cable’s characteristic impedance is 120 ohms, use a 120 ohm terminating resistor.

**Capacitance:** Wire capacitance affects the rise and fall times of a transmitted signal and, as a result, limits the signaling (baud) rate of the data. The higher the capacitance is in a wire, the lower the maximum baud rate of the wire. Additionally, higher capacitance requires higher output current to drive the line. Since capacitance is proportional to wire length, it can limit the maximum cable length for a given baud rate.

**Cable Size:** Cable size along with capacitance and DC resistance determine whether the cable is suitable for the application. A 22-gauge cable will provide a proper balance of capacitance and resistance.

**DC Resistance:** DC resistance determines the maximum length of wire allowed for an application. The maximum length is determined by the resistance of each twisted pair along with the device termination resistance. The use of surge protectors with series resistance also contributes to loop resistance.

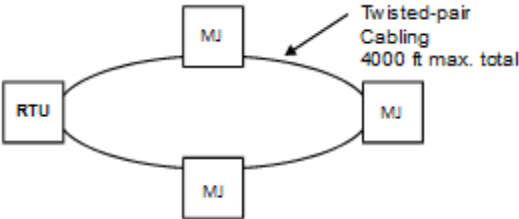


Figure 2-4: RS-485 Configuration – Loop Network

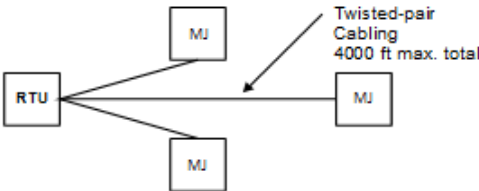


Figure 2-5: RS-485 Configuration – Star Network

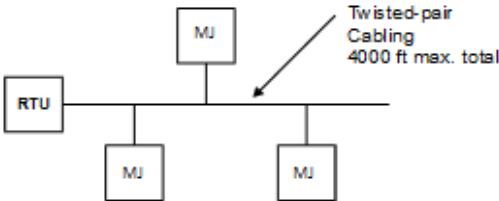


Figure 2-6: RS-485 Configuration – Open-Ended Network

### 3 Communication Protocols


The MJ-5 Control Panel is designed to be used in a network of intelligent power control devices communicating with a supervisory device or remote terminal unit (RTU). Each device on the network has a specific communications address assigned to allow messages to be directed to and from the device. Messages are transmitted from the RTU to all devices and only the device with the specified address will respond. The MJ-5 Communications Module supports the following protocols. Refer to the documents listed for details about the protocols.

- Distributed Network Protocol (DNP 3.0). (See User's Group website: [www.dnp.org](http://www.dnp.org))
- The Cooper 2200 Protocol (with or without address byte)
- The 2179 Protocol (Based on the PG&E Protocol)

### 4 Installing the Communications Module in MJ-5 Control Panels

The MJ-5 Communications Module is mounted directly on the MJ-5 Main Processor Board. Follow these steps to install the communications module. Details are provided in the sections below.

1. Turn off power to the MJ-5.
2. If in a regulating device, then disconnect the polarized disconnect switch (PDS).
3. Install the communications module.

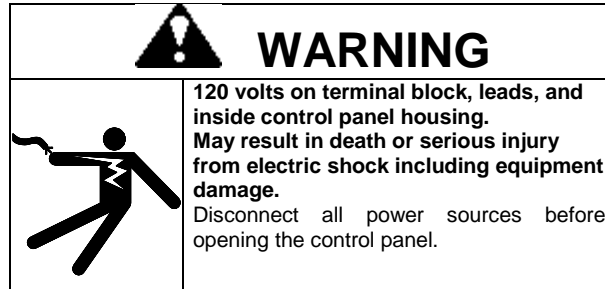

### 5 Cabling the Communications Module to the Power System

Connect the communications modules using the recommended cable as described in sections 5.1 to 5.3 below. The following sections provide some general guidelines for cable selection and explain the different cable parameters. Make connections between the device and the communications unit with the appropriate connector.

Typically, RS-485 requires custom wiring to the other devices. Consult the device's pin assignments to determine the applicable connections. Typically, a DB-9 (DE-9) will be needed for making RS-232 connections to the RTU, personal computer, or other device. Use the supplied Phoenix Contact Screw Terminal Block (MSTBT 2, 5/8-ST-5, 08) for connections to the RS-232/485 interface. Use an ST optical connector when making connections to the fiber optic interface.

Though the cabling for the Fiber Optic and the RS-232-/485 interfaces may be done and either interface may be made available for communication, only one of the interfaces may be used at a time.



## 5.1 Fiber Optic Cable Type

The recommended cable is 62.5/125  $\mu\text{m}$  diameter fiber optic cable with a maximum attenuation of 5dB/km at a wavelength of 820-850 nm. If this is not available use 50/125  $\mu\text{m}$  diameter glass cable, but only for cable lengths less than 1500 feet. Use of 50/125  $\mu\text{m}$  diameter cable requires that the range jumper J12 be set for long range. This will provide protection against under driving the receiver. When using 50/125  $\mu\text{m}$  cable, install the long range jumper (J12) even for very short cable lengths.

A 100/140  $\mu\text{m}$  diameter cable can also be used for cable lengths less than 1500 feet. Use of this cable requires that the range jumper (J12) be set to normal. This setting will provide protection against overdriving the receiver.

Plastic cable is not recommended due to the coupling efficiency of the cable, which at short lengths will overload the optical receiver. In addition, the large cable attenuation normally associated with plastic cable limits the useful link lengths to a fraction of that achievable with glass cable.

### 5.1.1 Fiber Optic Cable Lengths

Calculate cable length by determining the output power of the transmitter ( $P_{TX}$ ) and the input receive level (Peak Input Power Logic Level Low Receiver Sensitivity,  $P_{RX}$ ). The difference between the two numbers is the optical power budget ( $P_B'$ ).

$$P_B' = P_{TX} - P_{RX}$$

For example, if transmitter output power is -16 dBm and the input receive level is -24 dBm, the optical power budget is then 8 dBm. Subtract from this value the fixed losses (i.e. connector losses, splice losses,  $P_{Loss}$ ) to obtain the real power budget ( $P_B$ ).

$$P_B = P_B' - P_{Loss}$$

Divide the result by the cable attenuation (Att) in dB/km to arrive at the maximum cable length. Note that the transmitter output power data given in the specifications already includes connector loss when using precision ceramic ST connectors.

$$\text{Length} = P_B / \text{Att}$$

### 5.1.2 Fiber Optic Connector

The fiber optic cables (or “patch cords”) used with the MJ-5 Fiber Optic Communications Module must be terminated with ST style connectors and have a numerical aperture of  $0.275 \pm 0.015$ .

(If pre-terminated cables are not used, follow the instructions supplied by the manufacturer to attach the connector to the fiber cable using the cable type recommended in section 7.1.)

### 5.1.3 Fiber Optic Connections

When making connections to the transmitter and receiver inputs/outputs, ensure that the transmit output from one device is connected to the receive input of the next device. Figure 7-1 shows how to insert the connector. The tip of the cable on the ST connector must be clean and free of dust. Dust on the tip of the cable will cause signal attenuation.

Use care when handling the fiber optic connector, especially the exposed ceramic ferrule.

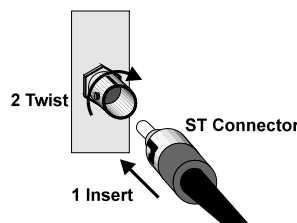


Figure 5-1: Fiber Optic Connections

## 5.2 RS-485 Twisted-pair Cable

The following sections provide the information necessary to select and install cable between an MJ-5 Control Panel, RTU, and other field devices in an RS-485 network.

### 5.2.1 RS-485 Cable Type


Listed in Table 7-1 are the cable characteristics necessary for proper electrical performance in an RS-485 communications network. Use cable with a shield that provides 100 percent RFI/EMI coverage.

**Table 5-1 RS-485 Cable Specifications**

Characteristic	Value	Maximum/Typical
Impedance	120 ohms	Typical
Capacitance (pF/ft)	35	Maximum
Cable Size	22 AWG	Typical
DC Resistance	17 ohms/1000 ft	Maximum
Velocity of Propagation	80%	Maximum

### 5.2.2 RS-485 Cable Grounding


Ground the cable shield for all devices on the network. Ground the cable shield at only one end to prevent induced interference that may result from circulating ground currents. If a cable shield is grounded at both ends, a ground loop can exist between the components. This ground loop can cause induced interferences that result in signal distortion. If there is a ground potential rise between the connected devices, connect the Signal Return (RTN) between the communication devices. Figure 7-2 illustrates the preferred field device connection method. See section **Error! Reference source not found.** for jumper considerations.

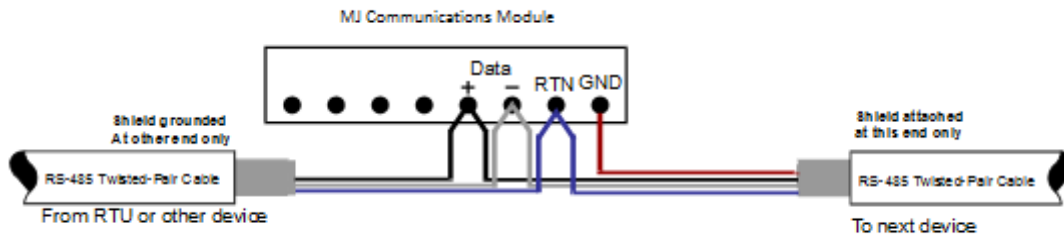

**Figure 5-2: RS-485 Connection**

### 5.2.3 RS-485 Connector

The required connector for connecting to the MJ-5 RS-232/485 Interface is the Weidmuller Contact Screw Terminal Block BLT 5.08/8/180 or equivalent. Wire the connector as shown in Figure 7-2. This connector is supplied with the communications module and is shown in Figure 7-3.

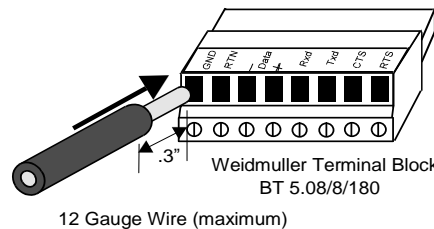

**Figure 5-3: Screw Terminal Block Connector**

### 5.2.4 RS-485 Cabling Considerations

The cable used for connecting the Communications Module to other communication devices is a twisted pair of insulated conductors. The pair is twisted to minimize pickup of random signals between the conductors, particularly those signals induced by electromagnetic interference (EMI).

To further protect against external electrical interference, the pair is shielded by a grounded outer covering. The shield conducts radio frequency interference (RFI) to the ground, thus reducing its effect on the twisted pair. Concern over RFI and EMI is important given the high electrical current and electrically noisy environment through which the communication wires are routed.

Follow the rules below to properly install the RS-485 cables.

1. Connect all field devices in a loop technology so that all devices are connected to the master in case of a line break. The basic loop topology is shown below.



**Figure 5-4: RS-485 Loop Topology**

One of the advantages of the loop topology is that if a line is cut, communication is not interrupted. By completing the loop in the RS-485 cable, one break can be made anywhere in the line without compromising communication with the master device (RTU). To maintain redundancy, avoid open ended runs of the bus.


Each installation method (see Figures 2-4 to 2-6) has advantages and disadvantages. The loop method requires more cable than does the single-ended run method. This extra cable is needed to run from the last device on the run to the master device (RTU). The additional cable adds expense and shortens the total distance the farthest device can be located from the master device. The advantage of the loop method is in the ability to communicate with all devices when there is a break in the loop.

The single-ended run allows larger distances between the master device and the farthest slave device, but it does not allow the master device to communicate with devices on the far side of a break. This method also requires the use of terminating resistors.

2. A maximum of 32 devices may be connected in a single RS-485 bus with a total cable run no longer than 4000 feet.
3. Always ground the shield at only one end of a cable segment. For all devices, ground the cable shield at one end only to prevent induced interference that may result from circulating ground currents. If a cable's shield is grounded at both ends, a ground loop can exist between the components. This ground loop can result in induced interference that causes signal distortion. Figure 7-2 shows the proper method for terminating the shield at the Communications Module connector.
4. When the Communications Module is mounted in the MJ-5 Control Panel, it is grounded internally through the MJ-5 to the equipment ground. A separate connection to the equipment ground is not required.
5. The recommended twisted-pair cable for an RS-485 bus has a characteristic impedance of 120 ohms. Any change in the type of cable, or an open-ended length of cable, creates a discontinuity in the impedance and causes a reflection. Placing resistors that match the characteristic impedance of the cable at the open end of a twisted-pair stub eliminates reflection.

For long, single-ended runs (over 1000 Forwarding ft.), you may need to install a 120 ohm terminating resistor between the data (+) and (-) terminals of the farthest device from the RTU or master end. Adding the terminating resistor is not an absolute requirement, but using it minimizes reflected interference on the communication cable.

6. Do not route signal cabling parallel to power conductors. Wherever possible, place the communication cable perpendicular to the power conductor as shown below. Power conductors are any cables or bus conductors carrying currents greater than 20 amperes.

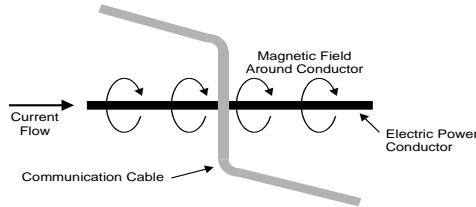

**Figure 5-5: Communication Cable Routing**

Electrical current flowing through a conductor forms a magnetic field around the wire as shown above. Interference is coupled into the wires in the cable through electromagnetic fields. Just as current through a wire causes a magnetic field to form around it, a magnetic field can cause current to flow in a wire. This induction of current is a function of the geometry or orientation of the wires. If the communication cable is at a right angle with the power conductor, it is aligned with the direction of the magnetic field and no current is induced.

7. Follow these guidelines when you route communications cables between electrical equipment:
  - Run communications cables in the same cable raceways (cable routes, cable trays, or cable gutters) as unshielded digital and analog signal cables up to 60 V.
  - Run communications cables in the same cable raceway with shielded signal and supply cables up to 230 V.
  - Run communications cables 4 inches away from unshielded signal and supply cables of up to 230 V.
  - Run cables with voltages greater than 230 V in separate ducts (routes, conduits).

### 5.3 RS-232 Connections

The following section describes the connection requirements for RS-232 cable. This cable will allow you to connect the MJ-5 Control Panel to an RTU or personal computer.

Five of the standard RS-232 wires are used for this application.

- Signal Return (RTN)
- RXD
- TXD
- CTS
- RTS

Table 7-2 lists the connections that must be made to connect the RS232/485 interface to a personal computer, RTU, or other supervisory device. The MJ-5 Communications Module defaults to no-handshaking-required mode. However, the communications module asserts RTS while it transmits data, but the module will ignore the CTS input signal.

**Table 5-2 RS-232 Intelligent Electronic Device Wiring**

MJ-5 RS-232/485 Communications Interface	Personal computer, supervisory device, or other network device
RTN	Signal Ground
RXD	TXD
TXD	RXD

Table 7-3 lists the connections that must be made to connect the RS232/485 interface to a modem.

**Table 5-3 Modem Wiring**

MJ-5 RS-232/485 Communications Interface	Modem


RTN	Signal Return
RXD	RXD
TXD	TXD
RTS	RTS
CTS	CTS

“RXD” is an input for Data Terminal Equipment (DTE) and an output for Data Communications Equipment (DCE). “TXD” is an output for the DTE and an input for the DCE. Personal computer serial ports are configured as DTE and the modems are configured as DCE. The communications module RS-232 connections implement DTE.


**5.3.1 RS-232 Multi-drop Wiring**

Multi-drop configurations require that the respective pins of the DTE devices be connected in parallel, Figure 7-6. The standard pin assignments for RS-232 connectors are shown in Figure 7-7.

**Note:** For Figure 7-6, the RTU port is wired as “DTE”. When networking devices together, make sure the RTU “data out” connects to the communications module Rxd, and the RTU “data in” connects to the communications module Txd.

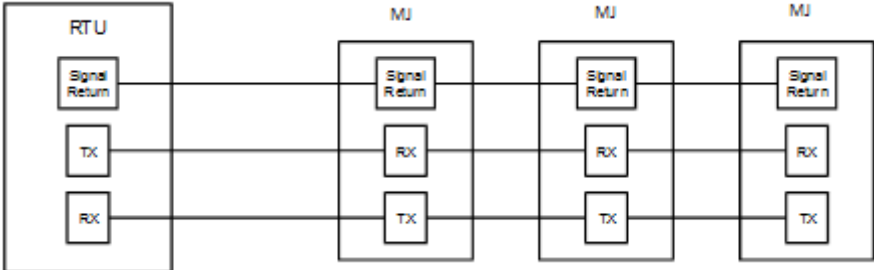


**Figure 5-6 : RS-232 Multi-drop Configuration**

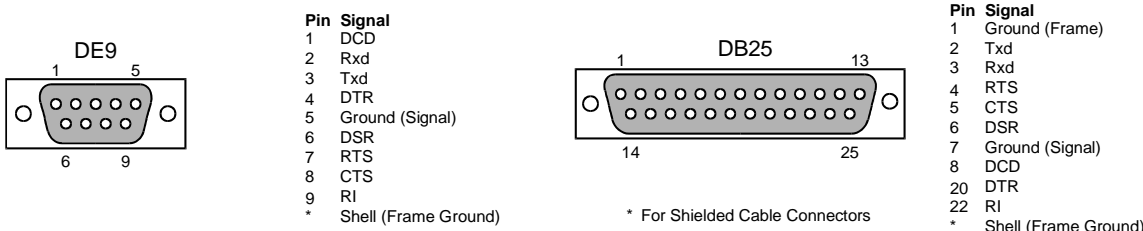

**Figure 5-7: RS-232 Connector Pinout**

**5.4 RS-232/485 Connections**

The screw terminal block connector is keyed for proper insertion. Figure 7-8 shows the proper connector orientation. Align the keys and insert the connector to interface to the RS-232/485 interface.

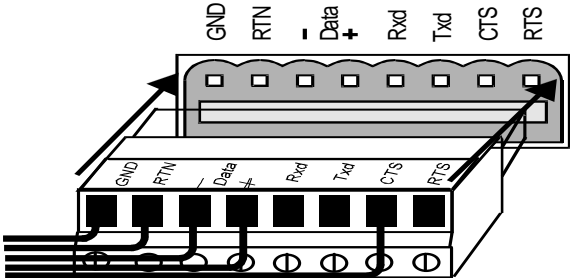

**Figure 5-8: Screw Terminal Connection**

## 5.5 Communications Module Configuration (reference 4.7)

Prior to using the MJ-5 Communications Module in the network, the communications module needs to be configured properly for communications. The < COMMUNICATIONS > menu of the MJ-5 Control Panel provides all the required communications configuration items for the communications module. Table 7-4 lists the communications menu items in the order in which they appear on the MJ-5 Control Panel; default settings are in bold.

1. Program the communications parameters of the MJ-5 Communications Module by pressing the Menu key twice to display the < METER > menu.
2. Then press the left arrow key until the < COMMUNICATIONS > menu appears. Use the up and down arrow keys to access the individual menu items.
3. To change the value of the parameter, press the Change key, and then use the arrow keys to toggle the choices or set the value for the parameter. Press the Save key after changing the value of a menu item to enter the changes, or press the Cancel Reset key to cancel the change.

Each time a configuration menu item is changed, the communications module is reset by the main MJ-5 Control Panel. This reset is part of the process of updating the communications module with the new configuration.

**Table 5-4 Communications Menu Items**

DATA ITEMS	DESCRIPTION	SELECTIONS
DatPortBaud	Local Data Port transmission rate	300, 1200, 2400, 4800, <b>9600</b> , or 19200
Data Parity	Local Data Port Parity Setting	<b>EVEN</b> or NONE
DataPortAddr	Enables/Disables Addressing for Data Port	<b>OFF</b> or ON
Reg ID	Regulator Identification Number (Note: This is NOT the address for Data Port Communications)	NNNNN (Range <b>0</b> -32765)
Protocol	Communications Module Protocol	<b>DNP3.0</b> , 2200, 2200NPA, MJ3A A, MJ3A B1, MJ3A B2, 2179, and Special
CommBaud	Communications Module transmission rate	300,1200,2400,4800, <b>9600</b> or 19,200
CommParity	Communications Module Protocol	<b>NONE</b> , EVEN, ODD
CommAddr	Communications Module Address	NNNN (range: <b>0</b> -32765)
Resync Time	Communications Module resync time (in characters). Used for Communications Module protocols 2200 and 2179 to determine when one message ends and another message begins	NNN (range 0-250, <b>1</b> )
TxEnDelay	Communications Module Transmit Enable Delay (in milliseconds), Specifies the amount of time between the RTS output being activated and the start of transmit (output) data.	NNN (range <b>0</b> -250)
DnpDIConfirm	DNP Data Link Confirm	Y or <b>N</b>
SW repeat	Enable Fiber loop	Y or <b>N</b>
HostAddr	Host Address for Unsolicited Responses	NNN (range <b>0</b> -65535)
CMUnsolicited	Unsolicited Responses	Y or <b>N</b>
AutoInhEnable	Auto Inhibit Enables (Y) Remote Raise/Lower. If disabled, (N) activates automatic operation	Y or <b>N</b>
DNP set	Select a predefined or custom DNP point set	<b>DNPcfg</b> . 2x3, 2x4, etc.
Deadband CL-1	Class 1--Used to set band without configuration tool	<b>00.0</b> or NN.N
Deadband CL-2	Class 2---Used to set band without configuration tool	<b>00.0</b> or NN.N
Deadband CL-3	Class 3---Used to set band without configuration tool	<b>00.0</b> or NN.N
CommType	Describes the type of communication	<b>Network</b> , Serial, Fiber-serial or RS-485
IP config	Enables/Disables IP Configuration Selection	<b>Static</b> or DHCP

IP-192:168:001:200	Displays current IP address	192.168.1.200 or xxx.xxx.xxx.xxx
NM-255:255:255:000	Displays current Network Mask	255.255.255.0 or xxx.xxx.xxx.xxx
GW-000:000:000:000	Displays current Gateway	192.168.1.1 or xxx.xxx.xxx.xxx
TCP port	DNP Communication Port Number	20,000 or NN,NNN (not advisable to change)
DNP Version	Displays the DNP Software version in use	XXXX
SL	IP Address for future network based firmware upgrades ALTERNATE USE: IP address for slave 1 in Master Slave Configuration	XXX.XXX.XXX.XXX
SL2	IP Address for future network based firmware upgrades ALTERNATE USE: IP address for slave 2 in Master Slave Configuration	XXX.XXX.XXXXXX
VCA mode	Enables/Disables Heartbeat feature	ON or OFF
AutoInhbTout	Controls time of Heartbeat	NNN (range 000-255)

### 5.5.1 Communications Menu Item Descriptions

#### Data Stat, DatPortBaud, Data Parity, and DataPortAddr

These menu items apply only to the Data Port located on the front of the MJ-5 Control Panel, and do not require modification.

#### Reg Id (*Regulator Identification*)

This item allows you to uniquely identify each regulator in the system. The Regulator Id is accessible as a data item via the communications module for most of the protocol selections.

#### Protocol

This item defines the protocol selection for the MJ-5 Communications Module. The selections are listed in Table 7-4.

2200NOA is a variation of the 2200 protocol with the address field suppressed. It is provided for testing the MJ-5 Communications Module with the MJXplorer™ software. The SPECIAL item allows a new protocol handler to be included in the Communications Module code without forcing a modification to the Main Processor code (for the protocol selection front panel screen).

#### Comm Baud

This menu item defines the data rate for the MJ-5 Communications Module. The standard asynchronous communications data rates are available for selection. For proper communications, the Comm Baud setting must match the baud setting of the other communicating device(s) in the network.

#### Comm Parity

This configuration item defines the parity selection for the communications module. For proper communications, the Comm Parity setting must match the parity setting of the other communicating device(s) in the system.

This parity selection will override any default or inherent parity defined in the selected protocol. [For example, the 2200 protocol specification document defines the parity as even. The Comm Parity configuration item allows even parity to be selected, but it also permits the system designer/installer to use an alternate parity selection if desired.]

#### Comm Address

This configuration item defines the communications address for the communications module. Each device connected on the communications link must have a unique communications address. The Comm Address setting must correspond with the address programmed into the RTU or other supervisory device so that it can request information from and write data to a particular MJ-5 Control Panel.

### **Resync Time**

This configuration item defines the Communications Module resync time (in characters). This item is used for Communications Module protocols 2200 and 2179 to determine when one message ends and another message begins. If a new character is not received within the period specified by this parameter, the control panel assumes that the next received character is the start of a new message.

### **Tx En Delay**

This configuration item defines the Communications Module Transmit Enable Delay (in milliseconds), specifies the amount of time between the RTS output being activated and the start of transmit (output) data.

### **DNP dl Confirm**

This configuration item defines whether or not to request confirmation from the master station for all responses for the DNP3.0 protocol

### **CM SW RepeatEn**

This configuration item controls whether software repeat is used for the MJ5.

### **Host Addr**

This configuration item defines the communications address for the RTU or other supervisory device to which unsolicited responses are sent.

### **CM Unsolicited**

This configuration item defines whether or not the communications module should send unsolicited responses. Note that if this parameter is “Y”, an “enable unsolicited responses” message must also be sent from the master station to start them.

### **AutoInhEnRemRL**

This configuration item controls whether the auto inhibit must be active before a remote raise or lower request will be followed. Setting “Y” prevents accidental fighting against the automatic tap changes with remote commands.

### **DNPset**

This configuration item selects what DNP points will be used. Choose “DNPcfg” to configure your own points with the DNP Configure program or choose from the preconfigured DNP point sets. See Section 8.

### **Deadband Class 1-3**

These three menu items are used for Deadband Class 1, 2, or 3. If the user wants to set the band without using the configuration tool, they can select the value of Deadband Class 1, 2, or 3. The default value for each Deadband Class is 00.0 and the maximum value is 99.9.

### **Comm Type**

This menu item displays which communication type is currently being used by the MJ-5. The user may select from Network, Fiber-serial, Serial, or RS-485.

### **IP Config**

This menu item allows the user to enable or disable the IP Configuraion Selection. This user may choose between Static, (the default) or DHCP.



**IP**

This menu item displays the current IP Address. The user may change the IP Address by pushing the change/save button and using the up/down Navigations keys to increase or decrease each digit, or use the default address of **192.168.1.200**

**Network Mask**

This menu item displays the current address for the Network Mask. The user may change the address by following the instructions found under IP Address.

**Gateway**

This menu item displays the current address for the Gateway. This user may change the address by following the instructions found under IP Address.

**TCP Port**

This menu item displays the DNP Communications Port number. Although the user may change the Port number from the default of 20,000, it is NOT ADVISABLE.

**DNP Version**

This menu item displays the DNP Software version in use.

**SL**

This menu item displays the IP Address for future network based firmware upgrades. The SL function may also be used to establish the IP address for Slave 1 in the Master Slave Configuration.

**SL2**

This menu item displays the IP Address for future network based firmware upgrades. The SL function may also be used to establish the IP address for Slave 2 in the Master Slave Configuration

**VCA Mode**

This menu item enables the Heartbeat feature in the Control Panel. The Heartbeat feature is activated when the VCA mode is turned ON. On receiving heartbeat two times within 30 seconds Control will activate Auto-inhibit and blocks automatic operation. If the Remote connection is lost, and the Control Panel does not receive another Heartbeat, the Control Panel will disable the Auto-Inhibit and regain control through automatic regulation.

To enable the Heartbeat feature

1. Turn VMA Mode to the ON position by pressing the Change/Save button, and then pressing the Up/Down Navigational keys to toggle between ON/OFF.
2. The user may set the timeout period (0-255) for the Heartbeat feature in the AutoInhbTout or Auto Inhibit Time Out function found also in the Communications menu.

3. The Binary output point number (last point number +1, commonly point 4) will be activated as IVVCACTIVE and the Binary input –(last input +1) will indicate the status of IVVCACTIVE.
4. The user must send the command (binary output 4) as a heartbeat two times within 30 seconds.
5. The IVVC will become ACTIVE.
6. The user should then set to the Remote Auto Inhibit to ON to block automatic operation.
7. Continue sending the Binary Output 4 command as a Heartbeat.
8. If the Control doesn't receive any Heartbeat signals within the range set on the Auto-Inhibit Timeout feature, the IVVC will get deactivated and the Remote Auto-Inhibit will turn off to enable the Automatic Operation to reestablish

## **5.6 Troubleshooting Communications Problems**

This section explains how to troubleshoot the MJ-5 Communications Module using the front panel LED indicators and the MJXplorer software. The MJXplorer software allows you to access the communications module parameters via the MJ-5 Control Panel.


### **5.6.1 Using MJXplorer to Troubleshoot Communications Problems**

The MJXplorer software is a menu-driven application program that allows interfacing to the MJ-5 Communications Module. Up to three MJ-5 units may be connected at a time. When connecting the Fiber Optic interface to MJXplorer, the auto repeat function must match the setting in the Configure→Configure MJXplorer menu. See section 4.3.1 for setting the Fiber Optic interface jumpers.

A Fiber Optic to RS-232 driver/receiver is required in order to perform these tests on the fiber optic interface. The driver/receiver is an optical to electrical signal converter with an ST connector interface and an RS-232 interface. Connect the optical side to the fiber optic interface via ST fiber optic patch cords. Connect the RS-232 interface to the personal computer, Figure 7-9.

Use MJXplorer to help pinpoint communications problems in a system. MJXplorer permits testing of the MJ-5 communications functions independent of other system components.

Once the physical connections are complete, from the MJ-5 front panel select the “2200NOA” protocol for connecting to only one panel or select “2200” protocol and set comm addresses for connections to multiple panels. In addition, match the Comm Parity and Comm Baud with the MJXplorer settings. Use MJXplorer to verify that data can be retrieved from as well as written to the MJ-5 Control Panel.

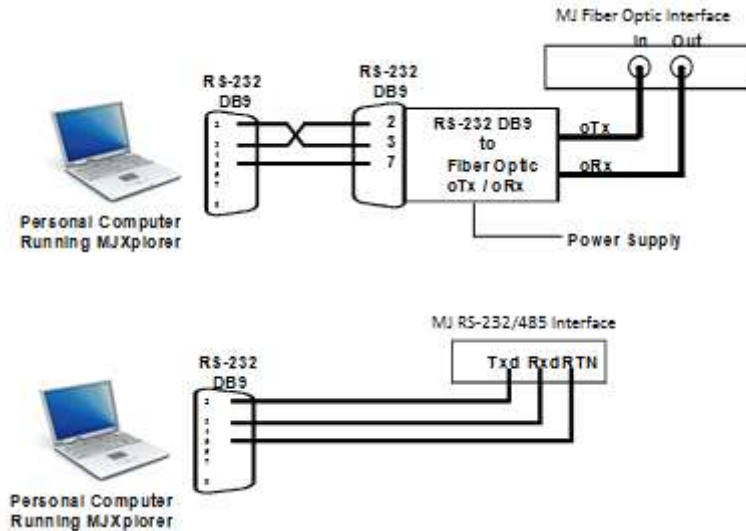

**Figure 5-9: MJXplorer Troubleshooting Connections**

## 6 Setting the DNP points

This section describes how to set the DNP points that will be used on the control panel. You can use the DNP Configure program to customize your DNP point set or you can use one of the predefined point sets listed in section 8.2.

In order to use a customized point set, an MJ-X<sup>L</sup> must have version 3.06 and the MJ-X must have 2.52. In order to use predefined point sets (except Set 7), an MJ-X<sup>L</sup> must have version 3.07 and a MJ-X must have 2.53. Set 7 is only available on the MJ-5 Control.

It is recommended that a Latching Relay command be used for all Binary Outputs (e.g., remote raise/lower, auto inhibit, etc.).

### 6.1 Using the DNP Configure program for a custom DNP point set

The DNP Configure program is used to place a custom set of user-defined DNP points on the control panel. You can obtain this program free-of-charge from your Siemens representative. After installing the program, run it and follow the steps below to set your DNP points.

1. Connect your computer's com port to the panel's Data Port with a "straight-thru" male-female DB9 cable.
2. If you already have a DNP points profile, open it and go to Step 8. To open an existing points profile, in the menu bar: click File → Open and select your file. Otherwise go to Step 3 to create a points profile.
3. Click the Class 0 button. Move between the tabs and checkmark the points you want. Click OK.
4. If Class 1, 2, or 3 polls are desired, these can now be set the same way.
5. Click the Send button. Drag and drop the points up and down in the list boxes to change their point number if desired. The top point in each box is point # 0, the point below that is point # 1, etc. Click the Cancel button after points are ordered as desired.
6. In the menu bar: click File → Save and save your file as XXXX.dnp
7. Click the Setting button.
8. Match the baud rate and parity between the computer and the panel. Choose the COM port your computer is using. Set Addressing to be Disabled (if MJ-5's "DataPortAddr" setting is OFF). Click OK.
9. Click the Send button.

10. Click the Send button on the bottom of the points list screen.
11. If successful, a window will pop up displaying “Send Communication Status: OK...” Click OK.
12. DNP Configure can be closed or you can use the same point set to configure other panels.

## 6.2 Selecting a predefined DNP point set

### 6.2.1 DNP point set for MJ-5

When the MJ-5 Communications Module with firmware version 3.10 (initial release) or higher is interfaced with a MJ-5, you will be able to choose from a number of DNP point sets, including Set 7. Sets 8 through 15 are not defined at this time.

### 6.2.2 DNP Point set for other Control Panels

The operation and functionality of the MJ-5 Communications Module is similar to older versions of the Communications Module though either the Fiber Optic or the RS-232/485 interfaces may be used at a time. If the control panel is an MJ-X<sup>L</sup> with firmware version 3.07 or higher (or an MJ-X with version 2.53 or higher) and the Communications Module has firmware 3.07 or higher, you will be able to use predefined DNP point sets. Go to the <COMMUNICATIONS> menu and scroll to “DNPset.” The complete list of points for each set is listed below. Two of the most popular point sets are 2.x4 set and 2.x3 set. 2.x4 is backwards compatible with versions 2.04, 2.14, 2.44, etc. Likewise, 2.x3 is backwards compatible with 2.03, 2.13, 2.43, etc. For more information about the DNP3.0 Level 2 implementation, please contact your Siemens representative.

### 6.2.3 2.x4

#### *Binary Inputs*

Point #	Description
0	Tap Pos Known
1	Power Flow Direction
2	Auto Inhibit Status
3	Remote Control occurring
4	Neutral (U12) Signal
5	VRC1 contacts
6	VRC2 contacts
7	Remote Switch position
8	Manual Switch position

#### *Binary Outputs*

Point #	Description
0	Tap Raise
1	Tap Lower
2	Auto Inhibit (Latch On/Off)

#### *Analog Inputs*

Point #	Description
0	R/A/M switch position
1	Power Flow Direction Indicator
2	VRC contacts status
3	Tap Position
4	Load Current
5	Load Voltage
6	KW
7	Power Factor
8	KW Fwd Dmd

9	KW Rev Dmd
10	Vld Total Harm Distortion %
11	Ild Total Harm Distortion %
12	Vs Total Harm Distortion %
13	VRC Status
14	VLC Status
15	Band Status Indicators
16	Tap Control Mode
17	Op Count Last Month
18	Op Count Last 24 hrs
19	Op Count Last 30 days
20	Op Count Month-to-Date
21	Load Voltage Inst Fwd Min
22	Load Voltage Inst Fwd Max
23	Load Voltage Inst Rev Min
24	Load Voltage Inst Rev Max
25	Tap Position Min
26	Tap Position Max

#### Analog Outputs

Point #	Description
0	Upper Voltage Limit
1	Lower Voltage Limit
2	Local Voltage Reduction %
3	VRC Stage1
4	VRC Stage2
5	VRC Stage3
6	Auto VRC1 %I
7	Auto VRC2 %I
8	Auto VRC set1
9	Auto VRC set2
10	Rev Bandwidth Setting
11	Rev Reactive Compensation
12	Rev Resistive Compensation
13	Rev Voltage Level
14	Rev Time Delay
15	Fwd Bandwidth Setting
16	Fwd Reactive Compensation
17	Fwd Resistive Compensation
18	Fwd Voltage Level
19	Fwd Time Delay
20	Voltage Limit Control Enable
21	Voltage Reduction Control Mode
22	Log Setup
23	Alert Status part 1
24	Alert Status part 2

### 6.2.4 Small 2.x3

#### Binary Inputs

Point #	Description
0	Tap Pos Known
1	Power Flow Direction
2	Auto Inhibit Status
3	Raise (J) Motor Signal
4	Lower (K) Motor Signal
5	Remote Control occurring
6	U2/P2 Switch Position
7	Neutral (U12) Signal

8	Operations Count (U10) Signal
9	Auto Inhibit Terminal Block Input
10	VRC1 contacts
11	VRC2 contacts
12	Remote Switch position
13	Manual Switch position
14	Auto Inhibit Out Status

*Binary Outputs*

Point #	Description
0	Tap Raise
1	Tap Lower
2	Auto Inhibit (Latch On/Off)

*Analog Inputs*

Point #	Description
0	Op Count Last Year
1	N/A
2	R/A/M switch position
3	Power Flow Direction Indicator
4	VRC contacts status
5	Band, VRC, VLC status
6	Tap Position
7	Load Current
8	Load Voltage
9	Load Voltage (primary)
10	Source Voltage
11	Source Voltage (primary)
12	KVA
13	KVAR
14	KW
15	Power Factor

*Analog Outputs*

Point #	Description
0	Op Count Total

## 6.2.5 Simple

*Binary Inputs*

Point #	Description
0	Auto Inhibit Status
1	Remote Switch position
2	Manual Switch position

*Binary Outputs*

Point #	Description
0	Tap Raise
1	Tap Lower
2	Auto Inhibit (On/Off)

*Analog Inputs*

Point #	Description
0	Tap Position
1	Load Voltage
2	Load Current
3	Source Voltage

*Analog Outputs*

No Analog Outputs in the Simple set currently.

## 6.2.6 Metering

### Binary Inputs

Point #	Description
0	LOW Voltage Limiting, [1=On]
1	HIGH Voltage Limiting, [1=On]
2	Automatic Operation, [1=Inhibited]
3	Power Flow Direction, [0=Fwd, 1=Rev]
4	R/A/M Switch, [0=Off/Manual, 1=Auto/Remote]
5	Voltage Reduction Input 1, [0=Open, 1=Closed]
6	Voltage Reduction Input 2, [0=Open, 1=Closed]
7	Supervisory Switch, [0=Off, 1=On (Remote)]
8	Neutral Position Status, [0=inactive, 1=active]
9	Low Battery Status, [0=inactive, 1=active]
10	Raise Limit Reached, [0=inactive, 1=active]
11	Lower Limit Reached, [0=inactive, 1=active]

### Binary Outputs

Point #	Description
0	Control Raise (1=raise)
1	Control Lower (1=lower)
2	Remote Auto/Manual (1=block)
3	Fwd Voltage Level (+/- .1V) (0=dec, 1=inc)
4	Bandwidth Voltage (+/- .1V) (0=dec, 1=inc)
5	Fwd Time Delay (+/- 5s) (0=dec, 1=inc)
6	Fwd Reactive Comp (+/- 1V) (0=dec, 1=inc)
7	Local Voltage Reduct (1=Active)
8	Remote Volt Reduct (1=Active)
9	Local Volt Reduct % (+/- .5V) (0=dec, 1=inc)
10	Remote Volt Red. % (+/- .5V) (0=dec, 1=inc)
11	Fwd Resistive Comp (+/- 1V) (0=dec, 1=inc)
12	Reset Demands & min/max (AI 20-26)
13	Reset Energies (AI 27-28)

### Analog Inputs

Point #	Description
0	Operations Counter (100's)
1	Operations Counter (10's and 1's)
2	kVA Load
3	kW Load
4	Hardware Status (0=All Good)
5	Primary Load Current in Amps
6	Secondary Load Voltage
7	Primary Load Voltage
8	Primary Source Voltage
9	kVAR Load
10	Power Factor
11	Compensated Voltage (Sec.)
12	% Voltage Reduction in Effect
13	Tap Position
14	Voltage Reduction Status
15	Voltage Limit Status
16	Tap Control Mode Status
17	R/A/M switch position

18	Load Voltage Harmonics %
19	Load Current Harmonics %
20	Fwd Voltage Level Setting
21	Fwd Bandwidth Setting
22	Fwd Time Delay Setting
23	Fwd Reactive Compensation
24	Local Voltage Reduction %
25	Remote Voltage Reduction %
26	Fwd Resistive Compensation
27	Load Current Demand (fwd. max.)
28	KVAR Load Demand (fwd. min.)
29	KVAR Load Demand (fwd. max.)
30	KW Load Demand (fwd. max.)
31	Load Voltage Inst. Fwd. Min
32	Load Voltage Inst. Fwd. Max
33	Load Current Inst. Fwd. Max
34	KWHR Forward (0-999)
35	MWHR Forward (0-999)

*Analog Outputs*

Point #	Description
0	Fwd Voltage Level
1	Fwd Bandwidth
2	Fwd Time Delay
3	Fwd Reactive Compensation
4	Local Voltage Reduction %
5	VRC Stage2
6	Fwd Resistive Compensation

### 6.2.7 Active

*Binary Inputs*

Point #	Description
0	Tap Pos Known
1	Power Flow Direction
2	Auto Inhibit Status
3	Neutral (U12) Signal
4	Remote Switch position
5	Manual Switch position

*Binary Outputs*

Point #	Description
0	Tap Raise
1	Tap Lower
2	Auto Inhibit (Latch On/Off)
3	Active Auto Inhibit

*Analog Inputs*

Point #	Description
0	Tap Position
1	Load Current
2	Load Voltage
3	KVAR
4	KW
5	Power Factor
6	Band Status Indicators
7	Tap Control Mode



8	Op Count Elapsed
9	CM firmware version

*Analog Outputs*

Point #	Description
0	Fwd Bandwidth
1	Fwd Voltage Level
2	Fwd Time Delay
3	Fwd Resistive Compensation
4	Fwd Reactive Compensation
5	Active Bandwidth
6	Active Voltage Level
7	Active Time Delay
8	Active Resistive Compensation
9	Active Reactive Compensation
10	Active Timer (mins)

**6.2.8 Set 7**

*Binary Inputs*

Point #	Description
0	Auto Inhibit Status
1	Remote Switch position
2	Manual Switch position
3	Neutral (U12) Signal
4	Power Flow Direction

*Binary Outputs*

Point #	Description
0	Tap Raise
1	Tap Lower
2	Auto Inhibit (On/Off)

*Analog Inputs*

Point #	Description
0	Tap Position
1	Load Voltage
2	Load Current
3	Source Voltage
4	kW Load
5	kVA Load
6	kVAR Load
7	Op Count Last Month
8	Op Count Month-to-Date
9	Maintain Records of Contacts
10	Tap Changer Type
11	Balance Winding
12	Range of Regulation
13	Lower Led Solid/Blink
14	U2-P2 Terminal Out
15	Fixed RL On time
16	Log Min Max
17	PT Calc Enable

*Analog Outputs*

Point #	Description
---------	-------------

0	Fwd Voltage Level
1	Fwd Bandwidth
2	Fwd Time Delay
3	Clear Contact Statuses and Op Counters
4	Read Overall Status of Contacts

## 6.2.9 2.x3

### Binary Inputs

Point #	Scale Factor	Description
0	SF = 1	Tap Pos Known
1	SF = 1	Power Flow Direction
2	SF = 1	Auto Inhibit Status
3	SF = 1	Raise (J) Motor Signal
4	SF = 1	Lower (K) Motor Signal
5	SF = 1	Remote Control occurring
6	SF = 1	U2/P2 Switch Position
7	SF = 1	Neutral (U12) Signal
8	SF = 1	Operations Count (U10) Signal
9	SF = 1	Auto Inhibit Terminal Block Input
10	SF = 1	VRC1 contacts
11	SF = 1	VRC2 contacts
12	SF = 1	Remote Switch position
13	SF = 1	Manual Switch position
14	SF = 1	Auto Inhibit Out Status

### Binary Outputs

Point #	Scale Factor	Description
0	SF = 1	Tap Raise
1	SF = 1	Tap Lower
2	SF = 1	Auto Inhibit (Latch On/Off)

### Analog Inputs

Point #	Scale Factor	Description
0		Op Count Last Year
1		N/A
2	SF = 1	R/A/M switch position
3		Power Flow Direction Indicator
4	SF = 1	VRC contacts status
5	SF = 1	Band, VRC, VLC status
6	SF = 1	Tap Position
7	SF = 1	Load Current
8	SF= 10	Load Voltage
9	SF= 0.1	Load Voltage (primary)
10	SF= 10	Source Voltage
11	SF= 0.1	Source Voltage (primary)
12	SF = 1	KVA
13	SF = 1	KVAR
14	SF = 1	KW
15	SF= 100	Power Factor
16	SF = 10	P2 Ratio
17	variable	Ld Current Dmd (Fwd Present)
18	SF = 1	kVA Dmd (Fwd Present)
19	SF = 1	kVAR Dmd (Fwd Present)
20	SF = 1	kW Dmd (Fwd Present)
21	SF= 10	Load Volts Dmd (Fwd Present)
22	SF= 10	CompVolts Dmd (Fwd Present)
23	variable	Load I Dmd (Rev Present) (Amps)
24	SF = 1	kVA Load Dmd (Rev Present)
25	SF = 1	kVAR Load Dmd (Rev Present)

26	SF = 1	kW Load Dmd (Rev Present)
27	SF= 10	Load Volts Dmd (Rev Present) (Volts)
28	SF= 10	Comp Volts Dmd (Rev Present)
29	SF= 10	Max % Boost or Min % Buck (%)
30	SF= 10	Max % Buck or Min % Boost (%)
31	SF= 10	Motor Voltage
32	SF= 10	Vsrc Fwd Dmd
33	SF= 10	Vsrc Rev Dmd
34	SF= 10	Vload dc offset
35	SF= 10	Vload fundamental, RMS
36	SF= 10	Vload 2nd harmonic, RMS
37	SF= 10	Vload 3rd harmonic, RMS
38	SF= 10	Vload 4th harmonic, RMS
39	SF= 10	Vload 5th harmonic, RMS
40	SF= 10	Vload 6th harmonic, RMS
41	SF= 10	Vload 7th harmonic, RMS
42	SF= 10	Vload 8th harmonic, RMS
43	SF= 10	Vload 9th harmonic, RMS
44	SF= 10	Vload 10th harmonic, RMS
45	SF= 10	Vload 11th harmonic, RMS
46	SF= 10	Vload 12th harmonic, RMS
47	SF= 10	Vload 13th harmonic, RMS
48	SF= 10	Vload 14th harmonic, RMS
49	SF= 10	Vload 15th harmonic, RMS
50	SF= 10	Vload 16th harmonic, RMS
51	SF= 10	Vload 17th harmonic, RMS
52	SF= 10	Vload 18th harmonic, RMS
53	SF= 10	Vload 19th harmonic, RMS
54	SF= 10	Vload 20th harmonic, RMS
55	SF= 10	Vload 21st harmonic, RMS
56	SF= 10	Vload 22nd harmonic, RMS
57	SF= 10	Vload 23rd harmonic, RMS
58	SF= 10	Vload 24th harmonic, RMS
59	SF= 10	Vload 25th harmonic, RMS
60	SF= 10	Vload 26th harmonic, RMS
61	SF= 10	Vload 27th harmonic, RMS
62	SF= 10	Vload 28th harmonic, RMS
63	SF= 10	Vload 29th harmonic, RMS
64	SF= 10	Vload 30th harmonic, RMS
65	SF= 10	Vload 31st harmonic, RMS
66	SF= 10	Iload dc offset
67	SF= 10	Iload fundamental, RMS
68	SF= 10	Iload 2nd harmonic, RMS
69	SF= 10	Iload 3rd harmonic, RMS
70	SF= 10	Iload 4th harmonic, RMS
71	SF= 10	Iload 5th harmonic, RMS
72	SF= 10	Iload 6th harmonic, RMS
73	SF= 10	Iload 7th harmonic, RMS
74	SF= 10	Iload 8th harmonic, RMS
75	SF= 10	Iload 9th harmonic, RMS
76	SF= 10	Iload 10th harmonic, RMS
77	SF= 10	Iload 11th harmonic, RMS
78	SF= 10	Iload 12th harmonic, RMS
79	SF= 10	Iload 13th harmonic, RMS
80	SF= 10	Iload 14th harmonic, RMS
81	SF= 10	Iload 15th harmonic, RMS
82	SF= 10	Iload 16th harmonic, RMS
83	SF= 10	Iload 17th harmonic, RMS
84	SF= 10	Iload 18th harmonic, RMS

85	SF= 10	Iload 19th harmonic, RMS
86	SF= 10	Iload 20th harmonic, RMS
87	SF= 10	Iload 21st harmonic, RMS
88	SF= 10	Iload 22nd harmonic, RMS
89	SF= 10	Iload 23rd harmonic, RMS
90	SF= 10	Iload 24th harmonic, RMS
91	SF= 10	Iload 25th harmonic, RMS
92	SF= 10	Iload 26th harmonic, RMS
93	SF= 10	Iload 27th harmonic, RMS
94	SF= 10	Iload 28th harmonic, RMS
95	SF= 10	Iload 29th harmonic, RMS
96	SF= 10	Iload 30th harmonic, RMS
97	SF= 10	Iload 31st harmonic, RMS
98	SF= 10	Vsource dc offset
99	SF= 10	Vsource fundamental, RMS
100	SF= 10	Vsource 2nd harmonic, RMS
101	SF= 10	Vsource 3rd harmonic, RMS
102	SF= 10	Vsource 4th harmonic, RMS
103	SF= 10	Vsource 5th harmonic, RMS
104	SF= 10	Vsource 6th harmonic, RMS
105	SF= 10	Vsource 7th harmonic, RMS
106	SF= 10	Vsource 8th harmonic, RMS
107	SF= 10	Vsource 9th harmonic, RMS
108	SF= 10	Vsource 10th harmonic, RMS
109	SF= 10	Vsource 11th harmonic, RMS
110	SF= 10	Vsource 12th harmonic, RMS
111	SF= 10	Vsource 13th harmonic, RMS
112	SF= 10	Vsource 14th harmonic, RMS
113	SF= 10	Vsource 15th harmonic, RMS
114	SF= 10	Vsource 16th harmonic, RMS
115	SF= 10	Vsource 17th harmonic, RMS
116	SF= 10	Vsource 18th harmonic, RMS
117	SF= 10	Vsource 19th harmonic, RMS
118	SF= 10	Vsource 20th harmonic, RMS
119	SF= 10	Vsource 21st harmonic, RMS
120	SF= 10	Vsource 22nd harmonic, RMS
121	SF= 10	Vsource 23rd harmonic, RMS
122	SF= 10	Vsource 24th harmonic, RMS
123	SF= 10	Vsource 25th harmonic, RMS
124	SF= 10	Vsource 26th harmonic, RMS
125	SF= 10	Vsource 27th harmonic, RMS
126	SF= 10	Vsource 28th harmonic, RMS
127	SF= 10	Vsource 29th harmonic, RMS
128	SF= 10	Vsource 30th harmonic, RMS
129	SF= 10	Vsource 31st harmonic, RMS
130	SF = 1	MJ-X Main Proc. SW Version
131	SF = 1	Number of Resets
132	SF=10	Compensated Voltage (Secondary)
133	SF=10	Line Frequency
134	SF=10	Percent Regulation
135	SF=10	% Voltage Reduction in Effect
136	SF = 1	Number of Interval Logs Stored
137	SF=1000	Vld Total Harm. Distortion (%)
138	SF = 10	Vload Harmonics RMS value
139	SF=1000	Iload Total Harm. Distortion (%)
140	SF = 10	Iload Harmonics RMS value
141	SF=1000	Vsrc Total Harm. Distortion (%)
142	SF = 10	Vsource Harmonics RMS value
143	SF = 1	VRC Status

144	SF = 1	VLC Status
145	SF = 1	Auto Tap Command Status
146	SF = 1	Band Status
147	SF = 1	Tap Control Mode Status
148	SF = 1	R/A/M switch position
149	SF = 1	Alert Status
150	SF = 1	Time period for Interval Log (minutes)
151	SF = 1	Number of Event Logs Stored
152	SF = 1	MJX Reset Status Register
153		Diagnostics Results Register 1
154		Diagnostics Results Register 2
155	SF = 1	Previous Month Ops Count
156	SF = 1	MP Board Hardware version
157	SF = 1	Power Board HW version
158	SF = 1	MP HC16 Mask version
159	SF = 1	Elapsed Operations Count
160	SF = 1	Year-To-Date Ops Count
161	SF = 1	KWHR Forward
162	SF = 1	KVARHR fwd lead
163	SF = 1	KVARHR fwd lag
164	SF = 1	KWHR Reverse
165	SF = 1	KVARHR rev lead
166	SF = 1	KVARHR rev lag
167	SF = 1	Operations Count for last 24 hours
168	SF = 1	Operations Count for last 30 days
169	SF = 1	Month-To-Date Operations Count
170	SF = 100	PF at Min. kVA Dmd (Fwd)
171	SF = 100	PF at Max. kVA Dmd (Fwd)
172	SF = 100	PF at Min. kVA Dmd (Rev)
173	SF = 100	PF at Max. kVA Dmd (Rev)
174	variable	Load Current Dmd (Fwd Min) (Amps)
175	variable	Load Current Dmd (Fwd Max) (Amps)
176	SF = 1	kVA Load Dmd (Fwd Min)
177	SF = 1	kVA Load Dmd (Fwd Max)
178	SF = 1	kVAR Load Dmd (Fwd Min)
179	SF = 1	kVAR Load Dmd (Fwd Max)
180	SF = 1	kW Load Dmd (Fwd Min)
181	SF = 1	kW Load Dmd (Fwd Max)
182	SF = 10	Load Voltage Dmd (Fwd Min)
183	SF = 10	Load Voltage Dmd (Fwd Max)
184	SF = 10	Comp Voltage Dmd (Fwd Min) (Volts)
185	SF = 10	Comp Voltage Dmd (Fwd Max) (Volts)
186	variable	Load Current Dmd (Rev Min) (Amps)
187	variable	Load Current Dmd (Rev Max) (Amps)
188	SF = 1	kVA Load Dmd (Rev Min)
189	SF = 1	kVA Load Dmd (Rev Max)
190	SF = 1	kVAR Load Dmd (Rev Min)
191	SF = 1	kVAR Load Dmd (Rev Max)
192	SF = 1	kW Load Dmd (Rev Min)
193	SF = 1	kW Load Dmd (Rev Max)
194	SF = 10	Load Voltage Dmd (Rev Min) (Volts)
195	SF = 10	Load Voltage Dmd (Rev Max) (Volts)
196	SF = 10	Comp. Voltage Dmd (Rev Min) (Volts)
197	SF = 10	Comp. Voltage Dmd (Rev Max) (Volts)
198	SF = 10	Vsrc Dmd (Fwd Min)
199	SF = 10	Vsrc Dmd (Fwd Max)
200	SF = 10	Vsrc Dmd (Rev Min)
201	SF = 10	Vsrc Dmd (Rev Max)
202	SF = 10	Load Voltage Inst. Fwd Min

203	SF = 10	Load Voltage Inst. Fwd Max
204	SF = 10	Load Voltage Inst. Rev Min
205	SF = 10	Load Voltage Inst. Rev Max
206	SF = 10	Source Voltage Inst. Fwd
207	SF = 10	Source Voltage Inst. Fwd Max
208	SF = 10	Source Voltage Inst. Rev Min
209	SF = 10	Source Voltage Inst. Rev Max
210	SF = 10	Comp Volts Inst. Fwd Min
211	SF = 10	Comp Volts Inst. Fwd Max
212	SF = 10	Comp Volts Inst. Rev Min
213	SF = 10	Comp Volts Inst. Rev Max
214	variable	Load Current Inst. Fwd Min (Amps)
215	variable	Load Current Inst. Fwd Max (Amps)
216	variable	Load Current Inst. Rev Min (Amps)
217	variable	Load Current Inst. Rev Max (Amps)
218	SF = 100	PF Inst. Fwd Min
219	SF = 100	PF Inst. Fwd Max
220	SF = 1	KVA Inst. Fwd Min
221	SF = 1	KVA Inst. Fwd Max
222	SF = 1	KVA Inst. Rev Min
223	SF = 1	KVA Inst. Rev Max
224	SF = 1	KW Inst. Fwd Min
225	SF = 1	KW Inst. Fwd Max
226	SF = 1	KW Inst. Rev Min
227	SF = 1	KW Inst. Rev Max
228	SF = 1	KVAR Inst. Fwd Min
229	SF = 1	KVAR Inst. Fwd Max
230	SF = 1	KVAR Inst. Rev Min
231	SF = 1	KVAR Inst. Rev Max
232	SF = 10	Frequency Inst. Fwd Min (Hz)
233	SF = 10	Frequency Inst. Fwd Max (Hz)
234	SF = 1	Tap position Inst. Fwd Min
235	SF = 1	Tap position Inst. Fwd Max
236	SF = 1	CM self test result
237	SF = 1	Vref a/d value
238	SF = 1	Raise Limit Reached status
239	SF = 1	Lower Limit Reached status
240	SF = 1	CM Response (to Init) Status
241	SF = 1	CM Software Revision
242	SF = 1	CM Hardware Revision
243	SF = 1	CM microprocessor Mask rev.
244	SF = 1	CM I/O Board Type
245	SF = 1	CM Options (to be defined)
246	SF = 1	CM I/O Board Revision
247	SF = 1	CM QSPI MP to CM Errors
248	SF = 1	CM QSPI no. of Failed Writes
249	SF = 1	CM QSPI no. of Xfer Cycles
250	SF = 1	CM DNP no. of requests for not supported items
251	SF = 1	CM RAM Error High Address
252	SF = 1	CM RAM Error Low Address

*Analog Outputs*

Point #	Scale Factor	Description
0	SF = 1	Total Operations Count
1	SF = 1	Level 1 PW characters
2	SF = 1	Cfg. PW characters
3	SF = 1	Reg. PW characters
4	SF = 1	Meter PW characters
5	SF = 1	Dmd PW characters

6	SF = 1	Alert PW characters
7	SF = 1	Ops PW characters
8	SF = 1	LogSet PW characters
9	SF = 1	Event/Interval PW characters
10	SF = 1	Harm PW characters
11	SF = 1	Comm PW characters
12	SF = 1	Diag. PW characters
13	SF = 1	Syskey PW characters
14	SF = 1	Raise/Lower Operation
15	variable	CT Primary Ratio (Amps)
16	SF = 1	System Line Voltage (Volts)
17	SF = 10	High Voltage Limit (Volts)
18	SF = 10	Low Voltage Limit (Volts)
19	SF = 10	Local Voltage Reduction (%)
20	SF = 10	VRC Remote Setting #1 (%)
21	SF = 10	VRC Remote Setting #2 (%)
22	SF = 10	VRC Remote Setting #3 (%)
23	SF = 1	Auto VRC #1 %Current (%)
24	SF = 1	Auto VRC #2 %Current (%)
25	SF = 10	Auto VRC #1 % Setting (%)
26	SF = 10	Auto VRC #2 % Setting (%)
27	SF = 1	P2 primary (from P2 PT ratio) (Volts)
28	SF = 1	P2 secondary (Volts)
29	SF = 1000	CT secondary (Amps)
30	SF = 1	Current Shift (in °, relative to voltage)
31	SF = 1	U2 primary (Volts)
32	SF = 1	U2 secondary (from U2 PT ratio) (Volts) (Range: 100-150)
33	SF = 1	PT Threshold (Volts)
34	SF = 1	Date Format
35	SF = 1	Demand Subperiods
36	SF = 10	MJ3A remote mode %VRC
37	SF = 1	Min/Max Time-out(sec)
38	SF = 1	Screen Timeout(minutes)
39	SF = 1	Harm. Show as: RMS/%T/fund.
40		N/A
41		N/A
42	SF = 10	Dmd Time Interval (minutes)
43	SF = 10	Bandwidth (Reverse) (Volts)
44	SF = 10	Line Comp. React. (Rev) (Volts)
45	SF = 10	Line Comp. Resist. (Rev) (Volts)
46	SF = 1	Reverse Sensing Method
47	SF = 10	Set Voltage (Reverse) (Volts)
48		Time Delay (Reverse) (seconds)
49	SF = 1	Reverse Threshold Value (%)
50	SF = 10	Bandwidth (Forward) (Volts)
51	SF = 10	Line Comp. React. (Fwd) (Volts)
52	SF = 10	Line Comp. Resist. (Fwd) (Volts)
53	SF = 1	Control Operating Modes
54	SF = 10	Set Voltage (Forward) (Volts)
55	SF = 1	Time Delay (Forward)(seconds)
56	SF = 1	Control Communications Address
57	SF = 1	Comm Port Baud Rate
58	SF = 1	Comm Port Handshake Mode
59	SF = 1	Communications Port Re-Synch Time Characters (no. characters)
60	SF = 1	Communications Port-Transmit Enable Delay (msec)
61	SF = 1	Regulator Type
62	SF = 1	Utility Winding Polarity
63	SF = 1	Meter Display Volts
64	SF = 1	Demand Type

65	SF = 1	VRC Remote
66	SF = 1	Basis Voltage
67	SF = 1	Harm: Odd Only/Odd & Even
68	SF = 1	Regulator Configuration
69	SF = 1	Voltage Limiting Mode
70	SF = 1	Voltage Reduction Mode
71	SF = 1	Event/Interval Log Setup Status
72	SF = 1	Password Enables, Bit mapped
73	SF = 1	Alert Status word 1 (encoded)
74	SF = 1	Alert Status word 2 (encoded)
75	SF = 1	Memo1 - chars 1-2
76	SF = 1	Memo1 - chars 3-4
77	SF = 1	Memo1 - chars 5-6
78	SF = 1	Memo1 - chars 7-8
79	SF = 1	Memo1 - chars 9-10
80	SF = 1	Memo2 - chars 1-2
81	SF = 1	Memo2 - chars 3-4
82	SF = 1	Memo2 - chars 5-6
83	SF = 1	Memo2 - chars 7-8
84	SF = 1	Memo2 - chars 9-10
85	SF = 1	"NN" Raise/Lower Value
86	SF = 1	Regulator Id (Range: 0 - 32766)
87	SF = 1	Tap Changer Mechanism
88	SF = 1	Max. Load Current % (Range: 0-350)
89	SF = 1	Full Load Current (50-7200) (A)
90	SF = 1	CM Pre-tx delay for DNP
91	SF = 1	CM Post-tx delay for DNP
92	SF = 1	CM transmit delay for DNP
93	SF = 1	CM number of retries (DNP)
94	SF = 1	CM protocol
95	SF = 1	CM parity
96	SF = 1	CM self test request
97	SF = 1	Raise Limit % (0=10%, 1=8.75%, 2=7.5%, 3=6.25%, 4=5%)
98	SF = 1	Lower Limit % (0=10%, 1=8.75%, 2=7.5%, 3=6.25%, 4=5%)
99	SF = 1	Data Port Baud



## 7 Specifications

This section contains the MJ-5 Communications Module specifications. Contained in this section are the parameters for both the fiber optic and RS-232/485 interfaces. The data provided in the fiber optic section was obtained using 62.5/125  $\mu\text{m}$  cable. Typical, maximum, and minimum lengths are given for normal and long range cable lengths. Except for the maximum and minimum parameters, the numbers provided are for room temperature. The maximum and minimum lengths are for temperature extremes.

### 7.1 Physical Dimensions

Height	8.4 inches ( 21.34 cm )
Width	2.89 inches ( 7.34 cm )
Depth	2.84 inches ( 7.21 cm )

### 7.2 Fiber Optic Link Interface Specifications

Transmitter	Jumper J12 In	Jumper J12 Out
Maximum Output Power	-13.0 dBm (Long Range)	-16.0 dBm (Normal Range)
Typical Output Power	-16.0 dBm (Long Range)	-19.0 dBm (Normal Range)
Minimum Output Power	-20.0 dBm (Long Range)	-23.0 dBm (Normal Range)
Numerical Aperture	0.49	
Optical Port Diameter	290 $\mu\text{m}$	
<b>Receiver</b>		
Peak Input Power Logic Level Low	-24.0 dBm Min to -9.2 dBm Max	
Peak Input Power Logic Level High	-40.0 dBm Max	
<b>System</b>		
Wavelength	820 nanometers (nominal)	
Connector Type	ST	
Fiber Type	Glass 62.5/125 $\mu\text{m}$ , 5dB/m	
Data Rate	5 Mbaud (design)	19.2 Kbaud (tested)
Maximum Optical Power Budget	11 dBm (Long Range)	8 dBm (Normal Range)
Typical Optical Power Budget	8 dBm (Long Range)	5 dBm (Normal Range)
Minimum Optical Power Budget	4 dBm (Long Range)	1 dBm (Normal Range)
<b>Link Lengths</b>		
Maximum Link Length	2.2 km (Long Range)	1.6 km (Normal Range)
Typical Link Length	1.6 km (Long Range)	0.6 km (Normal Range)
Minimum Link Length	0.8 km (Long Range)	0.2 km (Normal Range)
Operating Temperature Range	-40°C to +85°C (excluding cable)	

### 7.3 RS-232/RS-485 Interface Specifications

Parameter	RS-232	RS-485
Data Rate (maximum)	19200 baud	19200 baud
Distance (maximum)	50 ft	4000 ft
Nodes (maximum)	72	32
Isolation	500 VAC, 1 minute	<b>500 C, 1 minute</b>

## 8. Master Slave Configuration

In master slave configuration 3 control panel operate in synchronous mode. Master controls the operation of both the slaves. Whenever the master makes a Tap change, it tells the slaves to make matching tap change.

On wakeup master send the tap positions to slaves and slaves will operate to go to same tap position.

Setting for Master slave operation-

**Advance configure ->Slave-master**

**OFF – Master slave is off**

MA – Configure control as Master

SL – Configure Control as Slave 1

S2 – Configure control as Slave 2

**Advance configure ->MaCntrl**

**Master - Control will operate with respect to voltage on master regulator.**

Lowest – Control will operate with respect to lowest voltage of 3 regulators.

Highest - Control will operate with respect to highest voltage of 3 regulators.


Average - Control will operate with respect to Average voltage of 3 regulators.

When Slave-master configuration is set to Master/SL/S2 remote Auto inhibit functionality turns ON.

Slave will stop doing any automatic operation and master will work according to MaCntrl setting.

Master will regulate other 2 slave device also.

Connection Diagram – Fiber optic comm module is needed for master slave and connection need to be done as ring (shown in below diagram).

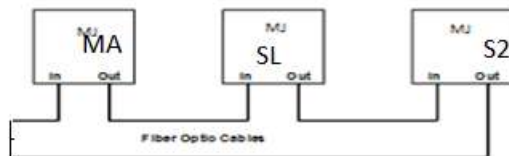

IEC 61850 Data points –

MJ5 Supports following data sets for IEC -61850

<b>ATCC1 – Automatic tap changer controller</b>			
<b>Data object name</b>	<b>Common data class</b>	<b>Explanation</b>	<b>T M/O/E</b>
<b>Data objects</b>			
<b>Status information</b>			
Beh	ENS	Behavior	M
LockKey	SPS	Local or remote key	0
Loc	SPS	Local control behavior	0
TapOpR	SPS	Change tap position raise	T 0
TapOpL	SPS	Change tap position lower	T 0
TapOpStop	SPS	Change tap position stop	T 0
TapOpErr	SPS	Tap change error or tap indication error (e.g. wrong BCD code)	0
LTCBIkVLo	SPS	LTC inhibit due to under voltage	0
LTCBIkVHi	SPS	LTC inhibit due to over voltage	0
LTCBIkAHi	SPS	LTC inhibit due to over current	0
LTCBIkALo	SPS	LTC inhibit due to low current	
End PosR	SPS	End position raise or highest allowed tap position reached	0
End PosL	SPS	End position lower or lowest allowed tap position reached	0
PFRev	SPS	Reverse power flow mode (control power direction status)	E
CCInput2	SPS	Oil level status indicator	
CCInput4	SPS	Oil Temp status indicator	
TapPos	ING	Tap Position indicator ( -16 to +16)	
Auto	SPS	Tap Control Switch indicator ( True - Auto)	

<b>Measured and metered values</b>			
CtIV	MV	Control voltage	M
LodA	MV	Load current (total transformer secondary current)	0
CircA	MV	Circulating current	0
Power factor	MV	power factor	0
HiCtIV	MV	Highest control voltage	0
LoCtIV	MV	Lowest control voltage	0
HiDmdA	MV	High current demand (load current demand)	0
<b>Controls</b>			
TapChg	BSC	Change tap position (stop, higher, lower)	Cl
LTCBIk	SPC	Block (Inhibit) automatic control	0
<b>Settings</b>			
BndCtr	ASG	Band center voltage (FPF presumed)	0

BndWid	ASG	Band width voltage (as voltage or percent of nominal voltage, FPF presumed)	0
CtIDITmms	ING	Control intentional time delay (FPF presumed)	0
LDCR	ASG	Line drop voltage due to line resistance component	0
LDCX	ASG	Line drop voltage due to line reactance component	0
BIkLV	ASG	Control voltage below which auto lower commands blocked	0
BIkRV	ASG	Control voltage above which auto raise commands blocked	0
LimLodA	ASG	Limit load current (LTC block load current)	0
VLCEnable	SPG	enable or disable VLC	0
VRedVal	ASG	Reduction of band center (percent) when voltage reduction step is active	0
TapChgTyp	ENG	Tap changer type.	E
RegTyp	ENG	Regulator type	E
Syst	ENG	System wiring configuration	E
DeltaPwr	SPG	Delta power configuration	E
UtilPol	ENG	Utility winding polarity	E
VPrimMax	ENG	Maximum primary voltage	E
U2PTPri	ING	Utility winding primary side	E
U2PTSec	ING	Utility winding secondary side	E
P2PTPri	ING	Potential transformer turns primary side	E
P2PTSec	ING	Potential transformer turns secondary side	E
CTPri	ING	Current transformer turns primary side	E
CTSec	ING	Current transformer turns secondary side	E
IFullLoad	ING	Regulating device full load rating	E
NeutOvRun	ASG	Neutral over run	E
PwrFlow	ENG	Power flow modes	E
BasVlt	ENG	Controller nominal voltage level	E
MeterVolt	SPG	Meter Display Volts	
Ithres	ING	Tap change minimum current (0 to 10% - default 0%)	E
Ishift	ING	Current shift for reverse power flow (0° to 349° - default 0°)	E
ILodMax	ING	Max. load current (for overcurrent) (0% to 350% - default 350%)	E
PTthres	ING	Tap change low voltage limit (0 to 134 - default 90)	E
DmdType	ENG	Method for determining command	E
DmdTime	ING	Demand period length (minutes) (1 to 999 - default 30)	E
DmdSubPer	ING	Number of demand subperiods (for sliding window mode only)	E
AutoVariAmp	SPG	Automatic Variamp protection	E
SoftVariAmp	SPG	Software Variamp setting	E
Rlimit	ENG	Raise limit (Alter & Soft Variamp)	E
Llimit	ENG	Lower limit (Alter & Soft Variamp)	E
SlaveMaster	ENG	Put two tap changers in locked step	E
TapAlertEna	SPG	Enable or disable tap alert	E
TapResync	SPG	Synchronizes tap position at neutral	E
RLOnTime	ASG	maximum time to keep the tap changer motor running before pausing for RLOffTime (in seconds)	E

RLOffTime	ASG	pause between tap changes for this amount of time (in seconds)	E
RLOnTimeFix	SPG	when in auto mode motor stays on for exactly RLOnTime seconds	E
TapChgTms	ASG	timeout for tap changer motor running when no operation count occurs.	E
TapIn	ENG	defines the operations count signal input line (1 = U10, 2 = HS)	E
TapInType	ENG	defines the operations counter type (1 = toggle, 2 = pulse)	E
TapInPlsTm	ASG	defines the minimum amount of time that an operations count signal must be present in order for the operations counter to increment (applies to pulse type operations counters only)	E
NeutIn	ENG	defines the neutral signal input line (1 = U12, 2 = U112, 3 = NONE)	E
NeutCnt	ING	number of neutral positions	E
BndCtrRev	ASG	Voltage setpoint level for reverse power flow	E
BndWidRev	ASG	Bandwidth voltage reverse power flow	E
CtlDITmmsRev	ING	Control intentional time delay (in s) for reverse power flow	E
LDCRRev	ASG	Line drop voltage due to line resistance component (reverse flow)	E
LDCXRev	ASG	Line drop voltage due to line reactive component (reverse flow)	E
VredMod	ENG	Voltage reduction control mode	E
AltDI	ING	Alternate time delay for voltage reductions (in seconds)	E
VRC1In	ENG	VRC1 contact configuration	E
VRC2In	ENG	VRC2 contact configuration	E
VRCEmuMod	ENG	MJ-X or MJ-3A emulation mode	E
VRCStg1	ASG	Voltage reduction first stage (in %)	E
VRCStg2	ASG	Voltage reduction second stage (in %)	E
VRCStg3	ASG	Voltage reduction third stage (in %)	E
AutoVRC1	ASG	VRC setting #1 for Auto VRC (in %)	E
AutoVRC2	ASG	VRC setting #2 for Auto VRC (in %)	E
AutoVRCamp1	ASG	Load current #1 for Auto VRC (in %)	E
AutoVRCamp2	ASG	Load current #2 for Auto VRC (in %)	E
Opcount	UING	Operation counter	

Condition C1: depending on the tap-change method, at least one of the two controls, TapChg or TapPos shall be used for manual operation. BndCtrChg may be optionally used to change the value of BndCtr by commands.

**SIEMENS**

Siemens Industry, Inc.  
444Hwy 49 South  
Richland, MS. 39218

21-115527-024 rev02 Manual 09/16  
©2016 Siemens Industry, Inc.