

Reminder Rosie™/MC

INTRODUCTION

Thank you for purchasing the Reminder Rosie™ Voice Controlled Clock by Life Assistant Technologies. Rosie uses the latest speech recognition technology. Rosie understands any English voice right out of the box.

GETTING STARTED

Plug Rosie into an AC power source outlet and Rosie will display 12:00 am. The alarm and trigger indicator lights are on. See Rosie diagram #1 and #3.

HELPFULL HINTS

1. Speak facing the clock from arms length.
2. Speak normally and clearly to Rosie.
3. Try to avoid speaking with background noise i.e. TV, radio or other people talking.
4. If Rosie responds incorrectly to your request such as the wrong time, please repeat STEP 1.
5. Do not speak while Rosie is talking.

Set a Reminder

1. Say "Reminder Assistant" to wake up Rosie and Rosie responds "Can I help you".
2. Say "Record reminder" and Rosie will respond "Please record a reminder".
3. Record your personal reminder. ie: "take my meds" maximum 6 seconds long
4. Rosie will ask you to "Keep reminder or record again".
5. Rosie will then ask "Please tell me the time the reminder should play including AM or PM"
6. Rosie will ask you "Is this reminder for today only?"- if you say "Yes" Rosie will confirm this reminder and say "Goodbye".
7. If the reminder is for a different day, Rosie will ask "Tell me the day of the week or say everyday".

Set the Date – This is a one time manual set.

1. YEAR - Press the MODE button five times until the year digit flashes and press UP or DOWN buttons to set the year (2013 set as '13', 2014 as '14' etc.).
2. MONTH - Press the MODE button again and the month digit will flash (left side of display). Press up or down to set the month (1 through 12).
3. DATE - Press the MODE button once more and the date digit will flash. Press UP or DOWN to set the date.
4. Press the Mode button twice to go back to the normal time display.

Set the Time

1. Say "Reminder Assistant" to wake up Rosie and Rosie responds "Can I help you".
2. Say "Set Time" and Rosie will respond "Please tell me the time including AM or PM".
3. Say the current time speaking normally and clearly facing Rosie .
4. Rosie will confirm the time.

PHRASES

Here are the 12 simple phrases you can say to italk. (see back of Rosie)

Reminder Commands

Record Reminder
Play Reminder
Todays Reminder
Reminder Off

Time & Alarm Commands

Set Time
Set Alarm
Choose Alarm Sounds
Alarm Off or Snooze

Time & Alarm Questions

What time is it?
What day is it?
What is the alarm time?
Help

YOU SAY	MANUAL BUTTONS
STEP 1: Wake up Reminder Rosie™	
"Reminder Assistant" (Trigger indicator must be on)	Press clock down (Press twice if Rosie is talking)
STEP 2: Say a phrase	
REMINDER PHRASES	
"Record Reminder" Record up to 10 reminders each six seconds long. Follow the prompts to set the reminder alarm time followed by the reminder day (today only, the day of week or everyday).	- - - - -
"Play Reminders" <i>Review and/or erase reminders.</i> To erase a reminder say "erase" after you hear it. Reminders will play from oldest to newest. The reminder time, day and then reminder is heard. Say 'cancel' between reminders to end playback. To switch to manual mode, press clock down anytime during playback.	Press clock down anytime during reminder playback to switch to manual mode. Manual mode allows you to review and/or erase reminders faster. You can press buttons below anytime during playback. UP - Play reminders oldest to newest DOWN - Play reminders newest to oldest MODE - Erase currently selected reminder TRIGGER - Erase all reminders
"Todays Reminders" <i>Review todays reminders only.</i> To stop playback say "Reminder Off" between reminders.	- - - - -
"Reminder Off" Say between reminder playback to turn the reminder off (until the next reminder day).	- - - - -
TIME AND ALARM PHRASES	
"Set Time"	Mode; Up, Down**
"Set Alarm"	Mode; Up, Down**
"Choose Alarm Sound"	Mode; Up, Down**
"Snooze" Say between alarm sounds for 9 more minutes of sleep and the alarm indicator will flash. (Maximum 3 snoozes and then the alarm will automatically turn off for the day)	Press clock down when the alarm sounds for 9 more minutes of sleep and the alarm indicator will flash. Press down again during snooze to turn off the alarm for the day. (The alarm indicator will stop flashing)
"Alarm Off" Say between alarm sounds to turn the alarm off for today only. (Alarm indicator light remains on)	Switch - On/Off Turn off the alarm indefinitely. (Alarm indicator light on/off)

YOU SAY	MANUAL BUTTONS
TIME AND ALARM QUESTIONS	
"What Time is it?"	- - - - -
"What Day is it?"	- - - - -
"What is the Alarm Time?"	Press clock down anytime
"Help?" (Hear all phrases)	- - - - -
STEP 3: Rosie verbally confirms your request	
PUT THE ROSIE TO SLEEP	
"Cancel" Say when Rosie is awake but not talking, and Rosie will go to sleep.	Press clock down Press clock down anytime when Rosie is awake to put it back to sleep
MANUAL SETTINGS ONLY	
Set Date One time only with 3AAA batteries	Mode; Up, Down**
Trigger Mode On or Off Voice recognition can be turned on or off. (Indicator light on/off)	Trigger Button - On/Off
Alarm Volume	Switch - Hi/Low
LED Display Brightness	Switch - Hi/Low

**SET TIME, ALARM TIME, DATE & ALARM SOUNDS MANUALLY



Pressing the **MODE** button repeatedly will cause digits to flash in the following sequence: Clock hour; clock minute; alarm hour; alarm minute; year; month; day; alarm sound. While the digit is flashing press the **UP** or **DOWN** button for the desired setting. The date can only be set manually. **PM** indicator light only (AM if indicator off).

*** Battery back-up holds time, date and reminders if power is disconnected

MODE BUTTON FUNCTION

Pressing the mode button at the back of your Rosie Reminder Assistant repeatedly will cause digits to flash in the following sequence. Please refer below to mode setup and its assigned functions.

PRESSING MODE BUTTON	FUNCTION
Press Mode 1 Time + up, down	Time (Hour)
Press Mode 2 Times + up, down	Time (Minutes)
Press Mode 3 Times + up, down	Alarm Time (Hours)
Press Mode 4 Times + up, down	Alarm Time (Minutes)
Press Mode 5 Times + up, down	Date (Year)
Press Mode 6 Times + up, down	Date (Month)
Press Mode 7 Times + up, down	Date (Day)
Press Mode 8 Times + up, down	Alarm Sound

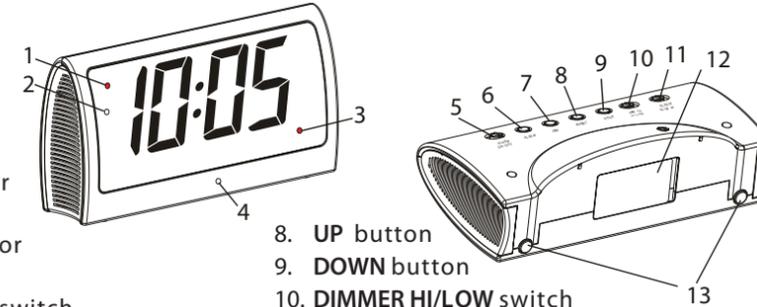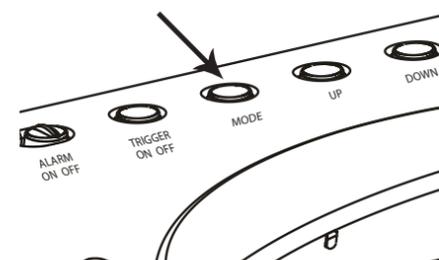

1. ALARM indicator
2. PM indicator
3. TRIGGER indicator
4. Microphone
5. ALARM ON/OFF switch
6. TRIGGER ON/OFF/ERASE ALL
7. MODE/ERASE button
8. UP button
9. DOWN button
10. DIMMER HI/LOW switch
11. VOLUME HI/LOW switch
12. Battery compartment (3 AAA)
13. TRIGGER/SNOOZE/ALARM TIME button

BATTERY BACK-UP INSTALLATION.

Reminder Rosie™ has a battery back-up system. Just insert 3 AAA batteries according to the polarity noted inside the compartment on the bottom of the clock. Should you have a power outage, the time will not be displayed until the electricity is back on. You will not lose the time, alarm and the date previously set. The alarm will still function without the display showing.

RESET AND MAINTENANCE

If Rosie malfunctions reset by unplugging and removing one battery. Replace the battery and plug iTalk back in to reset the time and date. A soft cloth or a paper towel may be used to clean your clock.

SAFETY INSTRUCTIONS

The apparatus shall not be expose to dripping or splashing or near a bathtub. The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliance (including amplifiers) that produce heat. The power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, or chewed by pets. To avoid the risk of electric shock, do not remove the cover of the apparatus. There are no user serviceable parts inside. Do not operate this product if the main lead is damaged. Please read the instruction manual before use and retain for future reference. During electrostatic discharge, the product may auto-reset then adjust the mode to return normal operation.

WARRANTY AND COMMENTS:

The WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT OF DEFECTIVE PARTS ONLY. In no event will Life Assistant Technologies, Inc., its representatives, affiliates, associates and the like be liable for any damages, including without limitation direct or indirect, special, incidental, punitive or consequential damages, losses or expenses arising in connection with any failure of performance of Reminder Rosie.

FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications to the electronics in the device by an unauthorized dealer or technician will void the warranty

TECHNICAL SUPPORT

See Q&A button on the web or call 1 (855) 371-3320

Canadian Address: 129 Rowntree Dairy Road #4, Woodbridge, ON L4L 6C9

US Address: 4924 Balboa Blvd., PMB 420 Encino CA 91316

www.reminder-rosie.com

