

### SECURITY DOOR CONTROLS


801 Avenida Acaso, Camarillo, Ca. 93012 (805) 494-0622 • Fax: (805) 494-8861

www.sdcsecurity.com • E-mail: service@sdcsecurity.com


## SPECIAL APPLICATIONS POWER SUPPLY INSTALLATION INSTRUCTIONS

MODEL 602RF



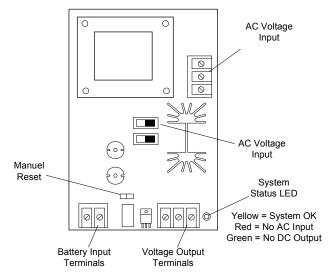


### COMPONENT LOCATIONS

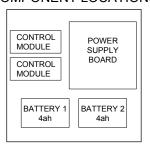

STANDARD BOX

MAIN SYSTEM ON-OFF OR FIRE PANEL CONNECTION

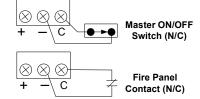

Min. Switch OR Contact Ratings 100mA @ 30vdc

Figure C

#### POWER SUPPLY SPECIFICATIONS

Input Voltage: 115/230 VAC @ 60hz Input Current: 0.8 amps Max.

Output Voltage: 12/24VDC (Special Applications)

Burglary Use:

**Output Voltage Ranges:** 

12 V Operation: 9.2 – 12.0 VDC 24 V Operation: 21.2 – 24.0 VDC

Output Current: 1.0 amps Ripple Voltage: 0.05 Volts Max

Battery Charger Max Current: 0.25 amps Maximum recommended battery size: 4ah (Replace batteries every three years)

To determine standby battery capacity, refer to Batter Discharge table (INST-BDT).

Compatible UL listed Fire Devices:

Smoke detector manufactured by ESL, Model 521B,


521BXT with Model 506 module.


Suitable Uses:

Electric Lock Power Supply
Access Control Power Supply
Burglar Alarm System Power Supply
Fire Protective Signaling Service

NOT INTENDED TO POWER A LOCAL BURGLAR ALARM INDICATING DEVICE.

**TEST UNIT YEARLY** 

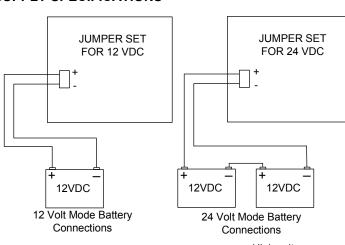

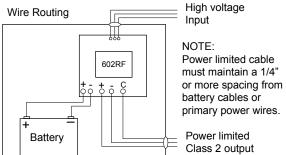




### **Security Door Controls** 801 Avenida Acaso, Camarillo, Ca. 93012

801 Avenida Acaso, Camarillo, Ca. 93012 (805) 494-0622 • Fax: (805) 494-8861 www.sdcsecurity.com • E-mail: service@sdcsecurity.com SPECIAL APPLICATIONS POWER SUPPLY INSTALLATION INSTRUCTIONS

MODEL 602RF-CUL

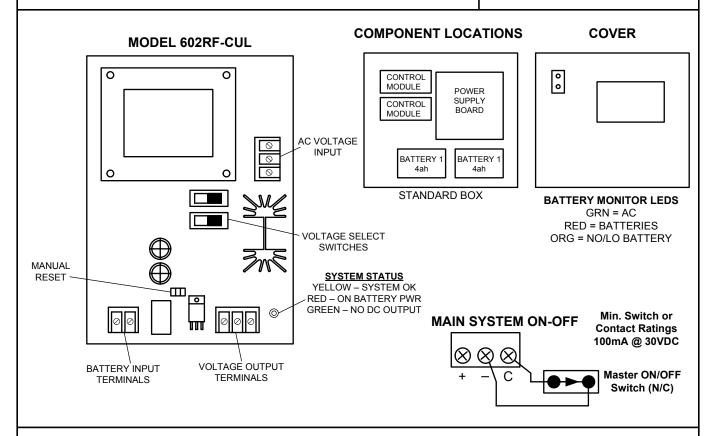



Input Voltage: 115 VAC @ 60hz Input Current: 0.8 amps Max.

Output Voltage: 12/24VDC (Special Applications)

Burglary Use:

Output Voltage Ranges:

12 V Operation: 9.2 – 12.0 VDC 24 V Operation: 21.2 – 24.0 VDC

Output Current: 1.0 amps Ripple Voltage: 0.05 Volts Max.

Battery Charger Max. Current: 0.25 amps Maximum recommended battery size: 4ah Recommended Battery: SDC Model RB12V4


(Replace batteries every 3 years)

To determine standby battery capacity refer to Battery Discharge Table (INST-BDT).

Suitable Uses:

Electric Lock Power Supply Access Control Power Supply

**TEST UNIT ANNUALLY** 

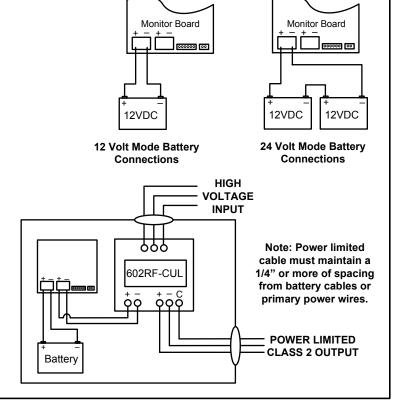



### INSTALLATION INSTRUCTIONS


### 12VR REGULATOR MODULE

The 12VR is a 12VDC, Regulated and Filtered Output Module. All SDC power supplies are field selectable for a single 12VDC or 24VDC output. The addition of the 12VR module enables simultaneous 12VDC and 24VDC output capability.

### **WIRING INSTRUCTIONS:**

Set the power supply output voltage to 24VDC. Use the output terminal of the power supply to provide power to locking devices or other components that require 24VDC to operate.

Connect the output terminal of the power supply to the 24V DC IN terminal of the 12VR module. Connect the Access Control or other devices that require 12VDC to operate to either the OUT1 or OUT2 terminal. The maximum combined load of both outputs of the 12VR must not exceed 1amp.

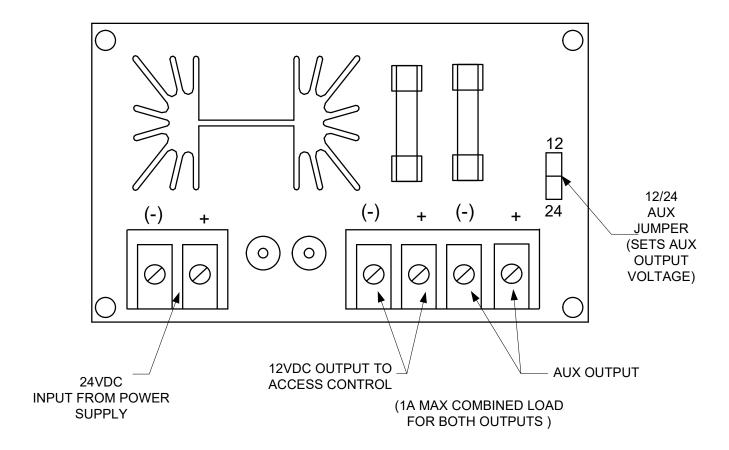

801 Avenida Acaso, Camarillo, Ca. 93012 • (805) 494-0622 • www.sdcsecurity.com • E-mail: service@sdcsecurity.com

# INSTALLATION WIRING DIAGRAM FB-4 and FB4DC FUSED TERMINAL BOARDS

The FB-4 provides four (4) individually fused outputs for modular system protection. A 2 amp fuse is supplied for each of the 4 fused outputs. Determine the load requirement for each output and change the fuse with a different rating as needed. The output voltage supplied to each output is the same as the voltage input. The total current required for all of the outputs must not exceed the power supply output current rating.

The FB4DC includes an integrated full wave bridge rectifier to allow the use of an AC transformer or a DC power supply to provide a DC output voltage.

