## CE FC

# 1/3 Inch CCD Day & Night 180x COLOR ZOOM CAMERA



## About this manual

Before installing and using the camera, please read this manual carefully. Be sure to keep it handy for later reference

## CONTENTS

- 1. Cautions
- 2. Precautions
- 3. Features
- 4. Components and Accessories
  - Package
  - Tripod Mounting
- 5. Overview
  - Rear View
- 6. Installation
  - . Connecting to Monitor
  - · Connecting to Power
  - . Connecting to Connection

## 7. Operating Camera

- On Screen Display(OSD)
- OSD Menu Configuration
- Menu Setup
  - LENS
  - EXPOSURE
  - WHITE BALANCE
  - BLC
  - DAY & NIGHT
  - IMAGE
  - SPECIAL
  - TITLE
  - PRIVACY
  - DISPLAY
- MOTION DETECT

  8. Communication Protocol
- 9. Specifications

## 1. Cautions



### CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER.SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol is intended to alert to user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert to user to the presence of important operating and maintenance(servicing) instructions in the literature accompanying the appliance

### INFORMATION

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

## WARNING

Any Changes or modifications in construction of this devices which are not expressly approved by the party responsible for compliance could void the authority to operate the equipment.

CAUTION: To prevent electric shock and risk of fire hazards:

- Do NOT use power sources except for that specified.
- Do NOT expose this appliance to rain or moisture.

## 1. Cautions



## Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

This product should not be mixed with other commercial wastes purchased this product, or their local government office, for details of where and how they can take item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract.

Household users should contact either the retailer where they for disposal.

## **A** NOTE

- A regulated DC12V 500mA power supply is recommended for use with this camera for the best picture and the most stable operation.
  - An unregulated power supply can cause damage to the camera. When unregulated power supply is applied, product warranty will be out of subject.
- It is recommended that the camera is used with a monitor that has a CCTV quality 75 video impedance level.
  - If your monitor is switched to high impedance then please adjust accordingly.
- Do not attempt to disassemble the camera to gain access to the internal components. Refer servicing to your dealer.
- Never face the camera towards the sun or any bright or reflective light, which may cause smear on the picture and possible damage to the CCD.
- 5. Do not remove the serial sticker for the warranty service.

## 2.Precautions

### Do not operate under extreme temperature conditions.

Using the camera in temperatures exceeding 50°C or below -10°C may lower image quality or cause the camera to malfunction.

#### Do not operate in high humidity environments.

Using the camera in places with high humidity may lessen picture quality because of moisture on the lens.

### Do not operate under unsteady lighting.

The camera will not work properly in places with great changes in illumination intensity, such as fluorescent lamps.

### Do not attempt to disassemble the camera.

### Do not drop the camera or subject it to physical shock.

It may damage the camera if dropped or subjected to strong impact.

#### Do not exposed to an intense light source such as direct sunlight It may damage the CCD.

### Do not exposed the camera to rain or other types of liquids.

It may damage the camera.

### Do not exposed the camera to radioactivity.

It may damage the CCD.

## A NOTE

- Exposure to a spotlight or an object emitting strong light may cause smear or blooming.
- Ensure that the power source complies with normal specifications before supplying it to the camera.

## 3. Features

#### 1/3 Inch Super HAD CCD

High resolution SONY 1/3 Inch Super HAD CCD II

with 380,000(NTSC) or 440,000(PAL) effective pixels, delivers an excellent signal-to-noise ratio, exceptional low-light performance, enhanced FOV, and high image quality.

The minimum illumination required is 0.1 Lux(Day Mode, ICR OFF)

#### 18x Optical Zoom

The Built-in 18x Optical zoom lens is a highly durable component. It features Auto Focus, Auto Iris and Zoom functions.

### SS-3 DSP Chip

SS-3 features a powerful SONY's DSP that can efficiently remove image noise, producing crisp and clear images even under low lighting conditions.

#### **High Resolution**

Featuring 550TV lines horizontal resolution in color mode and 570TV lines horizontal resolution in BW mode.

### Day & Night

The camera automatically determines whether it is night time or day time, selecting operating mode automatically. The camera operates in color mode during day light conditions and BW mode in night conditions for clearer identification.

## **Privacy Masking**

Privacy Zone masking protects private objects and areas. The camera sets up to 15 places per screen simultaneously.

### **Multi-Protocol**

Adopts various communications protocol, such as VISCA(SONY), LG, Pelco-D/P compatible. It enables the camera to be compatible with other equipment.

## 4. Components and Accessories

## **Package**








Mounting Tripod & Screw



18x Zoom Camera

## **Tripod Mounting Hole**

Used to install the camera on an optional tripod. The tripod must be equipped with screws with specifications shown on the right.

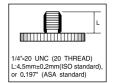

## **Tripod Mounting**




Attach the tripod to the camera. Use screws included in the package or their equivalent (less than 6mm). Otherwise, the bracket may not assemble to the camera properly.



## 5. Overview

#### Rear View

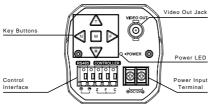

## **Key Buttons**

• Following buttons control zoom, focus, and auto focus functions.

W(WIDE) button: To widen the view. (ZOOM OUT)
T(TELE) button: To close in on a far object. (ZOOM IN)

N(NEAR) button: To see a near object clearly.

F(FAR) button : To see a far object clearly.

• Pressing the M(MENU) button prompts the main setup menu.

• Setup menu can be navigated using these buttons.

MENU(M) button : To access the main setup menu.
UP(T) button : To move the arrow indicator to up.

DOWN(W) button: To move the arrow indicator to down.

LEFT(N) button : To change date to down. RIGHT(F) button : To change date to up.

## 5. Overview

#### Control Interface

 Used to connect the remote control equipment. Includes the RS-485 communication pin. Zoom and focus functions can be controlled by using external signals.

### Power LED

· Illuminates when power is supplied.

## Video Output Jack


• Used to connect an external video monitor in jack.

## **Power Input Terminal**


• Power supply terminal(DC12V± 10%)

## **Connecting to Monitor**

• Connect Video Out Jack to the monitor's Video In Jack as shown below.

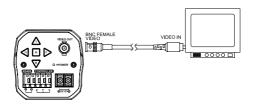

- Connection methods may vary depending on the video equipment. Please refer to the model specific instruction manual.
- Connect cables with the unit powered down. Set the  $75\Omega$  / Hi Z selection switch as shown below if you have an intermediate device.

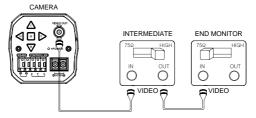

## Connecting to Power

Connect the power cable to the camera's power in as shown in the figure below



## Resistance of copper wire [at 20° (68°F)]

Copper wire size (AWG)	#24 (0.22mm)	#22 (0.33mm)	#20 (0.52mm)	#18 (0.83mr)
Resistance(Ω/m)	0.078	0.050	0.030	0.018
Voltage Drop(V/m)	0.028	0.018	0.011	0.006

- As the voltage drop according to the length of the cable in the above table, a camera may malfunction if there is an excessively long cable run.
- Voltage drops in the above table are variable according to types of cable manufacturer.


## A NOTE

- Connect the power once the installation is complete.
- When connecting to the power source, make sure the polarity of the power adapter is correct.
- Use a DC12V/500mA power source for the camera.


## Control Interfaces(Communication Control Connector)

The camera can be controlled by using external controllers like as the keyboard controller.(RS-485 Communication)


## Connecting PC or DVR (Serial Port)

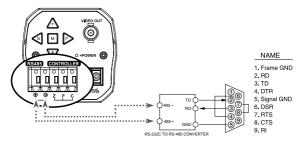

## Connecting to RS-485 Controller

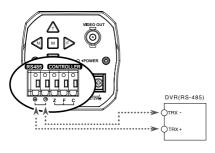


## **Connecting to External Controller**

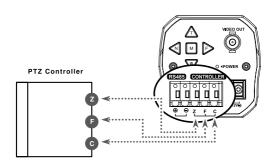


### Controller Function Table

FUNC.	FOCUS	ZOOM
TELE	COM	+6V
WIDE	COM	-6V
NEAR	+6V	COM
FAR	-6V	COM
MENU	+6V	+6V
STOP	COM	COM


## External D&N Input / Output

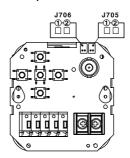

 It can be switched to DAY mode or NIGHT mode by receiving the signal from external light sensor or IR LED LAMP.
 when D&N Mode is set " EXTERNAL" on the OSD menu of the Camera.

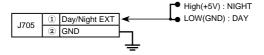



 It can be sent signal to other equipment like as IR LED lamp. In this case, IR LED lamp can turn on using this signal.

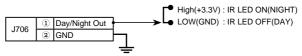

• This feature is available while using without case model.

## **OSD Menu Configuration**

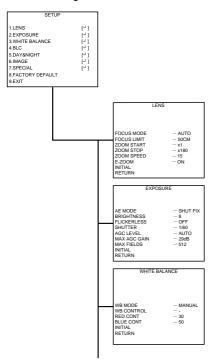

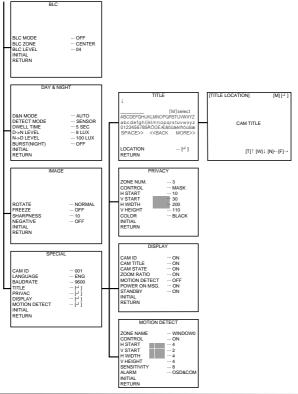

## On Screen Display






N	0	Function	Format	Description	
	1	Focus	ND	Focus Auto Mode	
				Focus Manual Mode or Focus Push Mode	
   <u> </u>			A • 🚱	In case of Focus Push Mode, while pushing the Focus Push Auto Key, Focus operats as Automode temporary	
STAT	2	Rotate	ND	Normal Image	
ST			<b>↔</b>	Horizontal Rotate	
₹			<b>‡</b>	Vertical Rotate	
CAMERA			<b></b>	Horizontal&Vertical(180°) Rotate	
	3	Backlight	ND	Backlight OFF	
				Backlight ON	

## On Screen Display

	4	WB	ND	Factory default	
			ATW	Auto Trace WB Mode	
			PwB	Push Auto Mode	
			lwB	Indoor WB Mode	
			OwB	Outdoor WB Mode	
			MwB	Manual WB Mode	
ш			AwB	Wide Range Trace Mode	
ΑT	(5)	Shutter Speed	ND	Normal Shutter (Automatic Shutter)	
RA ST			1/1 ~ 1/ 100000	Manual Shutter High Shutter 1/50(60) ~1/100000 Slow Shutter 1/1 ~ 1/25(30)	
CAME			FL	Flicker Free Mode (1/120(100))	
ပြ	(6)	Freeze	ND	Normal (live) Image	
			FZ	Still Image	
		Night shot	ND	Day State (ICR OFF)	
	7		☆	Night Shot State (Removed the IR cut filter, ICR ON)	
	8	Motion Detect Message	ND	Normal Image	
			MD	Motion is detected	
	9 Title		******	Title (Max. 10 characters), This position is adjustable (default : Left bottom side)	
10		Zoom Ratio	x1~Dx180	Optical(x1 ~ x18), Digital(Dx18~Dx180)	
		Camera ID   ID:000 ~   ID:255		Camera Identification Number	
(	12)	Standby	STANDBY	Stand-by Mode	
(	13)	Power On Msg	-	Informs the camera system settings. It is displayed for 2 seconds after power on.	

## Menu Setup

Use the five buttons on back of the camera.

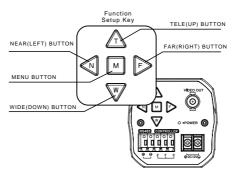

- 1. Press the MENU button to access the main setup mode.
  - Main setup menu is displayed on the monitor screen.
  - The Menu consists of the "Main-Menu" and "Sub-Menu"



- 2. Select the desired feature using the TELE and WIDE button.
  - Each pressing of the TELE or WIDE button moves the indicator to the next or previous feature.

## Menu Setup

- 3. Select the desired feature using the TELE and WIDE button.
  - The indicator moves up and down in the main menu feature.
  - · Move the arrow indicator to the desired feature.



- Change the status of the selected feature using the NEAR and FAR button
  - Pressing the NEAR/FAR button, the sub-menu is displayed.
  - Press the TELE/WIDE button to move up and down the sub-menu.
     category and set each category by pressing the NEAR/FAR button.
  - When completed, move the arrow indicator to "RETURN" and press the NEAR/FAR button.



- Press the MENU button at the main-menu or sub-menu screen to hide the menu.
  - It does not apply when the MENU button is used for other uses.
- 6. FACTORY DEFAULT
  - All menu will be initialized except for the Camera ID

### Sub-Menu: LENS



#### 1. FOCUS MODE

- AUTO : Focus is automatically adjusted with moving zoom.
- MANUAL: Focus can be manually adjusted, independent of moving zoom.

#### 2. FOCUS LIMIT

- Minimum distance the camera can focus.
   ex) 50 cm: Subjects closer than 50 cm cannot be brought into focus.
- 1CM/10CM/50CM/1M/2M/3M/5M/10M/INF

#### 3. ZOOM START

- · Configure zoom start ratio.
- Can be set from x1 to x18.

## 4. ZOOM STOP

- Configure zoom stop ratio.
- Can be set from x1 to x180.

#### 5. ZOOM SPEED

- · Configure zoom tracing speed.
- V-FAST(2.8sec)/ FAST(3.4sec)/ NORMAL(4.0sec)/SLOW(6.5sec)

#### 6. E-ZOOM

- · Configure digital zoom function.
- ON : Enable Digital Zoom
- OFF: Disable Digital Zoom

- Initializes the changed category in LENS menu.
- Press the NEAR/FAR button to confirm.

### Sub-Menu: EXPOSURE



#### 1. AE MODE

• AUTO : Automatic mode. Exposure is controlled by Shutter, Iris & Gain.

• SHUT FIX : Shutter priority mode. Exposure is controlled by Iris & Gain.

• AGC FIX : Gain priority mode. Exposure is controlled by Shutter & Iris.

• MANUAL : Manual mode.

#### 2. BRIGHTNESS

• Use this function to adjust image brightness.

• Can be adjusted from 0(dark) to 15 (Bright).

### 3. FLICKERLESS

· Flicker correction mode.

### 4. SHUTTER

- Can be changed while in MANUAL and SHUT FIX mode.
- Shutter speed can be changed from 1/1 to 1/100,000s.
- Standard shutter speed: NTSC 1/60. PAL 1/50.

#### 5. AGC LEVEL

- For brighter images, set to the desired value.
- Can be changed from OFF to 36dB while in AGC FIX and MANUAL mode.

#### 6. AGC LEVEL

- · Adjusts the maximum gain mode.
- OFF, LOW, MID, HIGH, SUPER

#### 7. MAX FIELDS

- · Adjusts the maximum accumulation fields.
- Can be changed from OFF to 128FLD.

#### 8. INITIAL

- Initializes the changed category in EXPOSURE menu.
- Press the NEAR/FAR button to confirm.

#### Control table with AE mode

	Auto	Shutter Fix	AGC Fix	Manual
BRIGHTNESS	0	0	0	Х
FLICKERLESS	0	0	0	0
SHUTTER	Х	0	Х	0
AGC LEVEL	Х	Х	0	0
AGC MAX GAIN	0	O(*)	0	Х
MAX FIELD	0	Х	0	Х

(\*)The AGC MAX GAIN will be write-protected if the shutter is slow shutter mode.

#### Sub-Menu: WHITE BALANCE



#### 1. WB MODE

• ATW : When color temperature is 2400° K~12000 K°, select this mode.

• INDOOR : Set color temperature to be 3200°K.

• OUTDOOR : Set color temperature to be 5800°K.

PUSH : Color will be automatically adjusted while the MENU button is pressed in the temporary automatic mode.

• MANUAL : Can increase or decrease the red or blue value while monitoring

the difference on the screen.

AWB : The white balance is automatically adjusted in a specific

environment.

#### 2. WB CONTROL

- · Indicates the condition of each WB mode.
- ' ' no operation

#### 3. RED CONT

- · Can be changed in MANUAL mode only.
- Can be set from 0 to 255.

### 4. BLUE CONT

- · Can be changed in MANUAL mode only.
- Can be set from 0 to 255.

- Initializes the changed category in WHITE BALANCE menu.
- · Press the NEAR/FAR button to confirm.

### Sub-Menu: BLC



#### 1. BLC MODE

· Compensates for scenes with "BACKLIGHT"conditions.

#### 2. BLC ZONE

- Sets backlight compensation weighting zone(BLC ON mode).
- Can be selected CENTER, TOP, BOTTOM, LEFT, RIGHT.

#### 3. BLC LEVEL

- Sets backlight compensation weighting value(BLC ON mode).
- Can be adjusted from 0 to 15.

- · Initializes the changed category in BLC menu.
- . Press the NEAR/FAR button to confirm.

## Sub-Menu: DAY & NIGHT



#### 1. D&N MODE

- · Select desired operation mode.
- COLOR : Day fix mode.
- BW : Night fix mode.
  - AUTO : Automatically changes COLOR/BW mode according to illuminance.
- EXTERNAL : Changes COLOR/BW mode according to external input signal.
- B/W(HIGH, +5V) COLOR(LOW, GND)

#### 2. DETECT MODE

- SENSOR: Detect lighting conditions by photo-sensor.
- VIDEO : Detect lighting conditions by video level.
- AUTO : Automatically detect lighting conditions by photo-sensor & video level.

Sets up the level higher while installing into the outdoor housing.

#### 3. DWELL TIME

- Sets conversion time of IR cut filter while in automatic mode.
- Can be adjusted from 0 sec to 10 sec.

## 4. D→N LEVEL

- Sets turnover level from COLOR to BW while in AUTO Mode.
- Can be adjusted from 1 Lux to 90 Lux.
- It can be adjusted under sets SENSOR mode.
   Sets up the level higher while installing into the outdoor housing.

#### 5. N→D LEVEL

- Sets turnover level from BW to COLOR while in AUTO Mode.
- Can be adjusted from 3 Lux to 100 Lux.
- It can be adjusted under sets SENSOR mode.

## 6. BURST(NIGHT)

• Select the burst signal ON/OFF when NIGHT(ICR ON) mode.

- Initializes the changed category in DAY & NIGHT menu.
- · Press the NEAR/FAR button to confirm.

### Sub-Menu: IMAGE



#### 1. ROTATE

· NORMAL : Normal image.

• H : Use this feature to horizontally inverse the screen.

• V : Use this feature to vertically inverse the screen.

• H/V : Use this feature to horizontally & vertically inverse the screen.

#### 2. FREEZE

· Use this feature to freeze capture an image.

#### 3. SHARPNESS

• Increasing this value sharpens object edges.

Too high of a setting, produces noise and may obscure the image.

Can be adjusted from 0(blunt image) to 15(sharp image).

### 4. NEGATIVE

- · Select enables or disables negative image feature.
- · Positive image is a normal image.

- Initializes the changed category in IMAGE menu.
- Press the NEAR/FAR button to confirm.

### Sub-Menu: SPECIAL



#### 1. CAM ID

. Assign an identification number to the camera (0 to 255).

#### 2. LANGUAGE

- Displays language can be selected from ENG/CHI/RUS/SPN/GER.
- Language for OSD(English, Chinese, Russian, Spanish, German)

#### 3. BAUDRATE

- Configure baud rate from 2400/4800/9600/19200/38400 bps.
- · Serial communication speed (bps)

#### 4. TITLE

 Use this feature to designate a name for the camera, which will display on the monitor screen.

#### 5. PRIVACY

• Use this feature to mask privacy area, which will display on the monitor screen.

### 6. DISPLAY

• Use this feature to display the Function-OSD on the screen.

#### 7. MOTION DETECT

• Use this feature to alert signal upon detecting motion.

- Initializes the changed category in SPECIAL menu.
- · Press the NEAR/FAR button to confirm.
- The CAM ID does not initialized.

### SPECIAL Sub-Menu: TITLE



- Move the cursor to the character entry field using the NEAR or FAR button.
- 2. Use TELE, WIDE, NEAR, and FAR buttons to select a desired character.
- Press the MENU button to confirm selection of the blinking character. Then the character is saved, and the cursor in the entry field moves to the next position.
- 4. You can choose up to 156 characters from the table.



## Symbols

	$\downarrow$	Selected position in the entry field
	"A"~"æ"	Normal character
	SPACE>>	Insert space " "character
ſ	< <back< td=""><td>Selected position moves to left in the entry field</td></back<>	Selected position moves to left in the entry field
	MORE>>	Displays another characters.

### SPECIAL Sub-Menu: TITLE


### 5. You can select on screen position of the TITLE.

- Move the cursor to "LOCATION" and press NEAR/FAR button.
- The TITLE is displayed on the top-left of the monitor screen.
- Select the position using the TELE/WIDE/NEAR/FAR button.
- Press the MENU button to confirm the position and exit this menu.



When completed, move the cursor to "RETURN" and press NEAR/FAR button.

#### SPECIAL Sub-Menu : PRIVACY

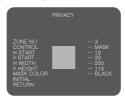

#### 1. ZONE NO

Select the privacy mask zone number(1 ~ 15).

### 2. CONTROL

- · Select desired masking effect.
- OFF: disable privacy zone as mask or mosaic.
- . MASK: enable privacy zone as mask.
- MOSAIC: enable privacy zone as mosaic.

#### 3. H START

• Set the horizontal starting point of privacy zone(0 ~ 180).

### 4. V START

• Set the vertical starting point of privacy zone(0 ~ 140).

#### 5. H WIDTH

• Set the width of privacy zone(0 ~ 220).

#### 6. V HEIGHT

Set the height of privacy zone(0 ~ 180).

#### 7. MASK COLOR

- Configure desired mask color(not mosaic).
- Up to eight different colors are supported.
   BLACK/BLUE/RED/GREEN/YELLOW/GRAY1/GRAY2/WHITE

- · Initializes the changed category in PRIVACY menu.
- Press the NEAR/FAR button to confirm.

### SPECIAL Sub-Menu: DISPLAY



Use this feature to display the Function-OSD on the screen.

1. CAM ID : Displays camera ID on (1) of the screen.

2. CAM TITLE : Displays camera title on (9) of the screen.

3. CAM STATE : Displays camera state on ① ~ ⑦ of the screen.

4. ZOOM RATIO : Displays zoom ratio on (1) of the screen.

5. MOTION MSG(MD): Displays MD character on ® of the screen, when

the motion is detected.

6. STANDBY : Displays system waiting message on ② of the screen,

when power on.

7. POWER ON MSG : Displays system information on ③ of the screen,

when power on.

8. INITIAL


• Initializes the changed category in SPECIAL menu.

• Press the NEAR/FAR button to confirm.



18x Zoom System NTSC (A-01) RS485 Interface 9600bps

#### SPECIAL Sub-Menu: MOTION DETECT

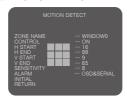

When there is a movement in the monitoring area, there will be an alarm, or the user will be informed through communications or "MD" will display on the screen.

#### 1. ZONE NAME

- Select the motion detection area number.
- Use the mask displayed on the screen to set positions.
- Can be selected WINDOW0~3 or BLOCK.

#### 2. CONTROL

Select enables or disables the motion detection feature

#### 3. H START

- Set the horizontal starting point for motion detection area.
  - Select desired position from 11 to 178 in WINDOW0~3.
  - Select desired position from 0 to 11 in BLOCK.

### 4. H END

- Set the horizontal terminating point for motion detection area.
- Select desired position from 11 to 178 in WINDOW0~3.
- Select desired position from 0 to 11 in BLOCK.

#### 5. V START

- Set the vertical starting point for motion detection area.
- Select desired position from 6 to 128 in WINDOW0~3.
- Select desired position from 0 to 7 in BLOCK.

### SPECIAL Sub-Menu: MOTION DETECT

#### 6. V END

- · Set the vertical starting point for motion detection area.
- Select desired position from 6 to 128 in WINDOW0~3.
- Select desired position from 0 to 7 in BLOCK.

#### 7. SENSITIVITY

- · Increase or decrease detection sensitivity value.
- Can be set from 1 (low response) to 15 (sensitive).

#### 8. ALARM


- Select desired alert type.
- SD : The WINDOW or BLOCK will be displayed on the screen when motion is detected.
- SERIAL : Alert packet is transmitted via RS-485 when motion is detected.
- OSD&SERIAL : Use OSD and SERIAL feature simultaneously.

- Initializes the changed category in MOTION DETECT menu.
- · Press the NEAR/FAR button to confirm.

## 8. Communication Protocol

### Pelco"D" Compatable Protocol Commands

Most widely used Commands

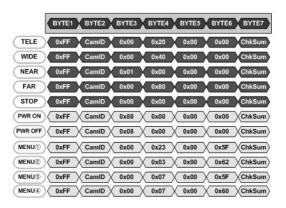


- MENU②: V/D Keyboard Menu On/Off [Set Preset + 98(=0x62)]
- MENU(3)(4): Another Menu On/Off
  [ Go To Preset + 95(=0x5F) or 96(=0x60 ]
- ※ CamID: 0x00 ~ 0xFF
- ChkSum : The Check Sum is the 8 bit (modulo256) sum of the payload bytes
   (BYTE2-BYTE6) in the command.

## 8. Communication Protocol

#### **Default Protocol Commands**

Most widely used Commands

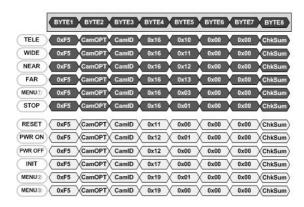

- CamID: 0x00 ~ 0xFF
- CamOPT: 0xF0 ~ 0xFF, 0xF0 (default, broadcasting), 0xF8(ID check),
- ChkSum : The Check Sum is the 8 bit (modulo256) sum of the payload bytes
   (BYTE1-BYTE7) in the command.

### A NOTE

• The camera can be controlled by VISCA(SONY), LG, Pelco-P Compatable Protocol. For more detailed informations refer to their manuals.

## 9.Specifications

Model		High Res. Zoom		
Signal System		NTSC PAL		
	Image Sensor	1/3 Inch SONY Super HAD CCD II		
CCD	Total Pixels	811(H) x 508(V)	795(H) x 596(V)	
	Effective Pixels	768(H) x 494(V)	752(H) x 582(V)	
	Lens	18x, f=4.7~84.6	mm(F1.6 ~F2.8)	
	Min. Focus Distance	0.0	l1m	
Optics	Digital Zoom	1x ~	- 10x	
	Angle Field of View	Diagonal : 67.3 degrees(V	Nide) to 4.0 degrees(Tele)	
	Scanning System	2:1 Int	terlace	
Sync.	Sync. System	Inte	ernal	
	Frequency	H:15.734 KHz V:59.94 Hz	H:15.625KHz V:50 Hz	
	Horizontal Resolution	550 T\	/ Lines	
	Camera Title	Off/On(Displaye	d 10 characters)	
	Camera ID	256 ID S	electable	
	Video Output	CVBS: 1.	0Vp-p/75Ω	
	S/N Ratio	More than 50dB (/	AGC Off, DSS Off)	
	Min. Illumination	0.1 Lux : Color, 0.03 Lux : BW (30 IRI	E @ Wide End, AGC Super, DSS Off)	
	Backlight Compensation	Off/On(Level Adjusta	ible, Area Selectable)	
	Mechanical D&N	AUTO / COLOR / B/W / EXTERNAL		
	Gain Control	Off / Low / Mid / High / Super		
	White Balance	ATW / INDOOR / OUTDOOR / PUSH AUTO / MANUAL(R Gain, B Gain) / AWB		
Electrical	Electronic Shutter	1/60 ~ 1/100,000 sec	1/50 ~ 1/100,000 sec	
Licotiioai	Digital Slow Shutter	Off, 2 ~	128 Field	
	Flickerless	Off / On		
	Motion Detection	5 Zc	ones	
	OSD	Bui	lt-in	
	Focus	Auto / Manual / Push		
	Zoom Tracking Speed	2.8 Sec : V	Vide to Tele	
	Lens Initialize	Support		
	Zoom/Focus Preset	512 internal	128 external	
	Privacy Function	15 Z	ones	
	E-Flip	Off, Horizontal, Vertica	al, Horizontal / Vertical	
	Freeze	Off	/ On	
		RS-485(2400bps, 4800bps, 9600bps, 19200bps, 38400bps Selectable)		
Communication	Serial Control	Pelco-D/P, VISCA, LG compatible and Our own protocol Available		
	Voltage Control	External Control by Voltage (ZOOM, FOCUS)		
	Input Voltage	DC 12V	/(±10%)	
Power	Input Current	Max. 3	300mA	
Operating Temperature/Humidity		-10°C to +50°C / 30% to 90% RH		
Dimension		67mm X 67mm X 124mm		