

INSTALLATION INSTRUCTIONS

ELECTRONIC OIL IGNITER • 12 VDC

SPECIFICATIONS:

Input Voltage: 10.8 - 16 Vdc

Output Voltage: 20 kV peak

Output Current: 25 mA RMS

Input Current: 1.8A

Ambient Operating Temperature: -40 to +150° F

Storage Temperature: -40 to +150° F

Moisture: 5 to 95% Relative Humidity, Condensing

APPLICATION INFORMATION:

- This igniter is designed for use with 12 VDC.
- It is rated for continuous duty and can be used with intermittent, or interrupted ignition primary controls.
- The Beckett oil igniter is designed to mount in the same manner as standard ignition transformers and igniters.
- This igniter can be adapted to multiple base plates to accommodate Beckett ADC & SDC burners. It will also fit on many other vendors' transformer base plates.

CAUTION! *Do not use this igniter beyond its design specifications. Improper operation and igniter failure may result.*

Table 1 - Complete Igniter Base Plate Assemblies

Part No.	Burner Models
5218301U	Beckett ADC 12 Vdc
5218303U	Beckett SDC 12 Vdc
5218307U	Wayne 'M' Models for 12 Vdc
5218305U	Wayne 'E' Models for 12 Vdc
5218309U	Igniter Only



WARNING

Electrical Shock Hazard



Electrical shock can cause severe personal injury or death.

- Disconnect all electrical power to the burner before servicing. More than one disconnect switch may be in the supply circuit.
- Installation and service must only be performed by a qualified service technician.
- Remove all jewelry, such as rings and watches before servicing.
- Provide ground wiring to the burner, metal control enclosures and accessories. (This may also be required to aid proper control system operation).

Installation Instructions:

(If base plate is already installed, skip to step number 9)

1. Locate the igniter input leads.
2. Install the 32743 igniter gasket, if required, and route the leads through the appropriate base plate lead exit hole. Make sure these leads are not being crushed.
3. Mount the igniter flush to base plate with the mounting screws supplied.

4. Note: Use #6 x 7/16" screws when using the bottom mounting holes. Use #10 thread forming paint scraping screws, if using the two top mounting holes for 5218301 & 5218302.
5. Tighten all screws securely.
6. Install the barrier and base plate gaskets for Beckett Model ADC only.
7. Use gaskets for other burner models, as required by the manufacturer.
8. Use of top mounting screws is possible for Beckett Models ADC and SDC.
9. Mount the assembled unit to the burner using the screws supplied.
10. Use "paint scraping" screws for all burners (2 at the hinge and 2 for non-hinged base plates). Tighten these screws securely to provide effective grounding to burner housing.
11. Verify the burner is properly grounded.
12. Install the cad cell if applicable. Carefully route the igniter input and cad cell leads to prevent them from being pinched during closing.

13. Constant Duty Ignition - Without Primary Control

- Carefully follow the equipment manufacturer's wiring instructions and diagrams. Connect the Black lead to 12 Vdc circuit Ground (-).
- Connect the Blue-White and solid White leads together and wire to 12 Vdc circuit (+), parallel with burner motor.
- The Yellow leads from the igniter will not be used and shall be wire nuted individually and placed in the housing wiring compartment.

14. Interrupted Ignition - Without Primary Control

- Carefully follow the equipment manufacturer's wiring instructions and diagrams.
- Connect the Black lead to 12 Vdc (-) circuit Ground.
- Connect the solid White lead to the 12 Vdc (+) circuit, downstream of limit/operating controls and parallel with the burner solenoid valve.
- Connect the Blue-White lead to 12 Vdc (+) circuit, parallel with burner motor.
- Connect the Yellow leads from the igniter to the Yellow Cad Cell leads with the wire nuts.

15. Wiring Igniter to GeniSys 12 Vdc Primary Control

- Carefully follow the control, or equipment manufacturer's wiring instructions and diagrams.
- Fasten cad cell leads to control CAD CELL spade terminals.
- Attach the Black lead with insulated flag terminal to the primary control GND (IGN) spade terminal.
- Combine the Blue-White striped and solid White leads and jumpers, and attach its insulated flag terminal to the primary control IGNITER spade terminal.

Continued on Reverse ►

◀ Continued from Previous Page

16. The Yellow leads from the igniter will NOT be used and shall be wire nipped individually and placed in the housing wiring compartment.
17. Verify the igniter secondary output terminals are correctly arranged to make good electrical contact with the oil burner electrodes.
18. Close the igniter. Install and securely tighten the two front base plate retaining screws (4 screws, if no hinge).
19. Reconnect electric power to the burner circuit.
20. Verify with instruments that the burner is adjusted to the manufacturer's recommended settings
21. Cycle the burner several times to verify prompt and smooth ignition. Verify proper operating and limit control operation before leaving.

Figure 1 - Igniter Assembly Components (5218301U shown. Other models will have different baseplates and terminals.)



Table 2 - Igniter Base Plate Bill of Materials

Part No.	Burner Models	Baseplate Gasket	Baseplate	Igniter Gasket	Barrier Gasket
5218301U	Beckett ADC 12 Vdc	31405	51780BK	32743	32301*
5218303U	Beckett SDC 12 Vdc	31481	51855BK	32743	n/a
5218307U	Wayne 'M' Models for 12 Vdc	n/a	51899BK	n/a	n/a
5218305U	Wayne 'E' Models for 12 Vdc	n/a	21847	n/a	n/a

* 32301 Barrier Gasket is used only on Beckett Model ADC.

R.W. BECKETT CORPORATION
P.O. Box 1289, Elyria, Ohio 44036


R.W. BECKETT CANADA, LTD
430 Laird, Unit 3, Guelph, Ontario, N1G 3X7

Beckett
POWERLIGHT™
12 Vdc Oil Igniter


7556 Primary Control

Notes: 7556 Primary Control


1. Wires are to be sized to prevent a voltage drop between the battery and the burner with the burner running at full load.
2. Fuse Sizes (inside control) 30 Amp. = Motor. 10 Amp = Igniter, Control, Valve, & Alarm.
3. Hard-wire burner ground to battery. Do NOT use chassis ground system.
4. Input power to the control's +12 Volt wire shall be provided from a fused service switch, rated at 50 amps or less.
5. Motor-off delay on a 7556P will be disabled if the safety and operating limits interrupt power to the control's red +12 Volt wire.
6. Do not wire power directly to the burner motor. Always wire the motor to the primary control "motor" terminals. If instant burner heat is required by the application, purchase or program a control with a long motor-off delay time, which will ensure instant heat if a new call for heat is received within the motor-off delay time.
7. Igniter Yellow leads are capped and not used. Bundle with the other leads in the wiring box with a cable tie.
8. The igniter Blue-White striped and solid White leads are combined with the jumper and attached to the primary control igniter spade terminal.

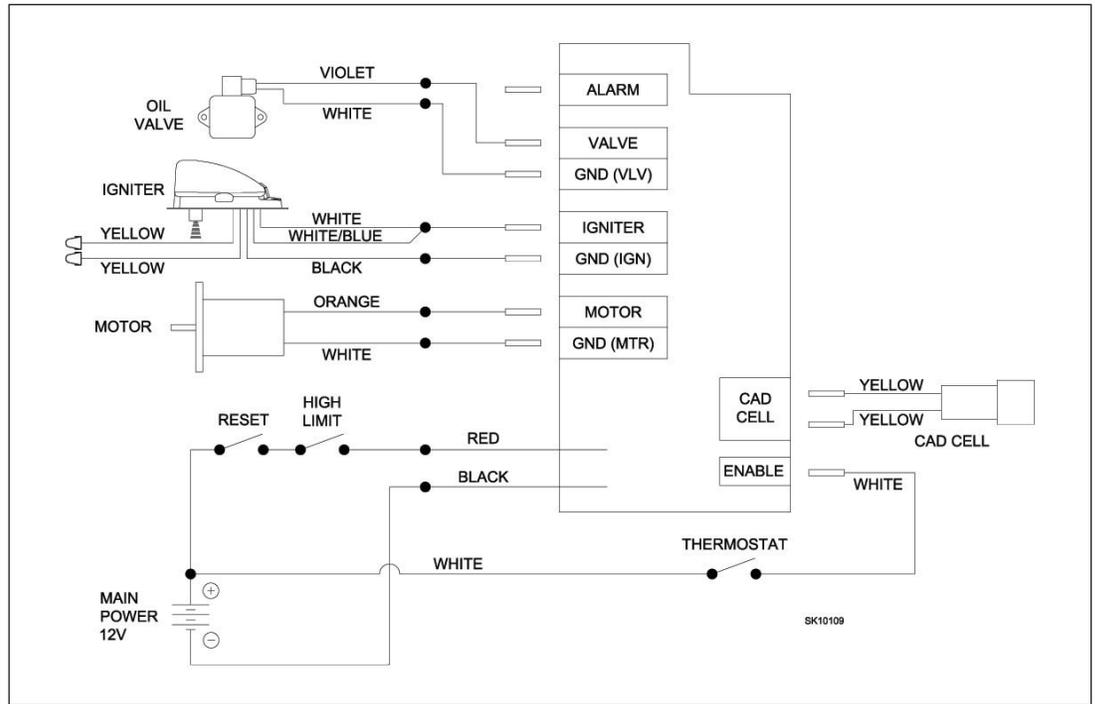

7434 Primary Control

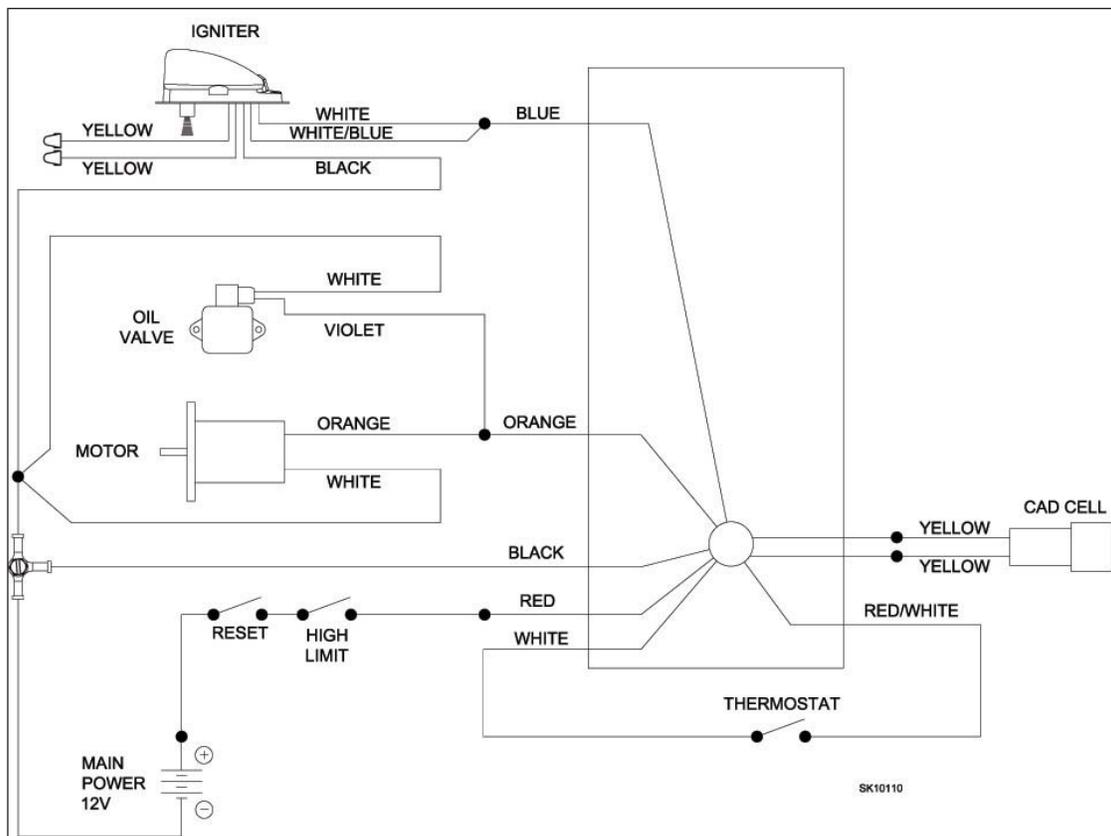

Intermittent Ignition - Without Burner Primary Control

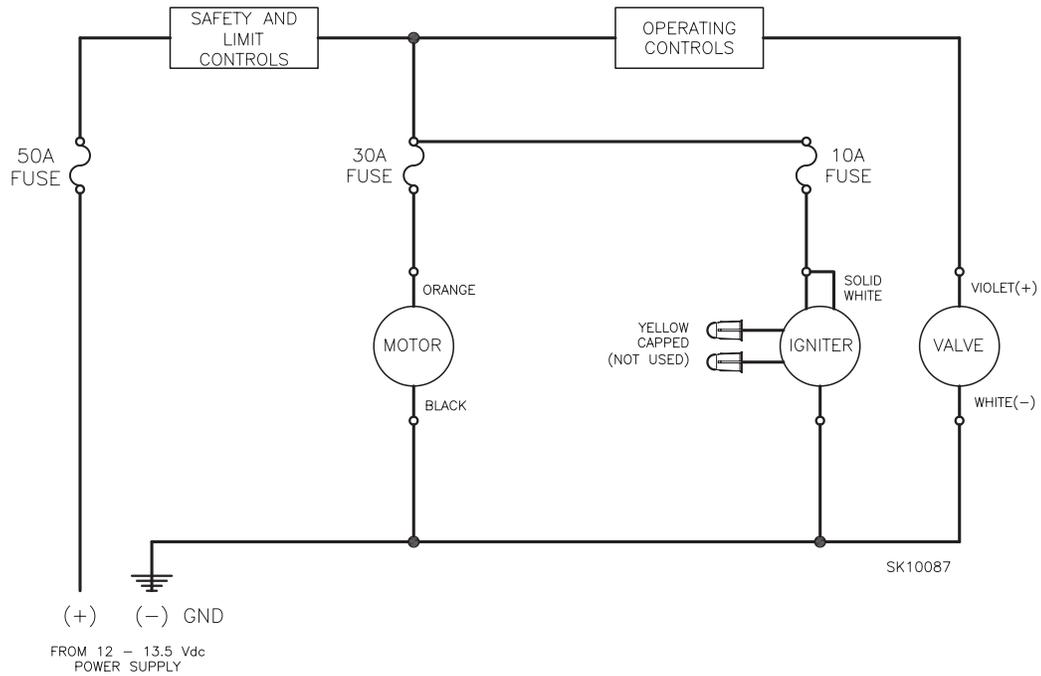

Interrupted Ignition - Without Burner Primary Control

