



## LED..A62X62M Series Area Lights

LED Area Lights for use with PresencePLUS® P4 sensors



Red or Infrared LED models

White, Green, or Blue LED models

### Features

- Low-cost, compact area lights for PresencePLUS® P4 sensor. See Banner's Web site ([www.bannerengineering.com](http://www.bannerengineering.com)) for a complete lighting tutorial.
- Continuous or strobed operation is selectable via sensor software.
- Solid-state LED matrix
- Direct connection to PresencePLUS P4
- Two bracket options available

### Models

Models	Color	Ambient Light Filter Kit	Polarizing Filter Kit
LEDIA62X62M	Infrared, 940 nm	FLTI (included with IR lights)	—
LEDRA62X62M	Visible Red, 630 nm	FLTR (included with LEDAPFKS)	LEDAPFKS
LEDWA62X62M	White, All Visible	FLTB or FLTG	
LEDBA62X62M	Blue, 464 to 475 nm	FLTB	
LEDGA62X62M	Green, 520 to 540 nm	FLTG	

### Specifications

<b>Light Source</b>	LED, see Models table above for wave lengths
<b>Illumination</b>	High-intensity area light
<b>Supply Voltage and Current</b>	Voltage supplied by PresencePLUS P4 sensors, if operating at 24V dc (see sensor manual). <b>Infrared:</b> 24V dc @ 150 mA max. <b>All other colors:</b> 24V dc @ 200 mA max.
<b>Connections</b>	2 m (6.5') attached pigtail with 3-wire, 8 mm male Pico-style connector
<b>Construction</b>	Low-carbon steel with black zinc plating, acrylic window
<b>Useful Life</b>	10,000 hours (LED ON time). When operated within specifications, output will decrease less than 30% after 10,000 hours and less than 50% (less than 40% for red and IR models) after 20,000 hours.
<b>Operating Conditions</b>	<b>Temperature:</b> 0° to +50°C (+32° to 122°F) <b>Relative humidity:</b> 90% at 50°C (non-condensing) max.
<b>Cleaning Instructions</b>	Regularly remove any dust, dirt, or fingerprints from the light source. 1. Blow off dust using anti-static compressed air. 2. If necessary, use a lens cloth and lens cleaner or window cleaner to wipe off remaining debris. Do not use any other chemicals for cleaning.

# LED..A62X62M Series Area Lights

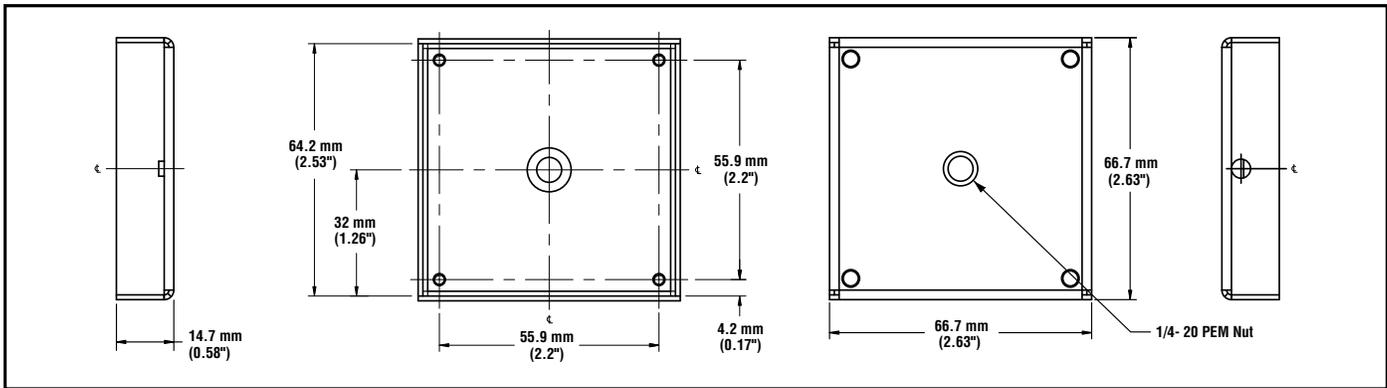


Figure 1. Area light dimensions

## Installing the Area Light

**NOTE:** Before installing this area light it is recommended that an ambient light filter be installed behind the lens. The filter improves image quality by reducing unwanted ambient light.


### Sensing Shiny Surfaces

To eliminate direct reflections without using polarizing filters, angle the sensor approximately 15° (or more) from perpendicular to a shiny surface.

### Polarizing Kit

If it is necessary to mount the camera at a 90° angle to a shiny surface, the polarizing filter kit provides filters for both the LED area light and sensor to reduce the negative effects of strong, direct light reflections. The red filter kit (FLTR) is included with the polarizing kit. When light colors other than red are used, discard the red filter in the polarizing kit and use the proper filter listed on page 1. The polarizing filters reduce the amount of light returned to the sensor.

## Mounting Brackets

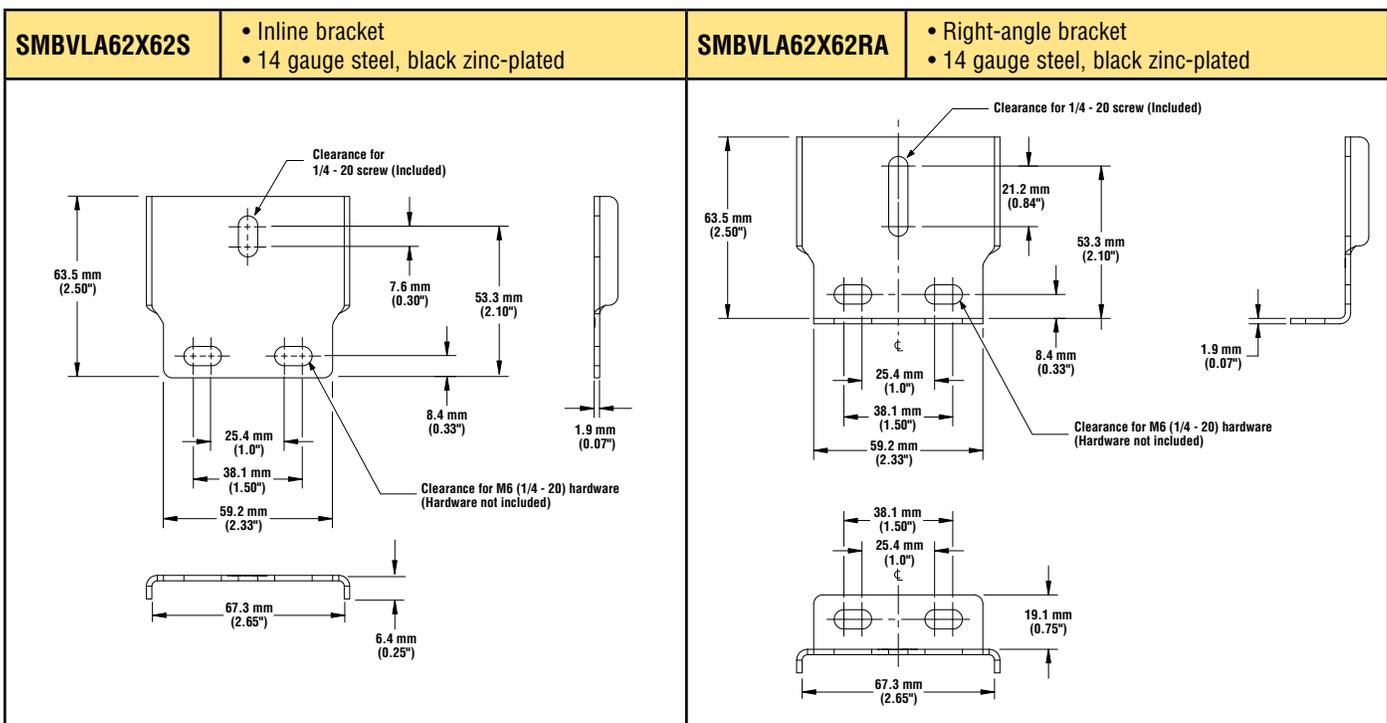

**WARRANTY:** Banner Engineering Corp. warrants its products to be free from defects for one year. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture found to be defective at the time it is returned to the factory during the warranty period. This warranty does not cover damage or liability for the improper application of Banner products. This warranty is in lieu of any other warranty either expressed or implied.